3-C-178

# 1952B
# Universal Counter-Timer

Instruction Manual

FLUKE®

# 1952B
# Universal Counter-Timer

## Instruction Manual

P/N 390054
December 1975

FLUKE®

# WARRANTY

Notwithstanding any provision of any agreement the following warranty is exclusive:

The JOHN FLUKE MFG. CO., INC., warrants each instrument it manufactures to be free from defects in material and workmanship under normal use and service for the period of 1-year from date of purchase. This warranty extends only to the original purchaser. This warranty shall not apply to fuses, disposable batteries (rechargeable type batteries are warranted for 90-days), or any product or parts which have been subject to misuse, neglect, accident, or abnormal conditions of operations.

In the event of failure of a product covered by this warranty, John Fluke Mfg. Co., Inc., will repair and calibrate an instrument returned to an authorized Service Facility within 1 year of the original purchase; provided the warrantor's examination discloses to its satisfaction that the product was defective. The warrantor may, at its option, replace the product in lieu of repair. With regard to any instrument returned within 1 year of the original purchase, said repairs or replacement will be made without charge. If the failure has been caused by misuse, neglect, accident, or abnormal conditions of operations, repairs will be billed at a nominal cost. In such case, an estimate will be submitted before work is started, if requested.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. JOHN FLUKE MFG. CO., INC., SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

**If any failure occurs, the following steps should be taken:**

1. Notify the JOHN FLUKE MFG. CO., INC., or nearest Service facility, giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data, or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument, transportation prepaid. Repairs will be made at the Service Facility and the instrument returned, transportation prepaid.

**SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT**

All shipments of JOHN FLUKE MFG. CO., INC., instruments should be made via United Parcel Service or "Best Way" prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

**CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL PURCHASER**

The instrument should be thoroughly inspected immediately upon original delivery to purchaser. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument is damaged in any way, a claim should be filed with the carrier immediately. (To obtain a quotation to repair shipment damage, contact the nearest Fluke Technical Center.) Final claim and negotiations with the carrier must be completed by the customer.

The JOHN FLUKE MFG. CO., INC, will be happy to answer all applications or use questions, which will enhance your use of this instrument. Please address your requests or correspondence to: JOHN FLUKE MFG. CO., INC., P.O. BOX 43210, MOUNTLAKE TERRACE, WASHINGTON 98043, ATTN: Sales Dept. For European Customers: Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands.

*For European customers, Air Freight prepaid.

**John Fluke Mfg. Co., Inc., P.O. Box 43210, Mountlake Terrace, Washington 98043**

Rev. 4/80

# Change/Errata Information

**Issue No:** 4 6/79

This change/errata contains information necessary to ensure the accuracy of the following manual. Enter the corrections in the manual if either one of the following conditions exist:

1. The instrument's pcb revision letter is equal to or higher than that which is indicated at the beginning of the change.

2. No revision letter is indicated at the beginning of the change/errata.

## MANUAL

**Title:** 1952B UNIVERSAL COUNTER–TIMER

**Print Date:** DECEMBER 1975

**Rev and Date:** _____

**C/E PAGE EFFECTIVITY**

| Page No. | Print Date |
|---|---|
| 1 | 4/77 |
| 2 | 4/77 |
| 3 | 4/77 |
| 4 | 4/77 |
| 5 | 9/77 |
| 6 | 6/79 |
| 7 | 6/79 |

Page 2-1 Para 2-7C: Change both references to slo-blo fuses to fast-blo

Page 4-4 Para 4-16: Change both references to slo-blo fuses to fast-blo.

Page 4-10 Add the following after paragraph 4-41:

4-41A + 5 Volt dc calibration

4-41B Use the following procedure to calibrate the +5V dc power supply.

a. Connect the test multimeter between +5V dc (positive end of C47 or J2-9) and ground.

b. Adjust R108 for a reading between 4.8 and 5.0V dc.

Page 5-2 Top drawing and parts list:

Add the following items to the parts list:

13; ; 419374; Decal, option; 1

14; ; 406918; Timebase, 1952B-4010T; 1

Add the following items to the drawing:

The option decal is attached to the rear panel on the right corner.

The timebase is installed on the right rear corner of the main pcb.

Bottom drawing and parts list:

Add or change the following items on the parts list:

4; ; 372458; Heatsink; 1952B-2004; 1

5; ; 372482; Bracket, 1952B-2010; 2

9; ; 331249; Thermo setting tape 3/8" x 5"; 2

10; ; 393975; Decal, serial number (M00-800-555); 1

Add the following items to the drawing:

Item 9, is used to attach item 3 to item 1, with one strip above and one below the indicator opening.

Item 10, is attached to the low center portion of the front panel.

Page 5-3 Make the following changes to the drawing:

Diode labeled "10" at top left of drawing: Renumber as "11" and reverse the cathode band.

Diode labeled "11" at top left of drawing: Renumber as "10" and reverse the cathode band.

Add variable resistor labeled 74 between the IC labeled 25 and the resistor labeled 56.

Relabel the above resistor from 56 to 77.

Add a capacitor labeled 67 below IC 32 in the lower left corner.

Relabel resistor 51 between the large capacitors 4 and 5 as 49.

Relabel resistor 54 at the bottom right center of the drawing as 78.

Add a capacitor labeled 40 beneath the resistor relabel 78, and left of the resistor labeled 55.

Change the items below to read as changed:

3; C5; 392720; Capacitor 2200 $\mu$F, 25V; 1

5; C36; 182832; Capacitor 33 $\mu$F, 10V; 1

8; CR3 - CR6; 296509; Diode Bridge KBP02; 1

10; 11 ; 203323; Diode 1N4448; 12

14; Q4; 269076; Transistor 2N2905; 1
20; 13 ; 218396; Transistor 2N3904; 6
40; 29 ; 369579; Capacitor .01 μF, 50V; 3
45; R7, R9, R10, R104; 170720; Resistor; 1/4W, 5%, CC, 2K7; 4
51; 21 ; 148015; Resistor, 1/4W, 5%, CC, 820; 8
54; R103; 193441; Resistor, 1/4W, 5%, CC, 180K; 1
56; 24 ; 148007; Resistor, 1/4W, 5%, CC, 680; 4
74; R108; 275735; Resistor, Trimpot 100Ω; 1
76; C46; 277202; Capacitor, 43 pF, 500V; 1
77; R3; 147967; Resistor, 1/4W, 5%, CC, 330; 1
78; R82; 182212; Resistor, 1/4W, 5%, CC, 150K; 1
21 ; Delete R104
24 ; Delete R3
29 C13, C22, C47

Page 5-4 Make the following changes to the drawing:
Add a variable resistor between R3 and U6 at the top left of the drawing.
Add a capacitor C46 below U29 at the lower left of the drawing.
Add a capacitor C47 next to R83 and beneath R82 at the bottom center of the drawing.

Page 5-5 Change the following items on the parts list:
9; CR1 - CR6; 203323; Diode 1N4448; 6
10; R2, R3, R5, R6, R8, R9; 147975; Resistor, 1/4W, 5%, CC, 390; 6
Delete R4, R7 and R10 from the reference designator drawing, then delete the corresponding item 10 locations on the parts list drawing.

Page 5-6 Change the following items on the parts list:
9; C1, C3; 441345; Capacitor; 1 μF 250V; 2
14; ; 433334; Coaxial Cable Assy; 2

Page 5-7 Change the following items on the parts list:
11; CR1, CR2; 203323; 1N4448; 2

Page 5-8 Change the following items on the parts list:
2; ; 372565; 1952B-4002 Display PCB Assy; 1
3; ; 372581; 1952B-4003 Switch PCB Assy; 1
11; ; 449355; Pointer, Knob; 2
14; ; 312538; Washer; 1
28; ; 115808; Wire #22 Violet X 7" L; 1
33; ; 115790; Wire #22 Orange X2" L; 2
37; ; 175976; Sleeving 1"; 2
38; ; 110510; Nut 3/8 - 32 Hex; 2
Make the following changes to the parts drawing:
Delete the present item 33.
Change the unnumbered single pole switch on the rear panel to a double pole.
Connect one orange wire (new item 33) between the bottom connector added to the switch, and a connection point on the main pcb directly behind the black wire from the other side of the switch. Connect the second orange wire from the new center connector on the switch to a point on the pcb to the left of the other new wire.

Page 5-9 Change the following items on the parts list:
3; ; 152033; BNC Jacks; 2
9; ; 110668; Nut #2-56; 2
10; S3; 370122; Slide Switch; 1
14; ; 372441; Rear Panel 1952B-2013; 1

Page S-1 Redraw the input circuit to Q2 as shown below.

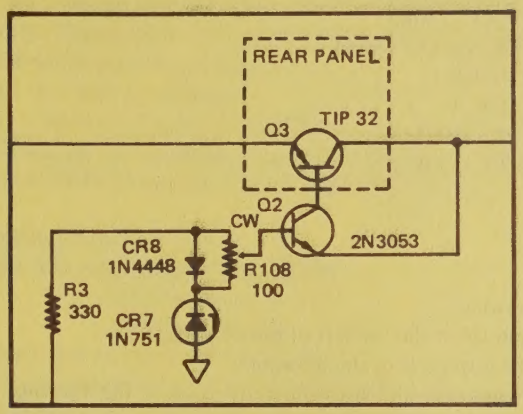


Page S-3 Change the value of R81 and R84 in the upper right quadrant to 3K3
Drop a .01 μF capacitor C47 to ground from the left side of R83 in the upper right quadrant.

Page S-4 Add the second pole to S3 as shown below:

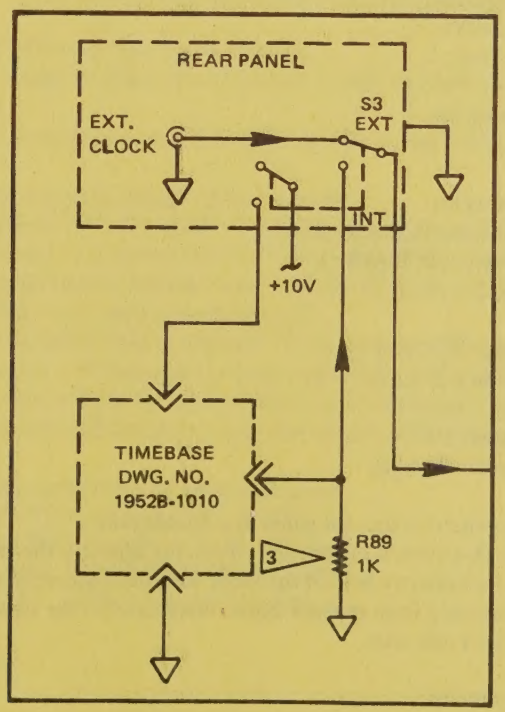

Add the connections to U7 and U8 as shown below:

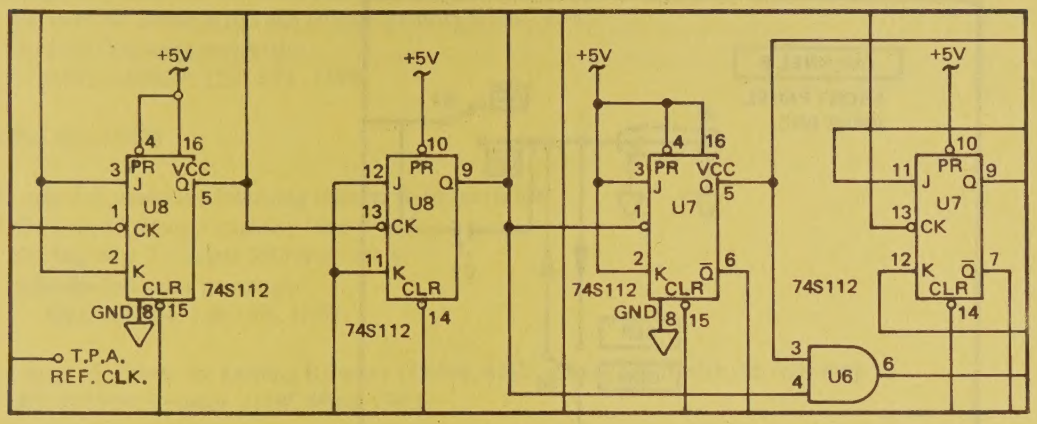


Page S-5 Change the value of R103 in the upper right quadrant from 220K to 180K.
Change the value of R104 in the upper right quadrant from 820 to 2K7.
Add a 43 pF capacitor C46 from the line connecting U30-3/U29-1 to ground.

Page S-6 Delete the three 390Ω resistors R4, R7 and R10 that are connected between ground and U4-13, U3-13 and U2-13 respectively.
Change the value of the cycle rate adjustment pot R14 from 10K to 25K.

Page S-7 Correct the range switch inputs as shown below.

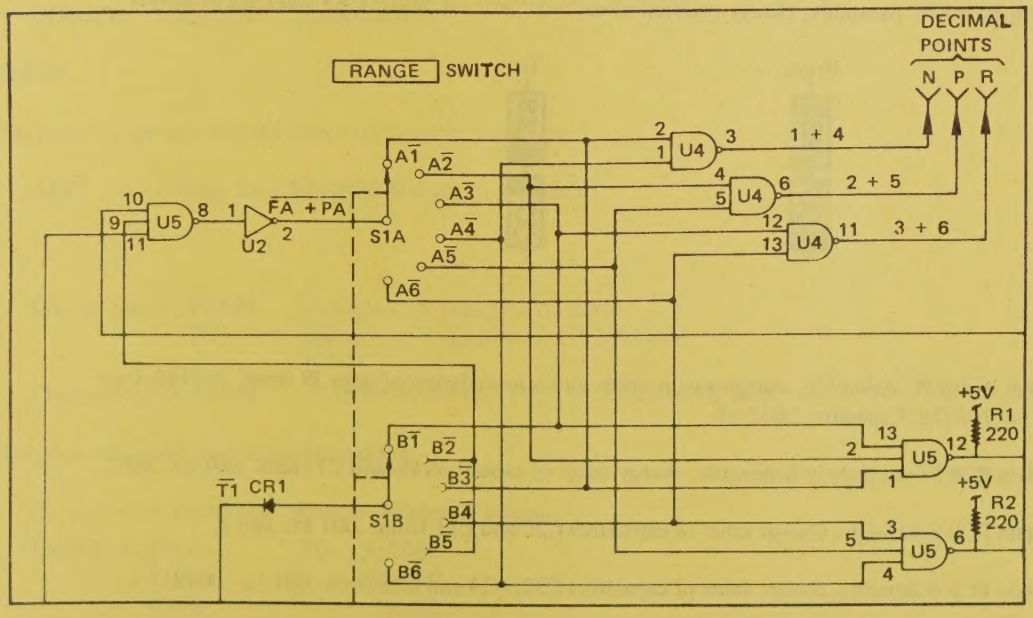

Page S-8 Change the SEP-COM switch connections to those shown below:

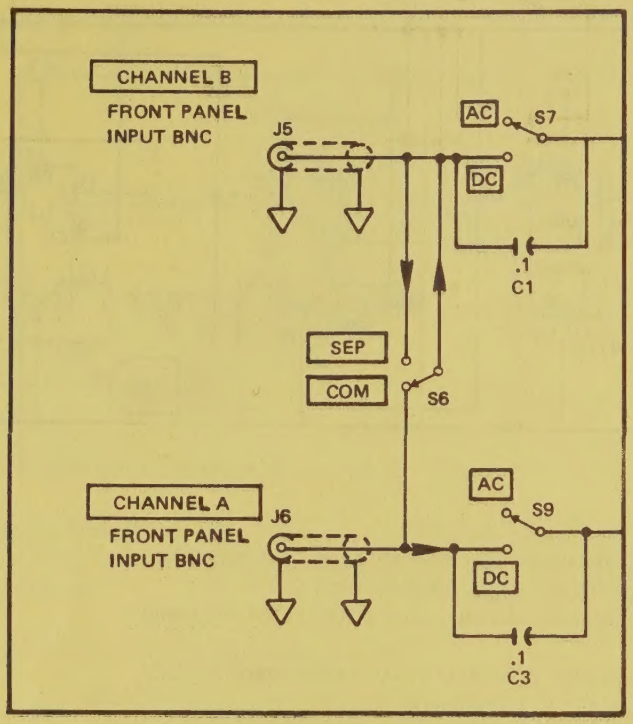


CHANGE #1–10972

On page 5-5, Display Board PCB Assembly, change part number of S4 from: 369421 to 380113.

CHANGE #2–10973

On page 5-4, Main Board PC Assembly, change position of cathode band on diodes CR7 and CR8 as shown below:

From:




To:

CHANGE #3

On page 5-3, Mail Board PC Assembly, change part number and nomenclature of item 39 from: 369140, Capacitor .001 uF to: 106732, Capacitor .0012 uF.

On page S-1, Main PCB Power Supply Schematic, change value of capacitors C6 and C7 from: .001 to: .0012,

On page S-3, Main PCB Schematic, change value of capacitors C29 and C31 from: .001 to: .0012.

On page S-4, Main PCB Schematic, change value of capacitors C32, C34 and C35 from: 001 to: .0012.

On page S-5, Main PCB Schematic, change value of capacitor C44 from: .001 to: .0012.

CHANGE #4–11318

On page 5-3, make the following changes to the parts list:
On item 54, delete R103 and change quantity from 2 to 1.
Add the following new entry:
R103; 160937; 220k ±5%, 1/4W

CHANGE #5–11339

On page 5-3, make the following changes to the parts list:
On item 55, change quantity from 4 to 3.
On flag note 23, delete R83 from entry.
Add the following new entry:
R83; 325704; 130 ±5%, 1/4W.

On page 5-5, delete the existing R1 entry (49484, 82Ω) and replace it with the following:
R1; 325704; Resistor, 1/4W, 5%cc, 130;1.

On page 5-6, delete the existing R7–R10 entry (49484, 82Ω) and replace it with the following:
R7–R10; 325704; Resistor, 1/4W, 5%cc, 130; 1.

On page S-3, change the value of R83 from 68Ω to 130Ω.

On page S-6, change the value of R1 from 82Ωto 130Ω. Change R14 from 10 kΩ to 25 kΩ.

On page S-8, change the value of resistors R7 through R10 from 82Ω to 130Ω.

CHANGE #6 – 11971

Rev.-M, Main Board PC Assembly (1952B-4001)

On page 5-3, make the following changes:

DELETE: 72/Q4/370155/Heatsink/1

ERRATA #1

On page 4-8, paragraph 4-35, make the following changes:

ADD: a.1 Change the CHANNEL B slope to – (minus)

Change Step C, FROM: Connect a 1V rms, 100 Hz signal . . .
TO: Connect a 1V squarewave, 10 Hz signal . . .

Change Step D, FROM: . . .of 0.1000 kHz TO: . . .of 0.0100 kHz

On page 4-9, make the following changes:

On Table 4-6, change the Numeric Readout Column

| FROM: | TO: |
|---|---|
| 10.0000 | 50.0000 |
| 10.000 | 50.000 |
| 10.00 | 50.00 |
| .0100 | .0500 |
| .010 | .050 |
| .01 | .05 |

FROM: *The accuracy of the readout is dependent on the frequency accuracy of the 100 Hz signal source.

TO: *The accuracy of the readout is dependent on the frequency accuracy of the 10 Hz signal source, the symetry of the waveform and the Time Interval Accuracy Specification. (See section one of this manual).

# Table of Contents


| SECTION | TITLE | PAGE |
|---|---|---|
| 1 | INTRODUCTION AND SPECIFICATIONS | 1-1 |
| | 1-1 INTRODUCTION | 1-1 |
| | 1-10 SPECIFICATIONS | 1-2 |
| 2 | OPERATING INSTRUCTIONS | 2-1 |
| | 2-1 INTRODUCTION | 2-1 |
| | 2-3 SHIPPING INFORMATION | 2-1 |
| | 2-6 INPUT POWER | 2-1 |
| | 2-8 RACK INSTALLATION | 2-1 |
| | 2-10 OPERATING FEATURES | 2-2 |
| | 2-12 OPERATING NOTES | 2-5 |
| | 2-14 AC Line Connection | 2-5 |
| | 2-16 A and B Inputs | 2-5 |
| | 2-18 SEP-COM Switch | 2-5 |
| | 2-20 Trigger Levels | 2-7 |
| | 2-22 MARKER Output | 2-7 |
| | 2-25 OPERATION | 2-7 |
| | 2-26 Turn-on Procedure | 2-7 |
| | 2-28 Operating Modes | 2-8 |
| 3 | THEORY OF OPERATION | 3-1 |
| | 3-1 INTRODUCTION | 3-1 |
| | 3-3 OVERALL FUNCTIONAL DESCRIPTION | 3-1 |
| | 3-9 Frequency Function | 3-4 |
| | 3-11 Ratio Function | 3-4 |
| | 3-13 Period Function | 3-6 |
| | 3-15 Time Interval Function | 3-6 |
| | 3-18 Totalize Function | 3-6 |
| | 3-20 Self-Check Function | 3-6 |

TABLE OF CONTENTS - continued


| SECTION | | TITLE | PAGE |
|---|---|---|---|
| | 3-22 | BLOCK DIAGRAM ANALYSIS | 3-7 |
| | 3-23 | General | 3-7 |
| | 3-25 | Power Supply | 3-7 |
| | 3-28 | Mode Control Logic | 3-8 |
| | 3-30 | Channel A and B Amplifiers | 3-8 |
| | 3-34 | Time Base Generator | 3-9 |
| | 3-36 | Time Base Divider | 3-9 |
| | 3-38 | Display Counter | 3-9 |
| | 3-41 | Measurement Cycle Logic | 3-10 |
| 4. | | MAINTENANCE | 4-1 |
| | 4-1 | INTRODUCTION | 4-1 |
| | 4-3 | SERVICE INFORMATION | 4-3 |
| | 4-6 | GENERAL MAINTENANCE | 4-3 |
| | 4-7 | Access Information | 4-3 |
| | 4-13 | Cleaning | 4-4 |
| | 4-15 | Fuse Replacement | 4-4 |
| | 4-17 | Service Tools | 4-4 |
| | 4-19 | PERFORMANCE TEST | 4-4 |
| | 4-20 | Set-Up Procedure | 4-4 |
| | 4-22 | Channel A Amplifier Test | 4-5 |
| | 4-24 | Channel B Amplifier Test | 4-5 |
| | 4-26 | Display Test | 4-5 |
| | 4-28 | Frequency A Test | 4-6 |
| | 4-30 | Ratio Test | 4-7 |
| | 4-32 | Period A Test | 4-8 |
| | 4-34 | Time Interval Test | 4-8 |
| | 4-36 | Totalize Test | 4-9 |
| | 4-38 | Self-Check Test | 4-9 |
| | 4-40 | CALIBRATION | 4-10 |
| | 4-42 | Trigger Level Preset-Adjust | 4-10 |
| | 4-44 | Timebase Adjust | 4-11 |
| | 4-46 | TROUBLESHOOTING | 4-11 |
| 5 | | LIST OF REPLACEABLE PARTS | 5-1 |
| | | TABLE OF CONTENTS | 5-1 |

TABLE OF CONTENTS - continued


| SECTION | TITLE | PAGE |
|---|---|---|
| 6 | OPTIONS AND ACCESSORIES INFORMATION | 6-1 |
| | 6-1 INTRODUCTION | 6-1 |
| | 6-3 ACCESSORY INFORMATION | 6-1 |
| | 6-5 OPTION INFORMATION | 6-1 |
| 7 | GENERAL INFORMATION | 7-1 |
| | SCHEMATICS | |
| | Main PCB Power Supply - 1952B-1001 (5 sheets) | S-1 |
| | Display PCB - 1952B-1002 | S-6 |
| | Switch PCB - 1952B-1003 | S-7 |
| | Input PCB - 1952B-1004 | S-8 |
| | Timebase PCB - 1952B-1010 | S-9 |

# List of Illustrations


| FIGURE | TITLE | PAGE |
|---|---|---|
| 1-1 | Outline Drawing | 1-5 |
| 2-1 | Controls, Indicators and Connectors, Front Panel (Sheet 1 of 3) | 2-2 |
| 2-2 | Controls, Indicators and Connectors, Rear Panel | 2-6 |
| 3-1 | Model 1952B, Simplified Block Diagram | 3-1 |
| 3-2 | Frequency A Function, Simplified Data Flow Chart | 3-3 |
| 3-3 | Frequency (A/B)N Function, Simplified Data Flow Chart | 3-3 |
| 3-4 | Period A Function, Simplified Data Flow Chart | 3-4 |
| 3-5 | Time Interval Function, Simplified Data Flow Chart | 3-5 |
| 3-6 | Totalize Function, Simplified Data Flow Chart | 3-5 |
| 3-7 | Self-Check Function, Simplified Data Flow Chart | 3-7 |
| 3-8 | Channel A Amplifier, Functional Block Diagram | 3-8 |
| 3-9 | Time Base Generator, Simplified Block Diagram | 3-8 |
| 3-10 | Time Base Divider, Simplified Block Diagram | 3-9 |
| 3-11 | Display-Counter, Simplified Block Diagram | 3-9 |
| 3-12 | Measurement Cycle Logic, Simplified Block Diagram | 3-11 |
| 4-1 | Troubleshooting Flowchart Symbols | 4-12 |
| 4-2 | Troubleshooting Flowcharts (Sheet 1 of 6) | 4-13 |
| 5-1 | A1 Main Board PCB Assembly | 5-3, 5-4 |
| 5-2 | A2 Display Board PCB Assembly | 5-5 |
| 5-3 | A3 Input Board PCB Assembly | 5-6 |
| 5-4 | A4 Switch Board PCB Assembly | 5-7 |
| 5-5 | A6 Rear Panel Assembly | 5-9 |

# List of Tables


| TABLE | TITLE | PAGE |
|---|---|---|
| 1-1 | Available Option | 1-2 |
| 2-1 | Display Readout For Self Check Function | 2-8 |
| 4-1 | Equipment Required for Performance Test and Troubleshooting | 4-1 |
| 4-2 | Range Display Information for Available Functions | 4-6 |
| 4-3 | Display Readout for Frequency A Test | 4-7 |
| 4-4 | Display Readout for Ratio Mode Test | 4-7 |
| 4-5 | Display Readouts for Period A Test | 4-8 |
| 4-6 | Display Readouts for Time Interval Test | 4-9 |
| 4-7 | Display Readout for Self Check Test | 4-10 |

Section 1

# Introduction & Specifications

1-1 INTRODUCTION

1-2 The Fluke Model 1952B is a universal, DC to 80 MHz, counter/timer capable of making frequency, frequency ratio, period, time interval, gateable totalize, and self check measurements. Each measurement mode and one of six associated ranges are individually selectable using the front panel FUNCTION and RANGE switches.

1-3 Front panel features include individual trigger level adjustments for the CHANNEL A and B input signals, switch selection of a continuous or single measurement cycle, and a seven digit display.

1-4 A self check mode provides a convenient method of verifying the overall operation of the 1952B. In this mode, the counter is configured such that a frequency measurement is made using the 100 kHz output of the internal frequency standard as an unknown input. A valid readout for each setting of the range switch verifies proper overall operation.

1-5 The trigger level controls allow the operator to manually define the conditions under which the individual CHANNEL A and B inputs will accept an input signal as a trigger. Switches are used to select x1 or x10 attenuation, ac or dc coupling, and + or - slope triggering. A continuously variable trigger level control is used to set the + or - dc threshold voltage which the input signal must exceed before being accepted as an input signal. A PRESET position on the trigger level adjustment sets the threshold to 0 V dc. Two light emitting diode (LED) Status Indicators operate in conjunction with the variable trigger level to simplify the task of establishing proper triggering.

1-6 A measurement can be continuously repeated at an adjustable rate, or a front panel manual RESET command can be selected to initiate each measurement cycle.

1-7 The front panel display on the standard instrument consists of a seven digit readout plus six range annunciators (measurement units indicators). The display is equipped with leading zero suppression for all decades except the least significant decade (LSD). Decimal point location, if any, is fixed according to the selected FUNCTION and RANGE, and is supplemented, when necessary,

by the illumination of one or more of the measurement units indicators.

1-8 A factory installed option (-03) is available which provides a temperature compensated crystal oscillator (TCXO) and an eight digit display for higher measurement accuracy and resolution.

1-9 The model 1952B is designed as a bench-top instrument. However, by installing the Accessory Rack Mounting Kit (part no. M00-200-614) the 1952B can be mounted in a standard 19 inch equipment rack. Input power requirements are 115 or 230 V ac ± 10%, 50 to 400 Hz, 20 Watts.

TABLE 1-1 - AVAILABLE OPTION

| OPTION | DESCRIPTION | INSTALLATION | |
|---|---|---|---|
| | | FACTORY | FIELD |
| -03 | -03 TEMPERATURE COMPENSATED CRYSTAL OSCILLATOR (TCXO) AND 8 DIGIT DISPLAY | X | - |

1-10 SPECIFICATIONS

Operating Modes

FREQUENCY

| | |
|---|---|
| Range | DC to 80 MHz (dc coupled)<br>5 Hz to 80 MHz (ac coupled) |
| Gate Time | 0.1 ms to 10 s in 6 decade steps |
| Resolution | 0.1 Hz at 10 s gate time to 10 kHz at 0.1 ms gate |
| Accuracy | ± 1 count ± timebase accuracy |
| Readout | kHz or MHz automatically displayed with decimal point |

RATIO

| | |
|---|---|
| Displays | $f_1/f_2$ where $f_1$ and $f_2$ are applied at the two input channels, A and B |
| Range $f_1$ | DC to 80 MHz (dc coupled)<br>5 Hz to 80 MHz (ac coupled) |
| $f_2$ | 1 kHz to 10 MHz |
| Accuracy | ± 1 count of signal on input A.<br>± trigger error of signal on input B* |

PERIOD

| | |
|---|---|
| Range | DC to 10 MHz (dc coupled)<br>5 Hz to 10 MHz (ac coupled) |
| Periods averaged | 1 period to $10^5$ periods |
| Frequency counted | 100 kHz |
| Resolution | 0.1 ns at $10^5$ periods to 10 us at 1 period |
| Accuracy | ± 1 count ± timebase accuracy,<br>± trigger error of signal on input A* |
| Readout | ms or us automatically displayed with decimal point |

TIME INTERVAL

| | |
|---|---|
| Range | 0.1 us to $10^7$ s (with 7 digit display)<br>0.1 us to $10^8$ s (with 8 digit display) |
| Input | Channels A and B; common or separate |
| Resolution | 0.1 us to 10 ms in 6 decade steps |
| Accuracy | ± 1 count ± timebase accuracy<br>± trigger error** |

* Trigger error is less than ± 0.3% - periods averaged for signals with better than 40 dB S/N ratio and greater than 100 mV rms amplitude.

** Trigger error is less than ± 0.0025 V/Signal Slope (V/us) in us.

TOTALIZING

| | |
|---|---|
| Range | DC to 80 MHz (dc coupled) |
| Capacity | $10^7$ standard, up to $10^8$ with 8 digit display |
| SELF CHECK | A timebase-derived 100 kHz signal is internally connected to the Channel A preamplifier output. |

Input Signals

SENSITIVITY

| | |
|---|---|
| Input A or B | Sinewave: 50 mV rms from dc to 50 MHz, decreasing to 75 mV rms at 80 MHz<br>Pulse: 100 mV pulse amplitude with minimum pulse width of 20 ns. |

IMPEDANCE

| | |
|---|---|
| Input A or B | 1 M ohm in parallel with 30 pF |

ATTENUATOR

Input A and B only..... Sensitivity is decreased by a factor of 10 in the X10 position.

TRIGGER SLOPE

Input A and B only..... Front panel slide switch selects positive or negative slope triggering.

TRIGGER LEVEL

Input A and B only..... Front panel control has ± 1 V range when attenuator is in X1 position and ± 10 V in the X10 positions. Preset position is fully counter-clockwise.

OVERLOAD CAPABILITY

Input A or B..... 150 V rms to 1 kHz (decreasing to 5 V rms at 80 MHz)
DC + Peak ac must not exceed 150 V

Output Signal

Marker Output..... A TTL Compatible (5 Volt) output is available for the duration of a time interval measurement at the rear panel BNC connector.

Time Base

INTERNAL

| | Standard | Option -03 |
|---|---|---|
| Frequency..... | 10.00 MHz | 10.00 MHz |
| Aging Rate..... | $< \pm 5 \times 10^{-7}$/mo | $< \pm 3 \times 10^{-7}$/mo |
| Temperature Stability | | |
| 20°C to 30°C..... | $< \pm 2 \times 10^{-6}$ typical | $\pm 5 \times 10^{-7}$ typical |
| 0°C to 50°C..... | $< \pm 5 \times 10^{-6}$ | $< \pm 2 \times 10^{-6}$ |
| Line Voltage | | |
| For ± 10% change..... | $< \pm 1 \times 10^{-7}$ | $< \pm 1 \times 10^{-7}$ |

EXTERNAL

Frequency Required..... 10 MHz

Sensitivity..... 100 mV minimum

Impedance..... 1 M ohm, 15 pF

General

| | |
|---|---|
| DISPLAY..... | 7 digit LED display incorporating 0.27" high, seven segment characters. Up to 8 digits optionally available.<br>Full leading zero suppression. |
| CYCLE RATE..... | When in the "CONT" mode, the time interval between successive measurements can be varied between 0.2 and 2.0 seconds by means of a CYCLE RATE control. RESET button clears display and activates a new measurement. |
| RESET..... | In "TRIG" mode the readings may be updated by pushing the RESET button. |
| POWER REQUIREMENTS..... | 50, 60, 400 Hz; 115/230 V ± 10% (100 V operation available) 25 Watts |
| DIMENSION..... | 2.94" high, 12.96" wide and 9.95" deep. (7.5 cm X 32.9 cm X 25.3 cm)<br>See Figure 1-1. |
| WEIGHT..... | 8 pounds (3.63 kg) |

Environmental

| | |
|---|---|
| STORAGE TEMPERATURE..... | -40°C to + 75°C |
| OPERATING TEMPERATURE..... | 0°C to + 50°C |

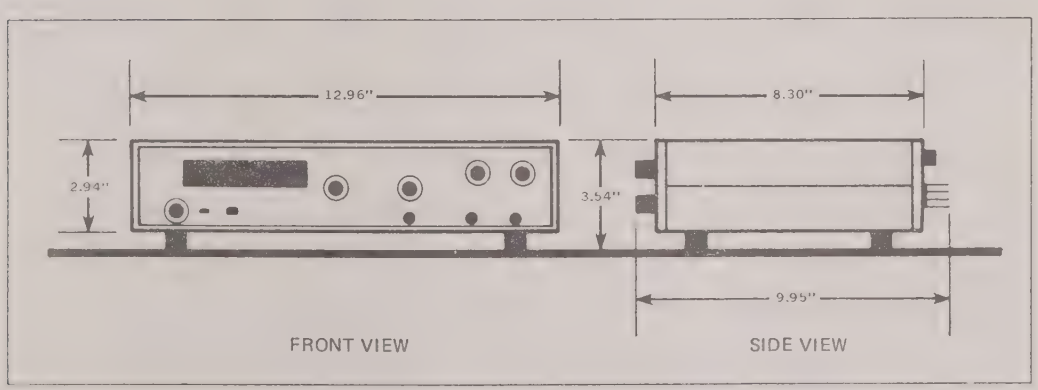


Figure 1-1. OUTLINE DRAWING

Section 2

# Operating Instructions

## 2-1 INTRODUCTION

2-2 This section of the manual contains information regarding installation and operation of the Model 1952B Counter. It is recommended that the contents of this section be read and understood before any attempt is made to operate the counter.

## 2-3 SHIPPING INFORMATION

2-4 The Model 1952B is packaged and shipped in a shock resistant container. Upon receipt of the equipment, a thorough inspection should be made to reveal any possible shipping damage. Special instructions for inspection and claims are included in the shipping carton.

2-5 If reshipment of the equipment is necessary, the original container should be used. If the original container is not available, a new container can be obtained from the John Fluke Mfg. Co., Ltd. Please reference the equipment model number when requesting a new shipping container.

## 2-6 INPUT POWER

2-7 The Model 1952B can be operated from a 115 or 230 V ac, 48 to 440 Hz power line (A 100/200 V ac version is available on request). Before connecting the equipment to primary power, check and, if necessary, set the instrument to operate at the local line voltage as follows:

a. Locate the input power selection switch on the rear panel of the 1952B.

b. Set the slide switch so that the desired voltage, 115 or 230, appears in the slide aperture.

c. Install the proper fuse (i.e. 1A slo-blo for 115 V ac and 0.5 A slo-blo for 230 V ac) in the rear panel fuse holder.

## 2-8 RACK INSTALLATION

2-9 The 1952B is designed for bench-top use or for installation in a standard 19 inch

equipment rack using the optional Accessory Rack Mounting Kit (part number M00-200-614).

2-10 OPERATING FEATURES

2-11 The function and location of all front panel controls, indicators and connectors are shown in Figure 2-1 and all rear panel controls, indicators and connectors are shown in Figure 2-2.

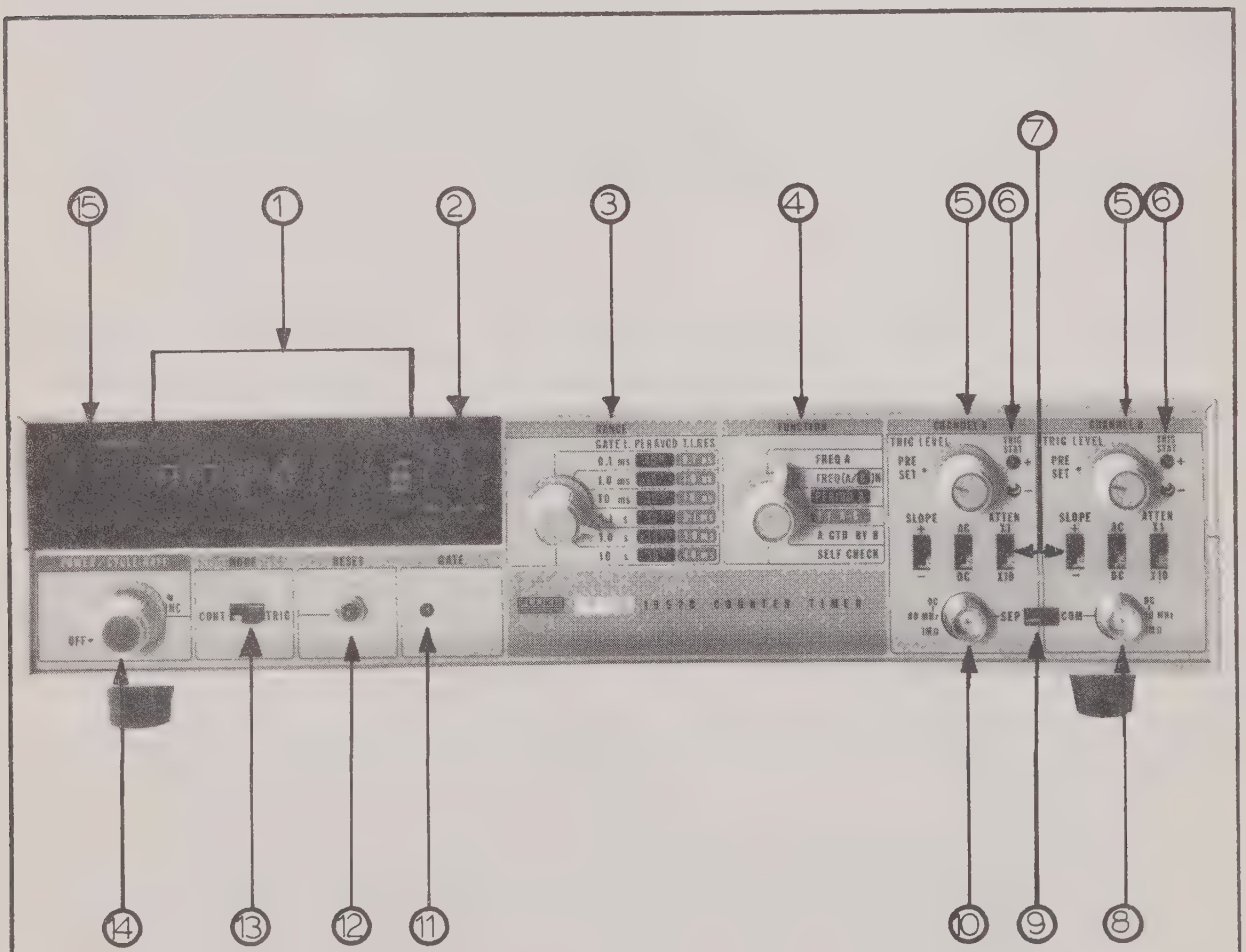


Figure 2-1 . FRONT PANEL CONTROLS , INDICATORS AND CONNECTORS .
(See pages 2-3,2-4 and 2-5 for ref. numbers)

| REF. NO. | NAME | FUNCTION |
|---|---|---|
| 1 | Digital Display | Displays a seven digit readout of the counter measurement. The position of the RANGE and FUNCTION switches determine the location of the decimal point on the display. All decades are capable of displaying from 0 through 9. |
| 2 | Measurement Units | Displays a frequency or time multiplier necessary to properly define the value of the measurement readout. The multiplier displayed depends on the position of the RANGE and FUNCTION switches. |
| 3 | RANGE Switch | Selects one of six ranges for the selected operating function.<br>GATE t..... Gate time ranges for frequency modes.<br>PER.AVGD..... Number of periods averaged in PERIOD A mode.<br>T.I, RES..... Resolution for T.I, A-B mode. |
| 4 | FUNCTION Switch | Selects the desired operating mode.<br>FREQ. A..... Measures frequency of the CHANNEL A input signal.<br>FREQ.(A/B)N..... Measures the frequency ratio of the CHANNEL A and B inputs.<br>PERIOD A..... Measures the period of the CHANNEL A input signal. The number of periods averaged ($10^0$ through $10^5$) are selected by the setting of the RANGE switch.<br>T.I. A-B..... Measures the time interval between a start input signal at CHANNEL A and a stop input signal at CHANNEL B.<br>A GTD. BY B..... Measures the number of events which occur on the CHANNEL A input when an enable signal is applied to the CHANNEL B input. The RANGE switch is not effective in this mode.<br>SELF CHECK..... All inputs are disabled and an internally generated 100 kHz signal is counted and displayed. |
| 5 | Trigger Level Adjust | Sets the dc trigger level for the CHANNEL A/B input signal. With the control set to the PRESET position (maximum ccw) the trigger level is set to zero volts. Switched out of the detent position, the control can be set to cause triggering at positive or negative threshold voltages. |

| REF NO. | NAME | FUNCTION |
|---|---|---|
| 6 | Status Indicators + and - (CHANNEL A/B) | Two light emitting diodes (LED's) which illuminate on a mutually exclusive basis to indicate that the input signal is above or below the set trigger level. The illumination pattern is alternately reversed as the input signal passes above and below the trigger level threshold. |
| 7 | CHANNEL A and B Input Signal Conditioners | Slide switches which select the trigger Slope, Coupling and Attenuation for the respective CHANNEL A and B input signals.<br>Slope..... (+ or -) Selects the leading or trailing edge slopes of the input signal for use in triggering the counter.<br>Coupling..... Selects either direct DC coupling or capacitive AC coupling for the input signal.<br>Attenuators..... (x1 or x10) Selects x1 or x10 attenuation of the input signal. In the x10 position the input sensitivity is reduced by a factor of 10. |
| 8 | CHANNEL B Input Connector | A BNC connector used to connect the CHANNEL B input signal to the counter. |
| 9 | SEP - COM Switch | A slide switch which electrically isolates or separates the CHANNEL A and B input signals in the SEP position, and electrically connects the inputs in the COM position. |
| 10 | CHANNEL A Input Connector | A BNC connector used to connect the CHANNEL A input signal to the counter. |
| 11 | GATE Indicator | An LED which illuminates to indicate that the counter is executing a measurement cycle. |
| 12 | RESET Switch | Momentary depression of the button resets the display to zero and initiates a new measurement. |
| 13 | CONT-TRIG Switch | Selects the internal (CONT) or external (TRIG) trigger method for initiating a new measurement.<br>CONT..... Measurements are made on a continuous basis, one after another, separated by time delays dependent on the setting of the CYCLE RATE control.<br>TRIG..... Measurements are initiated by a RESET pulse |

| | | |
|---|---|---|
| | | generated by momentarily depressing the RESET button. |
| 14 | CYCLE RATE | Determines the amount of time between successive measurements when the CONT - TRIG switch is in the CONT position. Also turns off the entire instrument in the CCW extreme (POWER OFF). |
| 15 | OVERFLOW Indicator | Illuminates to indicate that the counter has exceeded its total display capacity (overflowed). |

2-12 OPERATING NOTES

2-13 The following paragraphs describe various conditions which should be considered before operating the Model 1952B Counter.

2-14 AC Line Connection

2-15 The input power cord is a three-pin polarized connector which permits connection to any of the power line voltages described in paragraph 2-6. Ensure that the offset pin is connected to a high quality earth ground. The 1952B Counter is energized by means of the front panel POWER/CYCLE RATE switch.

2-16 A and B Inputs

2-17 Input channels A and B are functionally similar. With the attenuators in the X1 position, the input impedance of each channel is 1 M ohm in parallel with 30 pF for signals less than 1 volt peak-to-peak, and decreases to 10 k ohm for signals that exceed 1 volt peak-to-peak. With the attenuators in the X10 position, the input resistance is 1 M ohm for all input signal levels.

2-18 SEP - COM Switch

2-19 The SEP-COM (separate-common) switch is used to isolate the A and B inputs when the switch is in the SEP position, or to electrically connect the two inputs in the COM position. The switch is normally left in SEP position except for time interval measurements using a single input signal. With the switch in the COM position, CHANNEL A is used to establish the start trigger level conditions and the CHANNEL B is used to establish the stop trigger level conditions.

CAUTION!

If separate signal sources are to be connected to the A and B input, the SEP-COM switch should be set to the SEP position. Otherwise the outputs of the signal sources will be shorted together.

Figure 2-2. REAR PANEL CONTROLS , INDICATORS AND CONNECTORS .

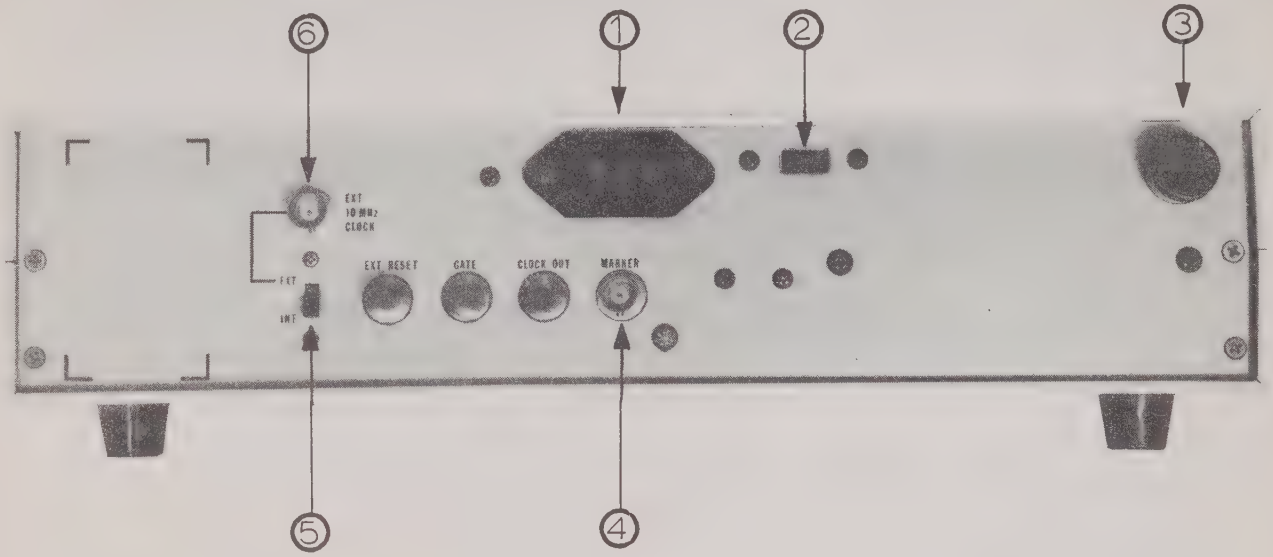


| REF NO. | NAME | FUNCTION |
|---|---|---|
| 1 | Power Input Connector | Provides the means of connecting the instrument through the power cord to line power. |
| 2 | 115/230 Power Select Switch | Provides rear panel selection of 115 or 230 V ac input power. |
| 3 | FUSE | Protects the ac input section of the power supply. |
| 4 | MARKER Connector | Provides for external connection to the Marker output signal. This signal is used to modulate the Z axis on an oscilloscope while displaying the input signal. The result is an intensified zone which displays the start to stop interval for a time interval measurement. |
| 5 | Clock Select Switch | Selects the internal or external clock for use as the counter time base.<br>INT..... Selects the internal 10 MHz clock.<br>EXT..... Selects the external clock input signal connected to the EXT 10 MHz clock connector. |
| 6 | EXT 10 MHz Connector | Provides for the connection of an external 10 MHz clock input signal. The minimum input level requirement is 150 mV and the input impedance is 1 M ohm. |

2-20 Trigger Levels

2-21 The front panel trigger level controls provided for each CHANNEL A and B input consist of three slide switches, two LED Status Indicators and a manual Trigger Level Adjust. The slide switches condition the input signal before it is used to trigger the counter by selecting the desired trigger slope (+ or -), coupling (AC or DC) and attenuation (x1 or x10). The Trigger Level Adjust is then used to set the dc threshold of an internal trigger circuit and thereby define the trigger level for the channel input signal. The range of the trigger level control is continuously variable from + 1 to - 1 V dc with the attenuator switch in the x1 position. Selecting the x10 attenuator increases the trigger level voltage range by a factor of 10. When the trigger level control is turned CCW to the PRESET detent, the trigger level is set to 0 V dc. The two Status Indicators provide a convenient method of determining the effective operating range of the trigger level control for a given input signal. Assuming a sinewave input is used, both LED's are illuminated to an equal intensity when the trigger level control is adjusted to trigger at 0 V dc. For non-symmetrical input signals triggering occurs when both LED's are illuminated regardless of intensity. Very narrow low frequency pulses may not illuminate the Status Indicators even though proper triggering occurs.

2-22 MARKER Output

2-23 In the Time Interval mode, a pulse is generated at the rear panel MARKER output connector to provide an indication of the actual time interval being measured. The width of the MARKER pulse is variable depending on the time interval of the signal being measured and the trigger level settings for CHANNELS A and B (Start and Stop). When the measured input signal is fed to the vertical input of an oscilloscope, the MARKER pulse can be used to modulate the Z axis of the scope and cause the measured portion of the input signal to be intensified. Using this technique, the thresholds for the A and B (Start and Stop) Trigger Levels can be individually adjusted for precise time interval measurements.

2-24 In the Frequency A mode, the Marker pulse can be used to precisely set the A trigger level. However, the Channel B Trigger Level controls must also be adjusted to reset the Marker generator. This is accomplished by setting the SEP - COM switch to the COM position and adjusting the B Trigger Level so that the intensified zone is terminated shortly after it begins. Adjust the Channel A Trigger Level to the desired position.

2-25 OPERATION

2-26 Turn-On Procedure

2-27 Use of the following procedure is suggested for initial turn-on of the 1952B Counter:

a. Connect the counter to the ac power line. (See paragraph 2-6).

b. Turn the POWER/CYCLE RATE switch clockwise and out of the power OFF detent. The front panel display should illuminate.

2-28 Operating Modes

2-29 The following paragraphs describe the self check, frequency, ratio, period, time interval and totalize functions and the procedures necessary to operate the 1952B in each mode.

2-30 SELF CHECK

2-31 The SELF CHECK function is used to verify the overall operation of Model 1952B. The Frequency of a 100 kHz clock, derived from the 10 MHz oscillator, is measured to produce a predictable readout for each setting of the GATE t switch.

2-32 Use the following procedure to operate the Model 1952B in the SELF CHECK mode:

a. Turn the CYCLE RATE switch clockwise out of the power OFF detent.

b. Set the rear panel Clock Select Switch to the INT (internal) position.

c. Set the FUNCTION switch to the SELF CHECK position.

d. Set the MODE switch to the CONT position.

e. Set the CYCLE RATE control for the desired display period.

f. Refer to Table 2-1 and verify the display readout for each GATE t setting of the RANGE switch.

Table 2-1 DISPLAY READOUT FOR SELF CHECK MODE

| GATE t SETTINGS | NUMERIC READOUT |
|---|---|
| 0.1 ms | 10 |
| 1.0 ms | 100 |
| 10 ms | 1000 |
| 0.1 s | 10000 |
| 1.0 s | 100000 |
| 10 s | 1000000 |

2-33 FREQUENCY

2-34 Standard frequency measurements from 0 to 80 MHz are made using the FREQUENCY A operating mode. The GATE times available for each frequency measurement range from 0.1 ms to 10 s in power of ten steps and are selected by the setting of the RANGE switch. The RANGE switch is set to provide optimum resolution of the displayed frequency.

2-35 Use the following procedure to operate the Model 1952B in the FREQ A mode:

a. Turn the CYCLE RATE switch clockwise out of the POWER OFF detent.

b. Set the FUNCTION switch to the FREQUENCY A position.

c. Set the MODE switch to the CONT position.

d. Connect the input signal to be measured to the CHANNEL A Input Connector.

e. Adjust the CHANNEL A Trigger Level Adjust to establish the desired trigger conditions. Proper triggering occurs when the + and - Status Indicators are both illuminated.

f. Adjust the CYCLE RATE control for the desired display period.

g. Obtain optimum resolution of the frequency displayed by selecting the proper GATE t setting on the RANGE switch.

2-36 RATIO

2-37 In the FREQ (A/B)N mode the frequency ratio of two input signals A and B can be measured. The resolution of the measurement can be increased by the factor N in decade steps by changing the setting of the RANGE Switch. Optimum resolution is obtained by ensuring that the higher frequency is used for the CHANNEL A input.

2-38 Since a decimal point is not displayed in the FREQ (A/B)N mode, its location is determined by noting the exponent of the PER.AVGD range switch setting and, starting to the right of the least significant digit on the display, shifting the decimal point that many places to the left.

2-39 Use the following procedure to operate the Model 1952B in the ratio mode:

a. Turn the CYCLE RATE switch clockwise out of the POWER OFF detent.

b. Set the FUNCTION switch to FREQ (A/B)N.

c. Set the MODE switch to the CONT position.

d. Set the SEP - COM switch to the SEP position.

e. Connect the higher frequency to be measured to the CHANNEL A input.

f. Connect the lower frequency to the CHANNEL B Input Connector.

g. Rotate the CHANNEL A and B Trigger Level Adjusts to establish the desired trigger conditions. Proper triggering occurs when both Status Indicators are alternately illuminated.

h. Adjust the CYCLE RATE control for the desired display period.

i. If necessary, resolution of the displayed ratio is increased by advancing the RANGE switch in a clockwise direction.

j. Locate the decimal point using the method described in the previous paragraph.

2-40 PERIOD

2-41 The period function is used to make single or multiple period average measurements for input frequencies up to 10 MHz. This mode is intended for use with low frequencies where maximum resolution is desired. For example, if the $10^0$ PER range is selected and an input frequency of 1 Hz is applied to CHANNEL A input, the display will read 1000.00 ms. Switching the RANGE switch to the $10^1$ PER AVGD position will cause the display to read 1000.000 ms. The selected setting of the RANGE switch indicates, in powers of ten, the number of periods of the input signal which are sampled to produce a final display.

2-42 Use the following procedure to operate the Model 1952B in the period average mode:

a. Turn the CYCLE RATE control clockwise out of the POWER OFF detent.

b. Set the FUNCTION switch to PERIOD A.

c. Set the MODE switch to the CONT position.

d. Set the SEP - COM switch to SEP.

e. Connect the frequency to be measured to the CHANNEL A Input Connector.

f. Adjust the CHANNEL A Trigger Level Adjust to ensure proper triggering.

g. Adjust the CYCLE RATE control for the desired display period.

h. Using the RANGE switch select the PER AVGD setting which provides optimum resolution.

2-43 TIME INTERVAL

2-44 In the time interval function, accurate time measurements can be made between the occurance of two separate input signals or between two points on a single input signal. The trigger level and slope for the start input is detected using CHANNEL A and the stop input is detected using CHANNEL B. When a single input signal is used to provide both the start and stop events the SEP - COM switch is set in the COM position so that both CHANNELS A and B receive the same signal. The SEP - COM switch is set to the SEP position when the start and stop input signals are available as separate input signals.

2-45 Accurate pulse width, rise time and fall time measurements can be made using the time interval function. However, their accuracy depends on the start and stop trigger levels being set

to occur at precise voltage levels of the input signal. These levels can be visually set using an oscilloscope to display the input signal while modulating the Z axis scope input with the Marker output signal available at the rear of the 1952B. The measured time interval appears as an intensified zone on the scope trace and can be adjusted using the CHANNEL A and B Trigger Level controls. Refer to MARKER output discussion given earlier in this section under Operating Notes.

2-46 Use the following procedure to operate the Model 1952B in the time interval function:

a. Turn the CYCLE RATE control clockwise out of the POWER OFF detent.

b. Set the CONT - TRIG switch to the CONT position.

c. Set the FUNCTION switch to T.I. A-B.

d. Set the SEP - COM switch to the SEP position if separate start/stop inputs are used, or to COM if the start/stop inputs are derived from a single input signal.

e. If separate input signals are used, connect the start signal to the CHANNEL A input and the stop signal to the CHANNEL B input. If a single input is used connect it to the CHANNEL A input.

f. Adjust the CHANNEL A and B Trigger Levels to establish the desired start/stop trigger points. Use the MARKER output pulse in conjunction with an oscilloscope to establish precise trigger levels.

g. Adjust the CYCLE RATE control for the desired display period.

h. Using the RANGE switch, select the T.I. RES setting which provides the desired resolution.

2-47 TOTALIZING

2-48 In the A GTD.BY B function the Model 1952B can be used as a gateable totalizer. Each triggerable event which occurs on the CHANNEL A input is accumulated or totalized while a gate pulse is present at the CHANNEL B input. The CHANNEL B gate pulse assumes an active high state when the associated slope switch is set to the positive (+) position and an active low state when the slope switch is set to the negative (-) position. In this mode the RANGE switch is not functional.

2-49 Use the following procedure to operate the Model 1952B in the totalize function:

a. Turn the CYCLE RATE control clockwise out of the POWER OFF detent.

b. Set the FUNCTION switch to the A GTD.BY B position.

c. Set the SEP - COM switch to the SEP position.

d. Connect the signal to be counted or totalized to the CHANNEL A Input Connector.

e. Connect the gate pulse to the CHANNEL B Input Connector.

f. Adjust the CHANNEL A and B Trigger Level Adjust to ensure proper triggering. The counter will totalize event inputs on CHANNEL A as long as the CHANNEL B input is at an active level. In this mode the display will reset only when the manual RESET is activated.

NOTE!

If no input signal to channel B is required or available, the gating of the accumulator can be manually controlled by the CHANNEL B SLOPE switch. Turn the CHANNEL B TRIGGER LEVEL control fully cw. Setting the SLOPE switch for CHANNEL B to - will now gate the accumulator, and the 1952B will totalize. Setting it back to + will inhibit the accumulator, and the totalizing will halt. To resume totalizing, set the SLOPE switch to - again; to start over from zero, momentarily press the RESET switch.

Section 3

# Theory of Operation

3-1 INTRODUCTION

3-2 This section of the manual contains an overall functional description followed by a detailed block diagram analysis of the Model 1952B Digital Counter-Timer. Simplified block diagrams and timing diagrams are included, as necessary, to supplement the text.

3-3 OVERALL FUNCTIONAL DESCRIPTION

3-4 The Fluke Model 1952B, as shown in the simplified block diagram of Figure 3-1, is a

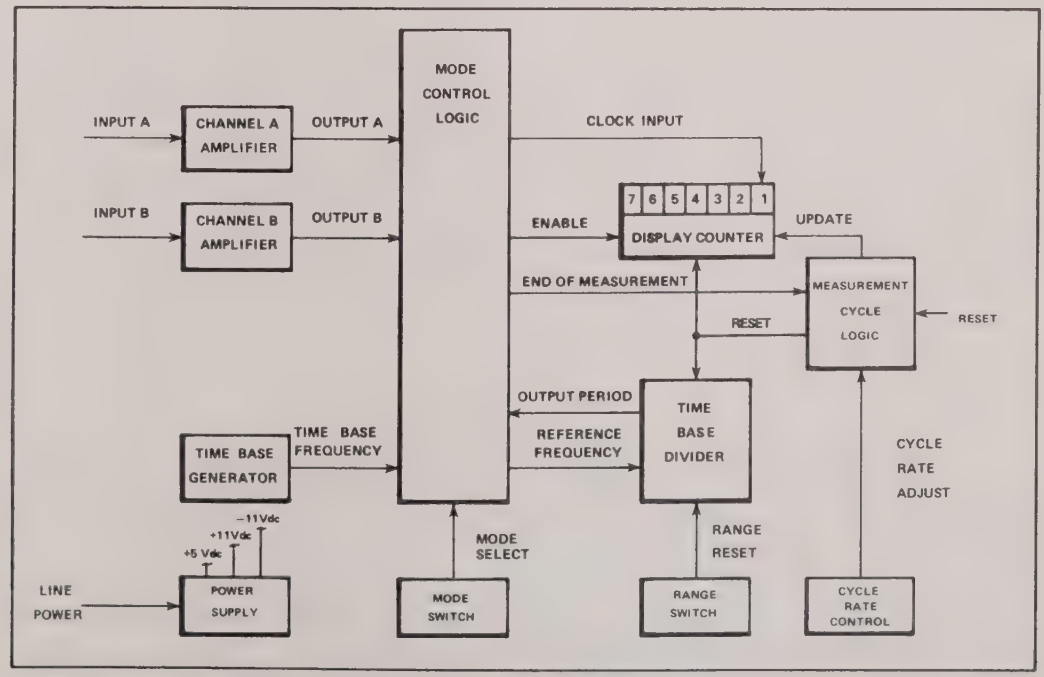


Figure 3-1 . MODEL 1952B , SIMPLIFIED BLOCK DIAGRAM .

universal counter/timer capable of making frequency, frequency ratio, period average, time interval and totalize measurements. Each measurement mode and six associated ranges are individually selectable from the front panel. Separate CHANNEL A and B inputs provide the trigger levels controls necessary to condition input frequencies from 0 to 80 MHz. All measurements are displayed on a seven decade LED display along with range annunciators and decimal point, when applicable. The time between successive measurements can be adjusted on a continuous basis.

3-5 The input signals for all operating modes are conditioned for use by the CHANNEL A and B amplifiers. These amplifiers condition their input signals by providing AC or DC coupling, x1 or x10 attenuation, + or - slope trigger selection, and continuously variable positive or negative threshold voltage adjustments for trigger level control. A series of high gain amplifiers square the leading and trailing edges of the input signal to provide a digital pulse train representative or the input frequency. The pulse train is interfaced to provide the amplifier with output voltage levels which are TTL compatible.

3-6 The Mode Control Logic accepts the outputs of the CHANNEL A and B amplifiers along with the output of a precision Time Base Generator, and depending on the position of the FUNCTION switch, routes them to the Time Base Divider and/or the Display Counter. The Time Base Divider, when used, divides the Reference Frequency by a selectable power of 10 to provide an Output Period equal to $10^0$ through $10^5$ periods of the Reference Frequency. The selected Output Period controls the time during which the other input frequency is allowed to accumulate or totalize in the Display Counter before being displayed. The Time Base Divider is not used in the A GTD BY B mode. Instead the output of the CHANNEL B amplifier is used to determine the time during which the Display Counter is enabled.

3-7 The Measurement Cycle Logic controls the time between successive measurements, and provides the Display Counter with an Update and Reset command following each measurement cycle. When a measurement is completed, the Display Counter is disabled and an End of Measurement (EOM) command is sent to the Measurement Cycle Logic. The EOM command enables the Cycle Logic causing it to sequentially generate the display Update and Reset pulses. The time between the two pulses is variable depending on the position of the CYCLE RATE control. The display Update pulse enables the display memory to enter the data currently contained in the counter. The new data is immediately transferred to the display LED's. When the cycle rate period is elapsed, the Reset pulse is generated to reset the counter and start a new measurement.

3-8 The Display Counter, when enabled, counts or accumulates each Clock Input pulse received from the Mode Control Logic. The counters are arranged in decade-series fashion and are capable of accumulating nine counts in each of the seven available decades. When the counters are disabled at the end of a measurement, the accumulated data is transferred to a display memory by the action of the Update pulse from the Measurement Logic. The new contents of the updated memory immediately appears on the LED display. As a new measurement is initiated, the Reset pulse resets the counters to zero but does not affect the memory or display. Included on the display are decimal point and measurement units information derived from the FUNCTION and RANGE switch settings.

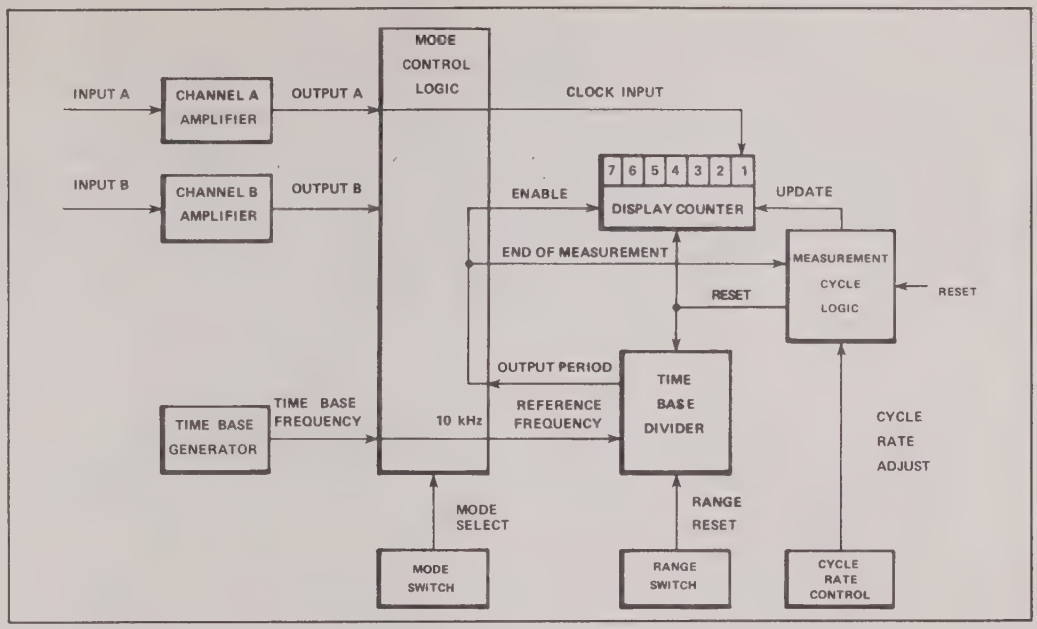


Figure 3-2 . FREQUENCY A FUNCTION,SIMPLIFIED DATA FLOW CHART .

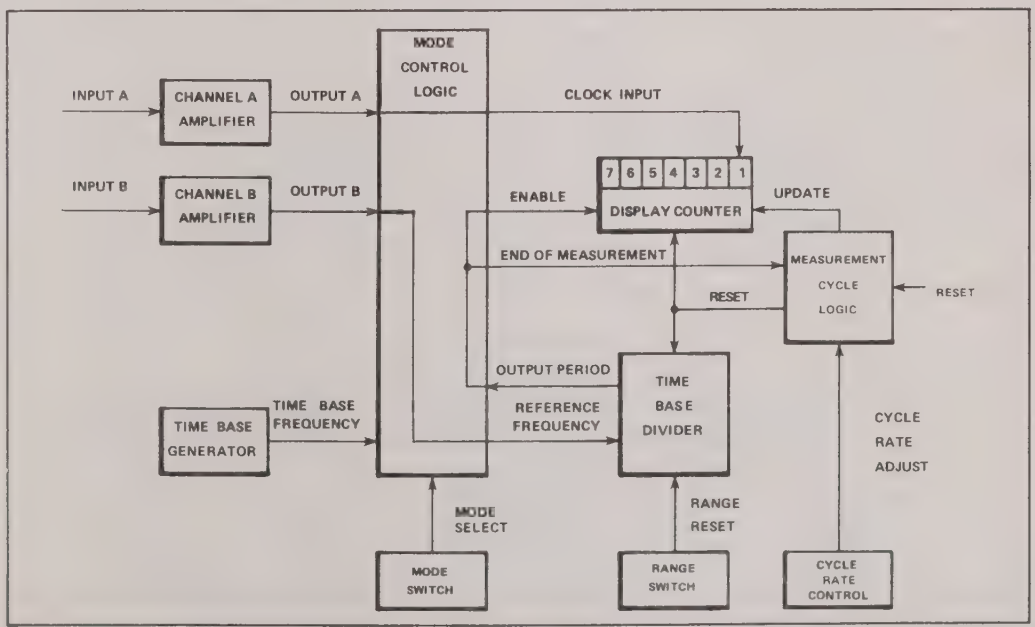


Figure 3-3 . FREQUENCY (A/B)N FUNCTION,SIMPLIFIED DATA FLOW CHART .

3-9 Frequency Mode

3-10 In the frequency mode the counter assumes the configuration shown in Figure 3-2. The input frequency is applied at Input A and routed through the Mode Control Logic to provide the Input Clock for the Display Counter. A 10 kHz Time Base Frequency derived from the Time Base Generator is used as the Reference Frequency for the Time Base Divider. The resulting Output Period generated by the Time Base Divider is selectable by powers of 10 (0.1 ms to 10 s) using the RANGE switch. The precise Output Period is used to enable the Display Counter and allow the Clock Input to accumulate for the specified time. The accumulated count is then displayed as frequency. Frequency resolution is increased as the Output Period of the Time Base Divider is increased.

3-11 Ratio Mode

3-12 In the FREQ (A/B)N mode, ratio measurements are made using the configuration shown in Figure 3-3. The Input A frequency is routed through the Mode Control Logic and used as the Clock Input for the Display Counter. The Input B frequency is routed through the Mode Control Logic and is used as the Reference Frequency to the Time Base Divider. The output of the Time Base Divider can be selected by the RANGE switch to provide an Output Period equal to from $10^0$ to $10^5$ periods of the Reference Frequency. The selected Output Period enables the Display Counter and as a result, the Input A frequency is accumulated for the duration of the Output Period. At the end of the Output Period the Display Counter is disabled and the EOM signal is generated.

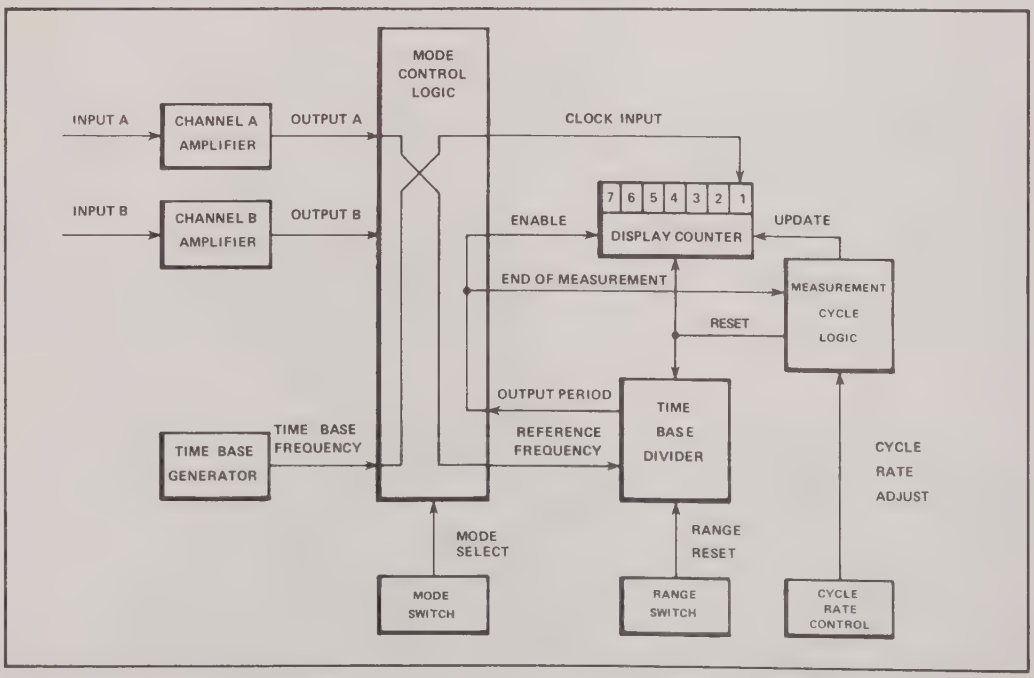


Figure 3-4 . PERIOD A FUNCTION,SIMPLIFIED DATA FLOW CHART .

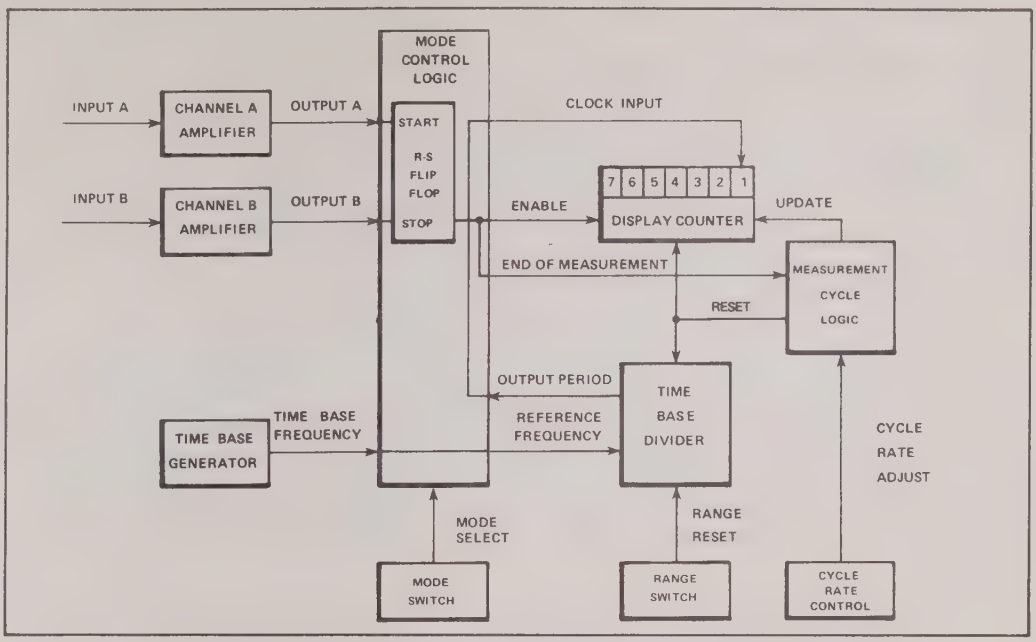


Figure 3-5 . TIME INTERVAL FUNCTION,SIMPLIFIED DATA FLOW CHART .

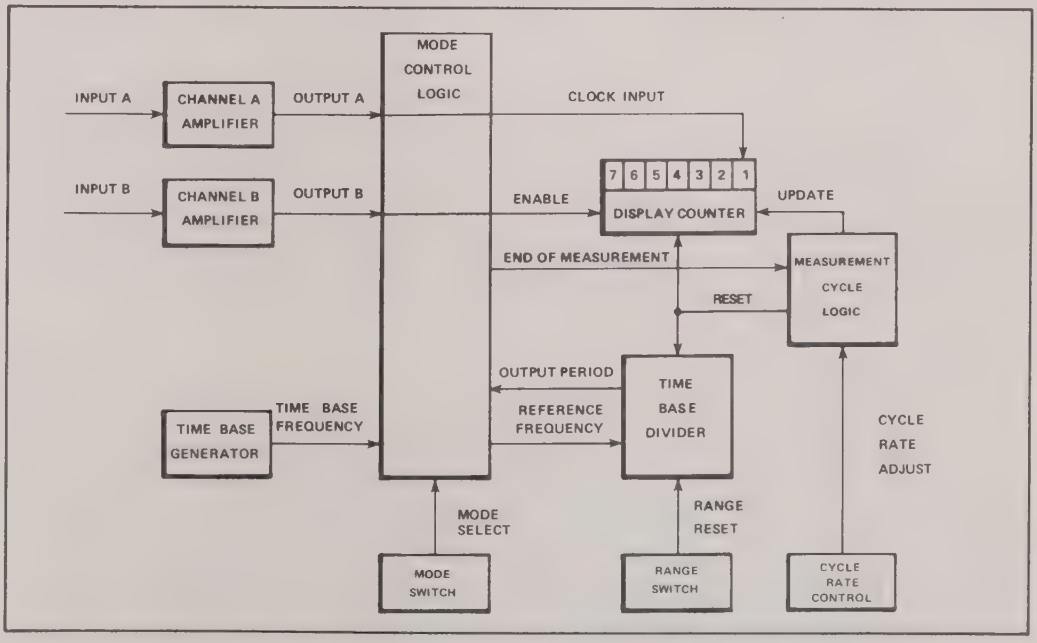


Figure 3-6 . TOTALIZE FUNCTION,SIMPLIFIED DATA FLOW CHART .

3-13 Period Mode

3-14 In the period mode, as shown in Figure 3-4, a 100 kHz signal from the Time Base Generator is routed through the Mode Control Logic and is used as the Clock Input to the Display Counter. This 100 kHz clock is totalized by the counter for multiple periods of the Input A signal. The Time Base Divider receives the Input A signal as the Reference Frequency and provides a timed Output Period equal to $10^0$ through $10^5$ periods of the Reference Frequency. The duration of the Output Period is selectable using the RANGE switch. At the end of the selected Output Period, the Display Counter is disabled and the EOM signal is generated.

3-15 Time Interval

3-16 In the Time Interval mode, as shown in Figure 3-5, the Display Counter accumulates Clock Input pulses for a time interval started by Input A and stopped by Input B. The Clock Input, as received from the Time Base Divider, is selectable by powers of 10 from 10 MHz to 100 Hz. The Reference Frequency for the Time Base Divider is derived from the 10 MHz output of the Time Base Generator.

3-17 The first input transition detected by the CHANNEL A Amplifier sets an R-S flip-flop in the Mode Control Logic and Enables the Display Counter to start accumulating Clock Input pulses. Some time later, the first input transition detected by the CHANNEL B Amplifier resets the R-S flip-flop and disables the Display Counter. At the same time the End of Measurement signal is generated. The accumulated Clock Input pulses give a direct indication of the time interval between the detection of the A and B input signals.

3-18 Totalize Mode

3-19 In the A GTD BY B mode, as shown in Figure 3-6, an Enable signal derived from Input B allows the Display Counter to totalize the Clock Input pulses derived from Input A. The counter, when repeatedly enabled and disabled using the Input B signal, is not reset. Instead, it sequentially totalizes the Clock Input pulses which occur during each enable period. The Display Counter is reset upon receipt of an external Reset command.

3-20 Self Check Mode

3-21 In the Self Check Function, as shown in Figure 3-7, the logic portion of the 1952B is exercised by the Time Base Generator to verify the overall operation of the counter. The 10 kHz output of the Time Base Generator is processed by the Time Base Divider to provide an Output Period which is selectable in powers of 10 time intervals from 0.1 ms to 10 seconds. The selected time interval (GATE t) is used to Enable the counter and allow a 100 kHz Clock Input, also from the Time Base Generator, to be totalized. When the logic portion of the 1952B is operating properly, the totalized count displayed should be 10, 100, 1000, 10000, 100000 or 1000000 depending on the position of the RANGE switch.

3-22 BLOCK DIAGRAM ANALYSIS

3-23 General

3-24 A block diagram analysis of the functional circuits of the 1952B is given in the following paragraphs. The circuits described correspond to the functional blocks defined in Figure 3-1. Detailed schematics are included at the rear of the manual.

3-25 Power Supply

3-26 The Power Supply consists of a 115/230 V ac transformer, associated switches, fuse, power input connector and regulating circuitry. The function of the power supply is to provide + 5 + 11 and - 11 V dc regulated operating voltages for the 1952B circuitry. The + 5 V dc is used to operate the digital portion of the circuitry while the + 11 and - 11 V dc supplies operate the analog portion of the circuitry. All three operating voltages are generated using conventional isolating and regulating techniques. Refer to the schematic, 1952B - 1001, at the rear of this manual.

3-27 Line power to the power supply is received through the rear panel Input Power Connector, Fuse F1, the front panel CYCLE RATE (power) switch and the 115/230 Voltage select switch. The front panel display illuminates when the regulated + 5 V dc is present.

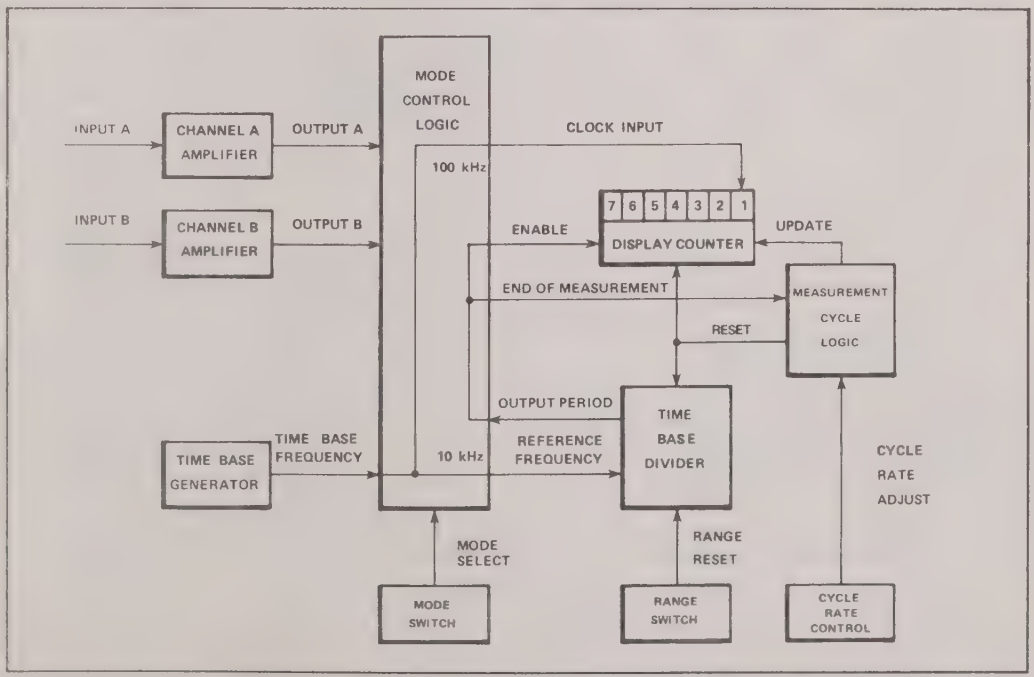


Figure 3-7 . SELF CHECK FUNCTION,SIMPLIFIED DATA FLOW CHART .

3-28 Mode Control Logic

3-29 The mode Control Logic as shown in the schematic at the rear of this manual is controlled by the position of the front panel FUNCTION switch. The truth table given in the schematic defines Inputs to the Mode Control Logic which are required to interconnect the various functional blocks of the 1952B and thus configure each particular operating mode. Each of the possible mode configurations are defined earlier in this section under the overall functional description.

3-30 Channel A and B Amplifiers

3-31 The CHANNEL A and B Amplifiers are electrically similar. Therefore, an analysis of the CHANNEL A amplifier is sufficient to describe both amplifiers.

3-32 The CHANNEL A Amplifier, as shown in Figure 3-8, consists of a high gain differential amplifier, input coupling and attenuator circuits, a Trigger Level Adjust circuit, Slope switch, Status indicators and an inverter. The function of the CHANNEL A Amplifier is to define an acceptable input signal and to produce a TTL compatible, output pulse for each acceptable Input cycle that occurs.

3-33 In operation, front panel slide switches permit the Input signal to be AC or DC coupled and attenuated by a factor of 1 or 10 before being delivered as an input to the high gain

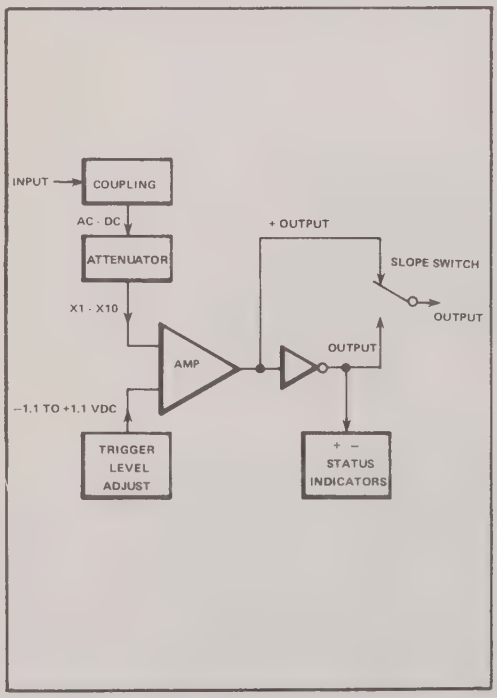


Figure 3-8 . INPUT AMPLIFIER, FUNCTIONAL BLOCK DIAGRAM .

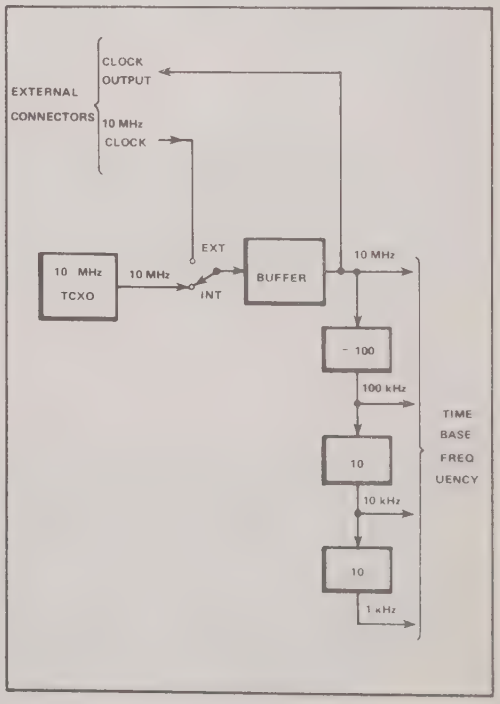


Figure 3-9 . TIME BASE GENERATOR, SIMPLIFIED BLOCK DIAGRAM .

differential amplifier. The high gain amplifier operates as an open loop voltage comparator. The comparators reference voltage is established by the Trigger Level Adjust whose output is continuously adjustable from + 1.1 to - 1.1 V dc. When the input voltage exceeds the reference voltage, the amplifier generates a leading or lagging edge output transition, depending on the position of the Slope Switch. One of the Status Indicators is normally illuminated to indicate the polarity of the input required to produce an output. The illumination pattern is reversed when an output is generated.

3-34 Time Base Generator

3-35 The Time Base Generator, as shown in Figure 3-9, consists of a 10 MHz Crystal Oscillator, a buffer and four BCD counters. The function of the Time Base Generator is to generate four separate output frequencies (10 MHz, 100 kHz, 10 kHz and 1 kHz) using a standard 10 MHz frequency source to the Buffer input. The Buffer, equipped with input overvoltage protection, converts the 10 MHz input signal to a buffered, TTL compatible output. The 100 kHz, 10 kHz and 1 kHz outputs are derived from the 10 MHz output using decade counters operated in series.

3-36 Time Base Divider

3-37 The Time Base Divider, as shown in Figure 3-10, consists of five BCD counters which are connected in series to provide six separate output frequencies. Each frequency is a power of 10 multiple of the Reference Frequency and can be selected for use as an Output Period signal by properly positioning the RANGE switch.

3-38 Display Counter

3-39 The Display Counter, as shown in Figure 3-11, consists of four flip-flops, one LED

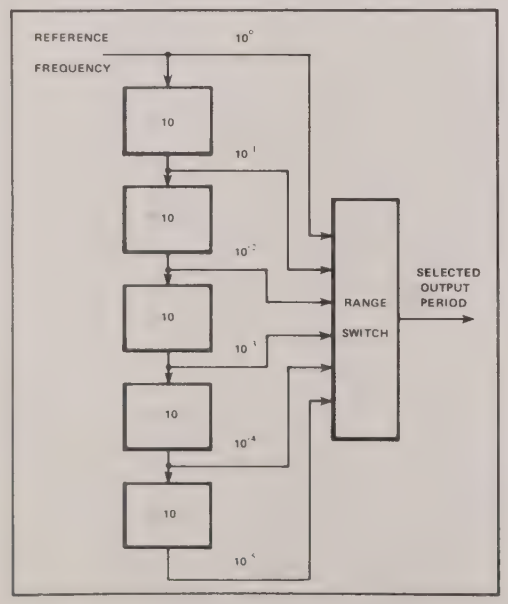


Figure 3-10 . TIME BASE DIVIDER, SIMPLIFIED BLOCK DIAGRAM .

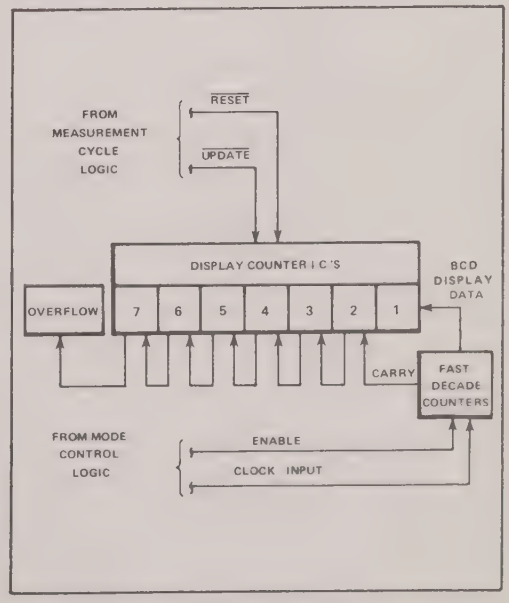


Figure 3-11 . DISPLAY COUNTER, SIMPLIFIED BLOCK DIAGRAM .

and seven Display-Counter (Numeric Display with Logic) IC's. The function of the Display Counter is to totalize, store and display each Clock Input pulse which occurs while the Enable signal is at a logic 1. In operation, seven Display Counter IC's are cascaded to form a seven decade counter. Since the least significant counter decade must be capable of operating at an 80 MHz rate, the counter section of that decade is replaced with a Fast Decade Counter which consists of four separate flip-flops. The Carry output of the Fast Decade Counter is used as a clock input for the second least significant decade while the BCD output of the Fast Decade Counter is used as display data for the least significant decade.

3-40 When the Enable input is at a logic 1, the Clock Input signal is totalized but the accumulated total is not displayed until an Update command (logic 0) is received. The Update command enables a latch in each Display Counter IC to store the output of the associated counter. The data in the latch is displayed as a numeric digit and will continue to be displayed after the Update command is removed. The counters are cleared to zero using the Reset command. Sequentially commanding the Reset and Update commands causes both the counter and display to be set to zero.

3-41 Measurement Cycle Logic

3-42 The Measurement Cycle Logic, as shown in Figure 3-12, consists of a flip-flop, one BCD counter, a one of 10 decoder and an adjustable one-shot. The function of the Measurement Cycle Logic is to interlock and control the actions of both the measurement cycle and the subsequent transfer of accumulated measurement data to the Display Counter readouts. In operation, the BCD counter is initially setting at a count of four indicating that a measurement cycle has been completed and that a Reset command is required to initiate a new measurement. The Reset command can be generated using the manual RESET switch. The manual Reset command resets the counter to zero while the cycle rate one-shot (when timed out) enables the counter to sequence through to the count of nine. The nine count is fedback to the flip-flop and the count sequence is again inhibited. In either event, the reset action initiates a new measurement cycle and causes the BCD counter to be reset to zero by the EOM command. The EOM command remains low for the duration of the measurement cycle and returns to the high state to indicate that the cycle is complete. When the Measurement Cycle is complete, the counter is enabled and advanced by the 500 Hz clock generated by the flip-flop. As count number one is decoded, the Update pulse is generated to transfer accumulated data to the display readout. Count number two is used to trigger the one-shot if the INT - EXT switch is in the INT position. Count number four returns the Measurement Cycle Logic to the initial position. Notice that when the one-shot is used to restart the counter, count number seven is used to generate the Reset pulse.

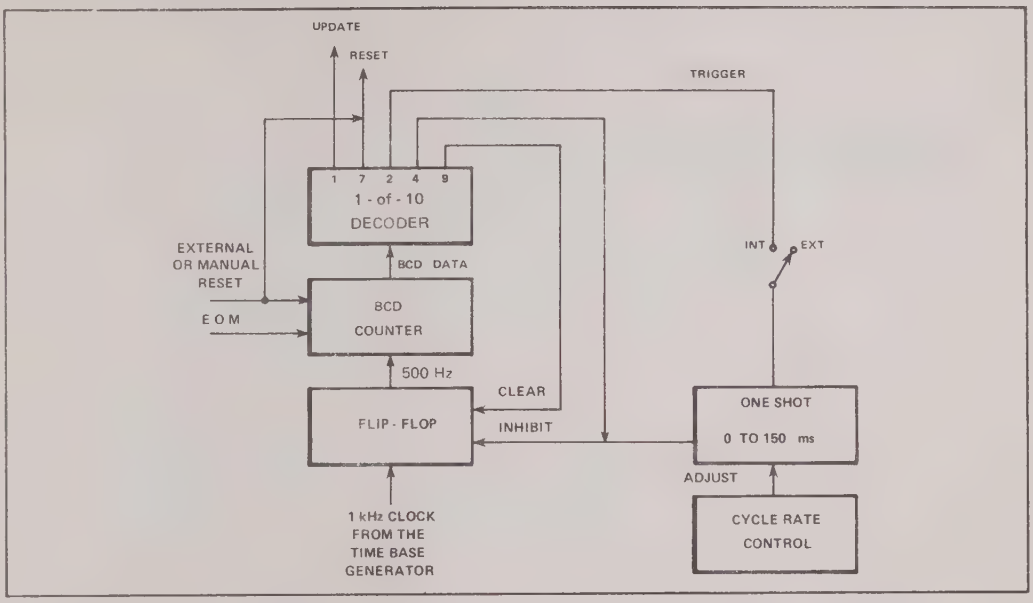


Figure 3-12 . MEASUREMENT CYCLE LOGIC,
SIMPLIFIED BLOCK DIAGRAM .

# Section 4
# Maintenance

4-1 INTRODUCTION

4-2 This section of the manual contains maintenance information for the Model 1952B. This includes service information, general maintenance, performance test, calibration and troubleshooting. The performance test is recommended as a preventative maintenance tool and should be executed every 90 days to verify proper instrument operation. Troubleshooting information is given in the form of flowcharts at the end of this section. Table 4-1 lists the recommended test equipment required for the performance test and troubleshooting.

Table 4-1 EQUIPMENT REQUIRED FOR PERFORMANCE TEST AND TROUBLESHOOTING

| EQUIPMENT TYPE | REQUIRED BASIC SPECIFICATIONS | WHERE USED |
|---|---|---|
| Quartz oscillator frequency standard with 10 or 1 & 5 or 50 MHz output | Short term stability to be better than $1 \times 10^{-8}$<br>Long term stability to be better than $1 \times 10^{-9}$ @ 0 - 50°C ambient temperatures | Time Base Oscillator Adjustment |
| Low Frequency Oscillator | Frequency Range: DC - 10 MHz; Variably attenuated output from 1 mV rms to 1 V or 5 V rms @ 50 ohms output impedance; selectable sinewave and square wave modes; | Performance Check; Calibration |
| High Frequency Oscillator | Frequency Range: 10 MHz - 100 MHz Variably attenuated calibrated output from 1 mV to 1 V or 5 V rms (50 ohms output impedance); CW mode | Performance Check; Calibration |

| EQUIPMENT TYPE | REQUIRED BASIC SPECIFICATIONS | WHERE USED |
|---|---|---|
| RF Millivoltmeter | Frequency Range: 10 kHz - 100 MHz;<br>Voltage Range: 1 mV - 5 V rms<br>Accuracy: Maximum 3% of reading @ 100 MHz + 1% full scale<br>VSWR: Less than 1:1.15<br><br>Power Sensitivity: 200 pW @ 50 ohms<br>Basic Accessories: 50 ohms BNC Adapter; | Peformance Check;<br>Calibration |
| Multimeter | Capable of measuring DC & AC voltage:<br>DC & AC current;<br>Resistance<br><br>DC VOLTAGE RANGE of ± 199.9 mV to ± 1999 V with accuracy better than ± 1% of reading<br><br>AC VOLTAGE RANGE of 199.9 mV to 1999 V with accuracy better than ± 1.5% of reading<br><br>DIRECT CURRENT RANGE of ± 199.9 uA to ± 1999 mA with accuracy better than ± 1% of reading<br><br>ALTERNATING CURRENT RANGE of 199.9 uA to 1999 mA with accuracy better than ± 1.5% of reading<br><br>RESISTANCE RANGE of 199.9 ohms to 19.99 M ohm with accuracy better than ± 1% of reading | Troubleshooting |
| Oscilloscope | DUAL TRACE;<br>100 MHz BANDWIDTH<br>2 mV per division sensitivity;<br>TIME BASE @ 0.05 us/div. with time delay features | Troubleshooting |

## 4-3 SERVICE INFORMATION

4-4 Each instrument that is manufactured by the John Fluke Mfg. Co., Inc. is warranted for a period of one year upon delivery to the original purchaser. The WARRANTY is given on the back of the title page located in the front of this manual.

4-5 Factory authorized calibration and service for each Fluke product is available at various world wide locations. A complete list of these service centers is included with the WARRANTY. Shipping information is given in the operating instructions section of this manual. If requested, an estimate will be provided to the customer before work is begun on instruments that are beyond the warranty period.

## 4-6 GENERAL MAINTENANCE

### 4-7 Access Information

4-8 All PCB assemblies used in the Model 1952B can be accessed for maintenance purposes by removing the top and bottom dust covers from the instrument. Four phillips head screws hold each dust cover in place. Once the top dust cover is removed, the Display-Counter PCB and Switch assemblies can be removed using the procedures outlined in the following paragraphs.

### 4-9 DISPLAY COUNTER PCB ASSEMBLY

4-10 Use the following procedure to remove the Display Counter PCB Assembly from the 1952B.

a. Remove the top and bottom dust covers.

b. Remove the knobs from all front panel controls.

c. Remove the front panel nuts from the FUNCTION, RANGE and RESET switches.

d. Remove the two screws located on both side brackets close to the front panel.

e. Turn the instrument over and unsolder the connections to the CHANNEL A and B, BNC connectors.

f. Unsolder the two wires at the rear of the CYCLE RATE control.

g. Using a rocking motion pull the front panel free of the chassis.

h. Locate and remove the four screws holding the Display Counter PCB Assembly to the front panel.

i. Install the Display Counter PCB Assembly by logically reversing this procedure.

### 4-11 SWITCH PCB ASSEMBLY

4-12 Use the following procedure to remove the Switch PCB Assembly from the 1952B.

a. Complete steps a. through h. of the procedure given for removing the Display Counter PCB Assembly.

b. Pull the Switch PCB Assembly out of the card edge connector.

c. Install the Switch PCB Assembly by logically reversing this procedure.

4-13 Cleaning

4-14 Clean the Model 1952B periodically to remove dust, grease and other contamination. Use the following procedure:

a. Clean the surface of all PCB's using clean dry air at low pressure ( < 120 PSI). If grease is encountered, spray with Freon T.F. Degreaser and remove grime with clean dry air at low pressure.

b. Clean the front panel with a soft cloth dampened with a mild solution of detergent and water.

4-15 Fuse Replacement

4-16 The power fuse F1 is located on the rear panel of the Model 1952B. If replacement is necessary, use the following rated fuses:

a. 1 Amp slo-blo for 115 V ac

b. 1/2 Amp slo-blo for 230 V ac

4-17 Service Tools

4-18 No special tools are required to maintain or repair the Model 1952B Counter/Timer.

4-19 PERFORMANCE TEST

The performance test is designed to verify the overall operation of the Model 1952B. This test can be used as an acceptance check and/or periodic maintenance check. Table 4-1 lists the equipment required to perform this test. If the counter fails any part of the performance test, corrective action is indicated. Troubleshooting information for fault isolation is given later in this section.

4-20 Set-Up Procedure

4-21 Prior to executing the performance test complete the following set-up procedure:

a. Connect the Model 1952B to line power.

b. Rotate the CYCLE RATE control out of the POWER OFF detent and set to the maximum CW position. The front panel display should illuminate.

c. Set the rear panel EXT-INT switch to the INT position.

d. Set the CONT-TRIG switch to the CONT position.

e. Set the CHANNEL A and B Trigger Level Controls to the following positions:

1. Trigger Level Adjust to maximum counter clockwise, PRESET.
2. Slope switch to + (positive).
3. Coupling switch to AC.
4. Attenuator switch to X1.

4-22 Channel A Amplifier Test

4-23 Use the following procedure to test the CHANNEL A Amplifier and Trigger Level Controls:

a. Complete the Set-Up Procedure.

b. Connect a 2 V rms, 1 kHz signal source to CHANNEL A input connector.

c. Observe the CHANNEL A Status Indicators. Both should be illuminated.

d. Change the settings of the Slope, Coupling and Attenuator switches associated with CHANNEL A. The Status Indicators should both remain on.

e. Set the Attenuator switch to the X10 position and the Coupling switch to the AC position.

f. Move the Trigger Level Adjust just out of the Preset detent. The + Status Indicator should be on and the - indicator should be off.

g. Move the Trigger Level Adjust CW to the center of its travel. Both Status Indicators should be lit.

h. Move the Trigger Level Adjust to the maximum CW position. The - Status Indicator should be on the + indicator should be off.

4-24 Channel B Amplifier Test

4-25 Test the CHANNEL B amplifier using the general procedure given in the previous paragraph for testing the CHANNEL A amplifier. Substitute CHANNEL B in all cases where CHANNEL A is mentioned.

4-26 Display Test

4-27 Test the front panel display using the following procedure:

a. Complete the Set-Up Procedure.

b. Refer to Table 4-2 and sequentially select each of the RANGE switch settings for each setting of the FUNCTION switch. As each range is selected ensure that the numeric readout, decimal point location and measurement units are correctly displayed.

c. Set the FUNCTION switch to the A GTD.BY B position.

d. Connect a 1 V rms, 5 Hz signal source to the CHANNEL A Input Connector.

e. Set the CHANNEL A Coupling switch to DC.

f. Rotate the CHANNEL B Trigger Level Adjust CW out of the preset position until the display begins to accumulate the CHANNEL A input frequency. As each count is received, observe the least significant decade and ensure that each number is properly displayed.

g. Slowly increase the input frequency as necessary to check the operation of each decade. When all display decades reach a count of nine, the next input signal will overflow the counter and cause the display to read all zeros. In addition, an OVERFLOW LED is illuminated to indicate that the counter capability has been exceeded.

h. Press the RESET button. The display should reset to zero and the OVERFLOW indicator should be turned off. When the button is released the totalizing process starts over.

TABLE 4-2. RANGE DISPLAY INFORMATION FOR AVAILABLE FUNCTIONS

| MODE | RANGE INDICATIONS | DISPLAY FOR AVAILABLE RANGE SETTINGS | | | | | |
|---|---|---|---|---|---|---|---|
| FREQ. A | GATE t<br>DISPLAY<br>MEAS. UNITS | 0.1 ms<br>.00<br>MHz | 1.0 ms<br>.000<br>MHz | 10 ms<br>.0000<br>MHz | 0.1 s<br>.00<br>kHz | 1.0 s<br>.000<br>kHz | 10 s<br>.0000<br>kHz |
| FREQ.(A/B)N | PER. AVGD.<br>DISPLAY<br>MEAS. UNITS | $10^0$<br>0<br>NONE | $10^1$<br>0<br>NONE | $10^2$<br>0<br>NONE | $10^3$<br>0<br>NONE | $10^4$<br>0<br>NONE | $10^5$<br>0<br>NONE |
| PERIOD A | PER. AVGD.<br>DISPLAY<br>MEAS. UNITS | $10^0$<br>.00<br>ms | $10^1$<br>.000<br>ms | $10^2$<br>.0000<br>ms | $10^3$<br>.00<br>us | $10^4$<br>.000<br>us | $10^5$<br>.0000<br>us |
| T.I. A-B | T.I. RES<br>DISPLAY<br>MEAS. UNITS | .1 us<br>.0000<br>ms | 1 us<br>.000<br>ms | 10 us<br>.00<br>ms | 0.1 ms<br>.0000<br>s | 1.0 ms<br>.000<br>s | 10 ms<br>.00<br>s |
| A GTD.BY B | RANGE<br>DISPLAY<br>MEAS. UNITS | N/A<br>NONE<br>NONE | N/A<br>NONE<br>NONE | N/A<br>NONE<br>NONE | N/A<br>NONE<br>NONE | N/A<br>NONE<br>NONE | N/A<br>NONE<br>NONE |
| SELF CHECK | GATE t<br>DISPLAY<br>MEAS. UNITS | 0.1 ms<br>10<br>NONE | 1.0 ms<br>100<br>NONE | 10 ms<br>1000<br>NONE | 0.1 s<br>10000<br>NONE | 1.0 s<br>100 000<br>NONE | 10 s<br>1000 000<br>NONE |

4-28 Frequency A Test

4-29 Test the Frequency A mode using the following procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the FREQ A position.

c. Connect a 1 V rms, 100 kHz signal source to the CHANNEL A Input Connector.

d. Set the RANGE switch to each of the GATE t positions listed in Table 4-3 and ensure the numeric and measurement units display are reading correctly.

Table 4-3. DISPLAY READOUT FOR FREQUENCY A TEST.

| GATE t SETTING | NUMERIC READOUT* | MEASUREMENT UNITS |
|---|---|---|
| 0.1 ms | .10 | MHz |
| 1.0 ms | .100 | MHz |
| 10 ms | .1000 | MHz |
| 0.1 s | 100.00 | kHz |
| 1.0 s | 100.000 | kHz |
| 10 s | 100.0000 | kHz |

* The accuracy of the numeric readout is dependent on the frequency accuracy of the 100 kHz signal source.

4-30 Ratio Test

4-31 Test the Frequency (A/B)N ratio mode using the following procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the FREQ (A/B)N position.

c. Set the SEP - COM switch to the COM position.

d. Connect a 1 V rms, 100 kHz signal source to the CHANNEL A Input Connector.

e. Set the RANGE switch to each of the PER.AVGD (period averaged) positions listed in Table 4-4 and ensure that the display readout is correct for each position. Decimal point and measurement units information are not displayed in the ratio mode.

Table 4-4. DISPLAY READOUT FOR RATIO FUNCTION TEST.

| PER AVGD. SETTING** | NUMERIC READOUT |
|---|---|
| $10^0$ | 1 |
| $10^1$ | 10 |
| $10^2$ | 100 |
| $10^3$ | 1000 |
| $10^4$ | 10000 |
| $10^5$ | 100000 |

** A ratio of 1 is indicated in all cases. The decimal point is determined by starting at the right of the readout

counting to the left the number of places indicated by the exponent for the PER.AVGD. setting.

4-32 Period A Test

4-33 Check the period A mode using the following procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the FREQ A position.

c. Connect a 1 V rms, 10 kHz signal source to the CHANNEL A Input Connector.

d. Set the RANGE switch to the 10 s position and adjust the signal source to produce a display of 10.0000 kHz on the 1952B.

e. Set the FUNCTION switch to the PERIOD A position.

f. Set the RANGE switch to each of the PER.AVGD. positions listed in Table 4-5 and ensure that the display readout is correct for each position.

Table 4-5. DISPLAY READOUTS FOR PERIOD A TEST

| PER.AVGD. SETTINGS | NUMERIC READOUT* | MEASUREMENT UNITS |
|---|---|---|
| $10^0$ | .10 | ms |
| $10^1$ | .100 | ms |
| $10^2$ | .1000 | ms |
| $10^3$ | 100.00 | us |
| $10^4$ | 100.000 | us |
| $10^5$ | 100.0000 | us |

* The accuracy of the readout is dependent on the frequency accuracy of the 10 kHz signal source.

4-34 Time Interval Test

4-35 Test the time interval mode using the following procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the FREQ A position.

c. Connect a 1 V rms, 100 Hz signal source to the CHANNEL A Input Connector.

d. Set the RANGE switch to the 10 s position and adjust the signal source to produce a display of 0.1000 kHz on the 1952B.

e. Set the FUNCTION switch to the T.I. A-B position.

f. Set the SEP - COM switch to the COM position.

g. Set the RANGE switch to each of the T.I. RES. (time interval resolution) positions listed in Table 4-6 and ensure that the display readout is correct for each position.

Table 4-6. DISPLAY READOUTS FOR TIME INTERVAL TEST

| T.I. RES SETTING | NUMERIC READOUT* | MEASUREMENT UNITS |
|---|---|---|
| 0.1 us | 10.0000 | ms |
| 1.0 us | 10.000 | ms |
| 10 us | 10.00 | ms |
| 0.1 ms | .0100 | s |
| 1.0 ms | .010 | s |
| 10 ms | .01 | s |

* The accuracy of the readout is dependent on the frequency accuracy of the 100 Hz signal source.

4-36 Totalize Test

4-37 Test the totalize mode (A gated by B) using the following procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the A GTD BY B position.

c. Connect a 1 V rms, 100 Hz signal source to the CHANNEL A Input Connector.

d. Rotate the CHANNEL B Trigger Level Adjust out of the detent position until the -(minus) Status Indicator is illuminated.

e. Press the RESET button. The display should return to 0 (zero). Decimal point and measurement units are not displayed.

f. Rotate the CHANNEL B Trigger Level Adjust until the + (plus) Status Indicator is illuminated. The counter should begin to accumulate and display the 100 Hz input frequency present on the CHANNEL A Input Connector.

g. Rotate the CHANNEL B Trigger Level Adjust until the - Status Indicator is illuminated. The counter should stop and display the accumulated total.

h. Repeat steps f. and g. above. The accumulation process should continue as long as the + Status Indicator is illuminated. Notices that as steps f. and g. are repeated the displayed total is not reset. Instead, new inputs are added to the previous total.

4-38 Self Check Test

4-39 Test the self check mode using the following Procedure:

a. Complete the Set-Up Procedure.

b. Set the FUNCTION switch to the SELF CHECK position.

c. Set the RANGE switch to each of the GATE t positions listed in Table 4-7 and ensure that the display readout is correct for each position. Decimal point and measurement units are not displayed.

Table 4-7. DISPLAY READOUT FOR SELF CHECK TEST

| GATE t SETTINGS | NUMERIC READOUT |
|---|---|
| 0.1 ms | 10 |
| 1.0 ms | 100 |
| 10 ms | 1000 |
| 0.1 s | 10000 |
| 1.0 s | 100000 |
| 10 s | 1000000 |

4-40 CALIBRATION

4-41 The Model 1952B should be calibrated every 90 days or whenever repairs have been made. Calibration should be done at an ambient room temperature of $25^{o}C \pm 5^{o}C$. Table 4-1 lists the required equipment.

4-42 Trigger Level Preset Adjust

4-43 Use the following procedure to calibrate the CHANNEL A and B preset trigger levels:

a. Remove the top dust cover from the Model 1952B.

b. Connect the 1952B to line power.

c. Turn-on the 1952B using the CYCLE RATE switch.

d. Set the CHANNEL A and B Attenuator switches to the X10 position.

e. Turn the CHANNEL A and B Trigger Level Controls to the maximum counter-clockwise position (PRESET).

f. Locate the potentiometer directly behind the CHANNEL A Trigger Level Adjust on the main PCB Assembly.

g. Using a suitable screw driver, rotate the potentiometer until the CHANNEL A -(negative) Status indicator is illuminated. Reverse direction, and slowly turn the pot until the + (positive) Status Indicator just turns-on.

h. Click the CHANNEL A Trigger Level Adjust in and out of the PRESET detent. The + Status indicator should always illuminate in the preset detent.

i. Locate the potentiometer directly behind the CHANNEL B Trigger Level Adjust on the main PCB Assembly.

j. Calibrate the CHANNEL B preset trigger level using the procedures given in steps g. and h. above. Substitute CHANNEL B where CHANNEL A is mentioned.

4-44 Timebase Adjust

4-45 Calibrate the 10 MHz timebase oscillator using the following procedure:

a. Remove the top dust cover from the Model 1952B.

b. Connect the 1952B to line power.

c. Turn-on the 1952B using the POWER/CYCLE RATE switch.

d. Set the FUNCTION switch to the FREQ A position.

e. Set the CONT - TRIG switch to the CONT position.

f. Connect the 1 MHz frequency standard to the CHANNEL A Input Connector.

g. Adjust the CHANNEL A trigger level controls to establish the desired trigger condition. Proper triggering occurs when the + and - Status Indicators are both illuminated.

h. Set the RANGE switch to the 10 s GATE t position.

i. Press and release the RESET switch. After ten seconds the 1952B should display a count of 000.0000 Hz and the OVERFLOW LED should be illuminated.

j. If the display is incorrect, locate the TIMEBASE adjustment at the BOTTOM rear of the Main Board PCB Assembly, and using an insulated tuning tool, adjust the oscillator tuning screw.

k. Repeat steps i. and j. of this procedure until the proper display is obtained.

4-46 TROUBLESHOOTING

4-47 The following information is designed to aid in troubleshooting the Model 1952B. Fault isolation is achieved by executing the performance test and isolating the problem to a functional logic group using troubleshooting flowcharts. The flowchart symbols are defined in Figure 4-1 and the troubleshooting flowcharts are given in Figure 4-2.

Figure 4-1. TROUBLESHOOTING FLOWCHART SYMBOLS

INTERCONNECTS FLOWCHART SYMBOLS AND INDICATES THE DIRECTION OF PROCEDURE FLOW.

A TERMINAL POINT - USED TO INDICATE A START, STOP OR INTERRUPT OF PROCEDURE FLOW.

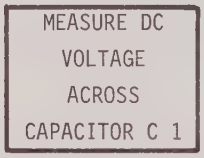


INSTRUCTION OR PROCEDURAL STEP.

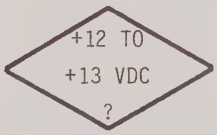


DECISION REQUIRED - ALWAYS ASK A QUESTION - THE FLOW FROM THE SYMBOL IS DEPENDENT UPON THE DECISION MADE - USUALLY YES (GO) OR NO (NO GO), BUT MAY HAVE THREE POSSIBILITIES (eg. HIGH, LOW, NORMAL).

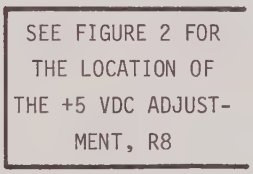


ANNOTATION - PROVIDES ADDITIONAL INFORMATION FOR THE SYMBOL TO WHICH IT IS CONNECTED. ALWAYS CONNECTED BY A DASHED LINE.

CONNECTOR - EXIT TO, OR ENTRY FROM, ANOTHER PART OF THE FLOWCHART (ASSOCIATED ARROWHEAD SHOWS WHICH).

PREDEFINED PROCESS - INDICATES THAT THE PROCEDURE TO BE PERFORMED IS DESCRIBED ELSEWHERE.

Figure 4-2. TROUBLESHOOTING FLOWCHART (Sheet 1 of 6)

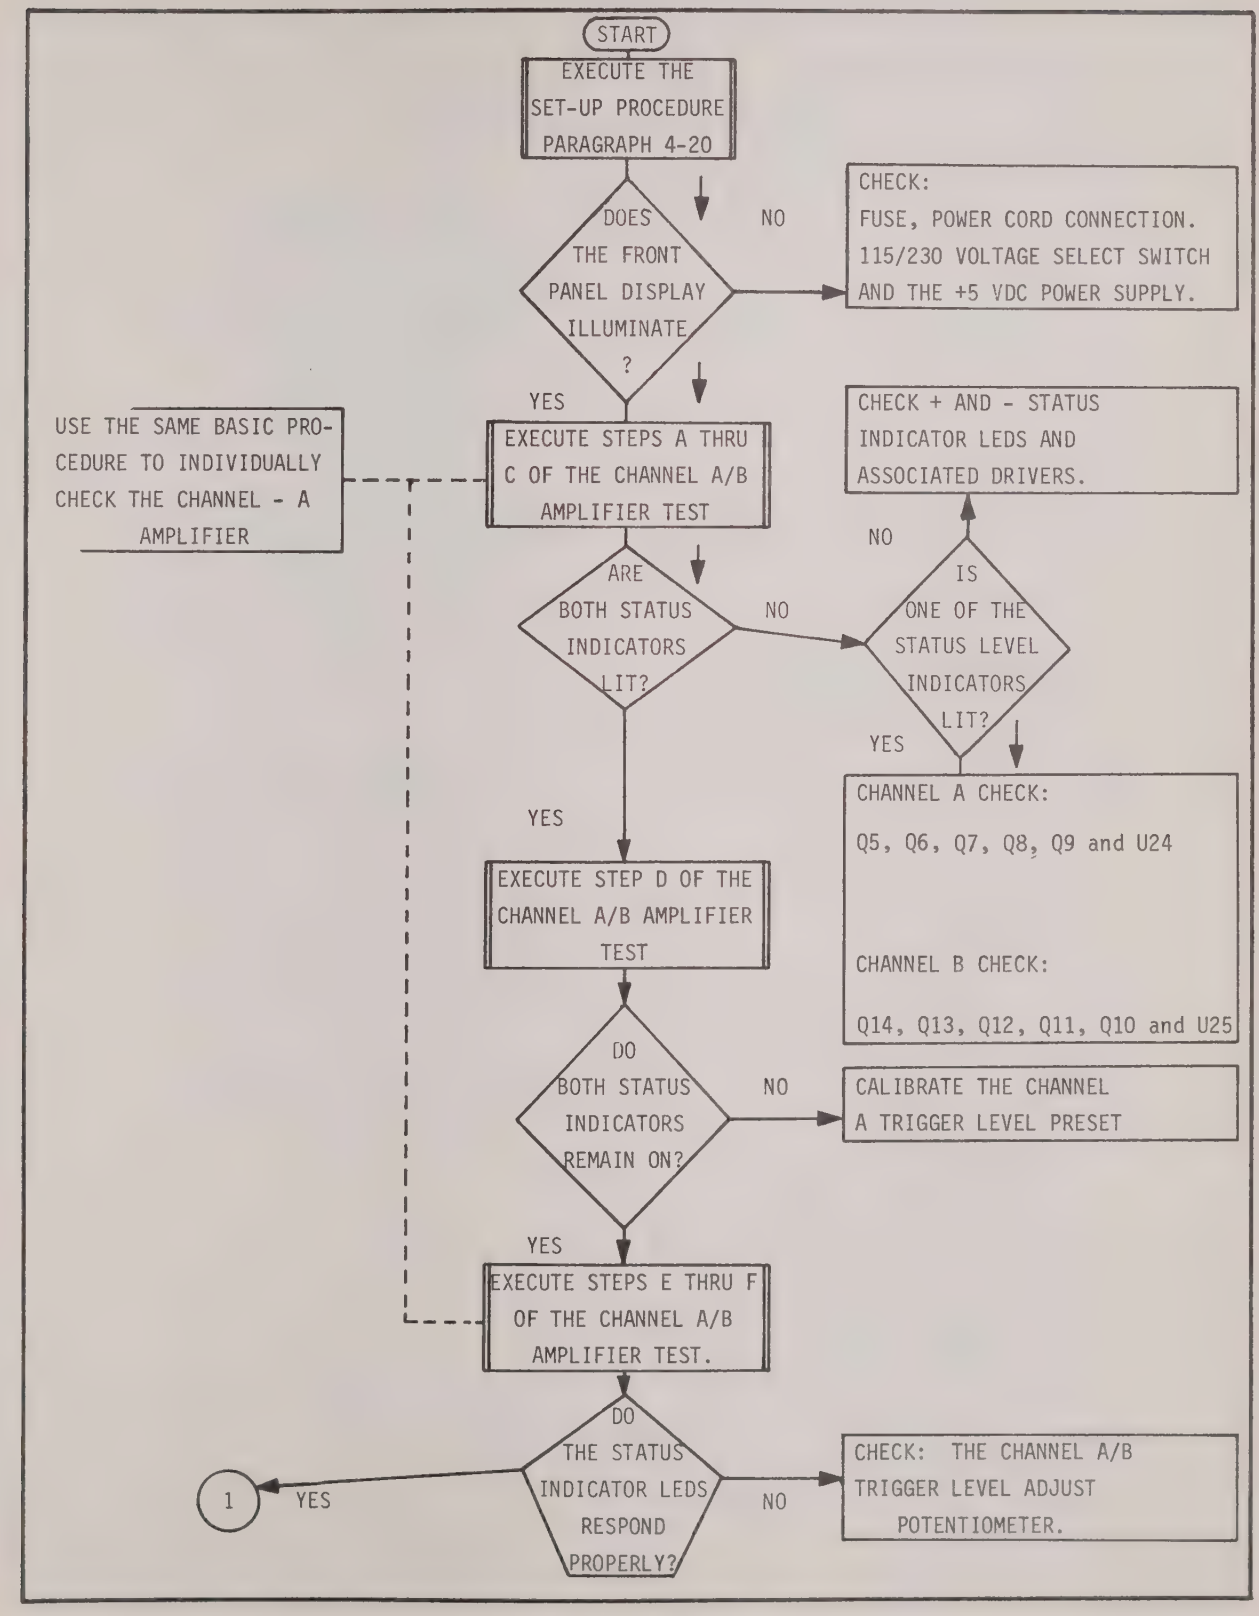
START
EXECUTE THE SET-UP PROCEDURE PARAGRAPH 4-20
DOES THE FRONT PANEL DISPLAY ILLUMINATE ?
NO
CHECK: FUSE, POWER CORD CONNECTION. 115/230 VOLTAGE SELECT SWITCH AND THE +5 VDC POWER SUPPLY.
YES
USE THE SAME BASIC PROCEDURE TO INDIVIDUALLY CHECK THE CHANNEL - A AMPLIFIER
EXECUTE STEPS A THRU C OF THE CHANNEL A/B AMPLIFIER TEST
CHECK + AND - STATUS INDICATOR LEDS AND ASSOCIATED DRIVERS.
NO
ARE BOTH STATUS INDICATORS LIT?
NO
IS ONE OF THE STATUS LEVEL INDICATORS LIT?
YES
CHANNEL A CHECK:
Q5, Q6, Q7, Q8, Q9 and U24
CHANNEL B CHECK:
Q14, Q13, Q12, Q11, Q10 and U25
YES
EXECUTE STEP D OF THE CHANNEL A/B AMPLIFIER TEST
DO BOTH STATUS INDICATORS REMAIN ON?
NO
CALIBRATE THE CHANNEL A TRIGGER LEVEL PRESET
YES
EXECUTE STEPS E THRU F OF THE CHANNEL A/B AMPLIFIER TEST.
DO THE STATUS INDICATOR LEDS RESPOND PROPERLY?
NO
CHECK: THE CHANNEL A/B TRIGGER LEVEL ADJUST POTENTIOMETER.
1
YES

Figure 4-2. TROUBLESHOOTING FLOWCHART (Sheet 2 of 6)

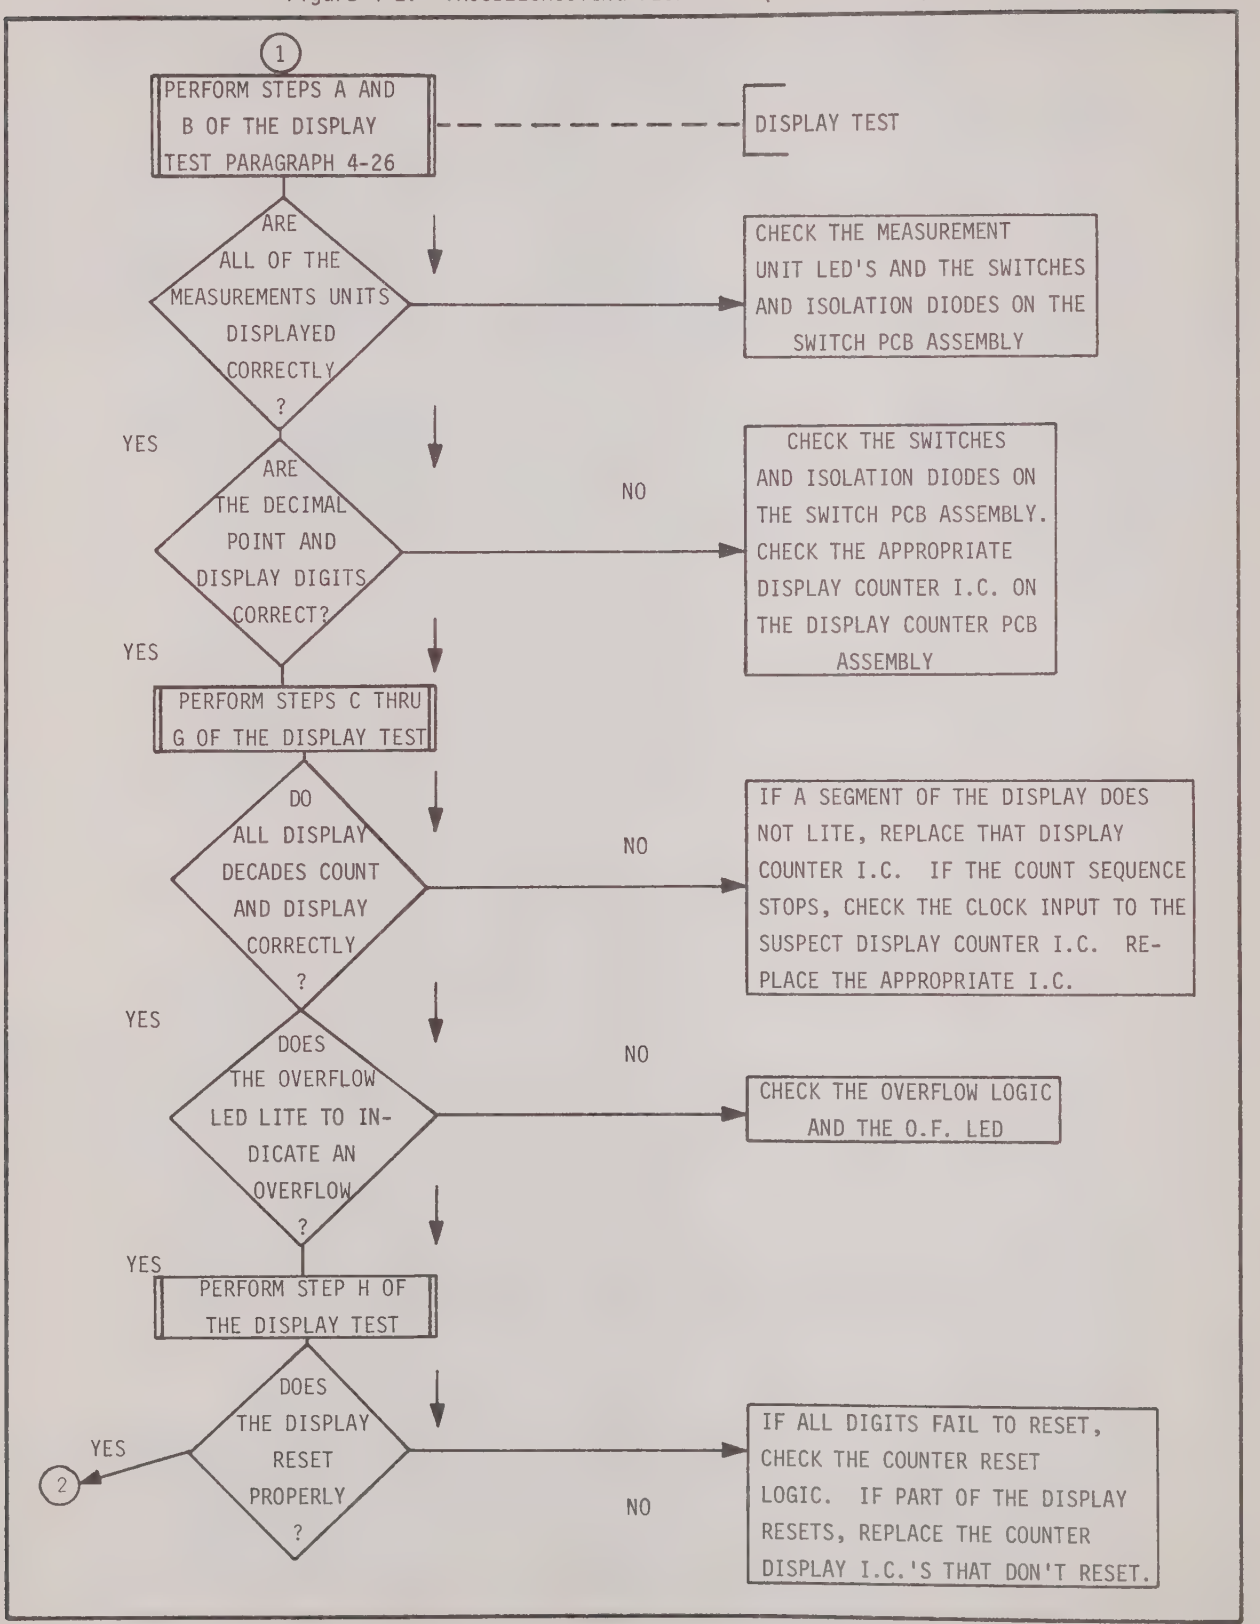
1
PERFORM STEPS A AND B OF THE DISPLAY TEST PARAGRAPH 4-26
DISPLAY TEST
ARE ALL OF THE MEASUREMENTS UNITS DISPLAYED CORRECTLY ?
CHECK THE MEASUREMENT UNIT LED'S AND THE SWITCHES AND ISOLATION DIODES ON THE SWITCH PCB ASSEMBLY
YES
ARE THE DECIMAL POINT AND DISPLAY DIGITS CORRECT?
NO
CHECK THE SWITCHES AND ISOLATION DIODES ON THE SWITCH PCB ASSEMBLY. CHECK THE APPROPRIATE DISPLAY COUNTER I.C. ON THE DISPLAY COUNTER PCB ASSEMBLY
YES
PERFORM STEPS C THRU G OF THE DISPLAY TEST
DO ALL DISPLAY DECADES COUNT AND DISPLAY CORRECTLY ?
NO
IF A SEGMENT OF THE DISPLAY DOES NOT LITE, REPLACE THAT DISPLAY COUNTER I.C. IF THE COUNT SEQUENCE STOPS, CHECK THE CLOCK INPUT TO THE SUSPECT DISPLAY COUNTER I.C. REPLACE THE APPROPRIATE I.C.
YES
DOES THE OVERFLOW LED LITE TO INDICATE AN OVERFLOW ?
NO
CHECK THE OVERFLOW LOGIC AND THE O.F. LED
YES
PERFORM STEP H OF THE DISPLAY TEST
DOES THE DISPLAY RESET PROPERLY ?
YES
2
NO
IF ALL DIGITS FAIL TO RESET, CHECK THE COUNTER RESET LOGIC. IF PART OF THE DISPLAY RESETS, REPLACE THE COUNTER DISPLAY I.C.'S THAT DON'T RESET.

Figure 4-2. TROUBLESHOOTING FLOWCHART (Sheet 3 of 6)

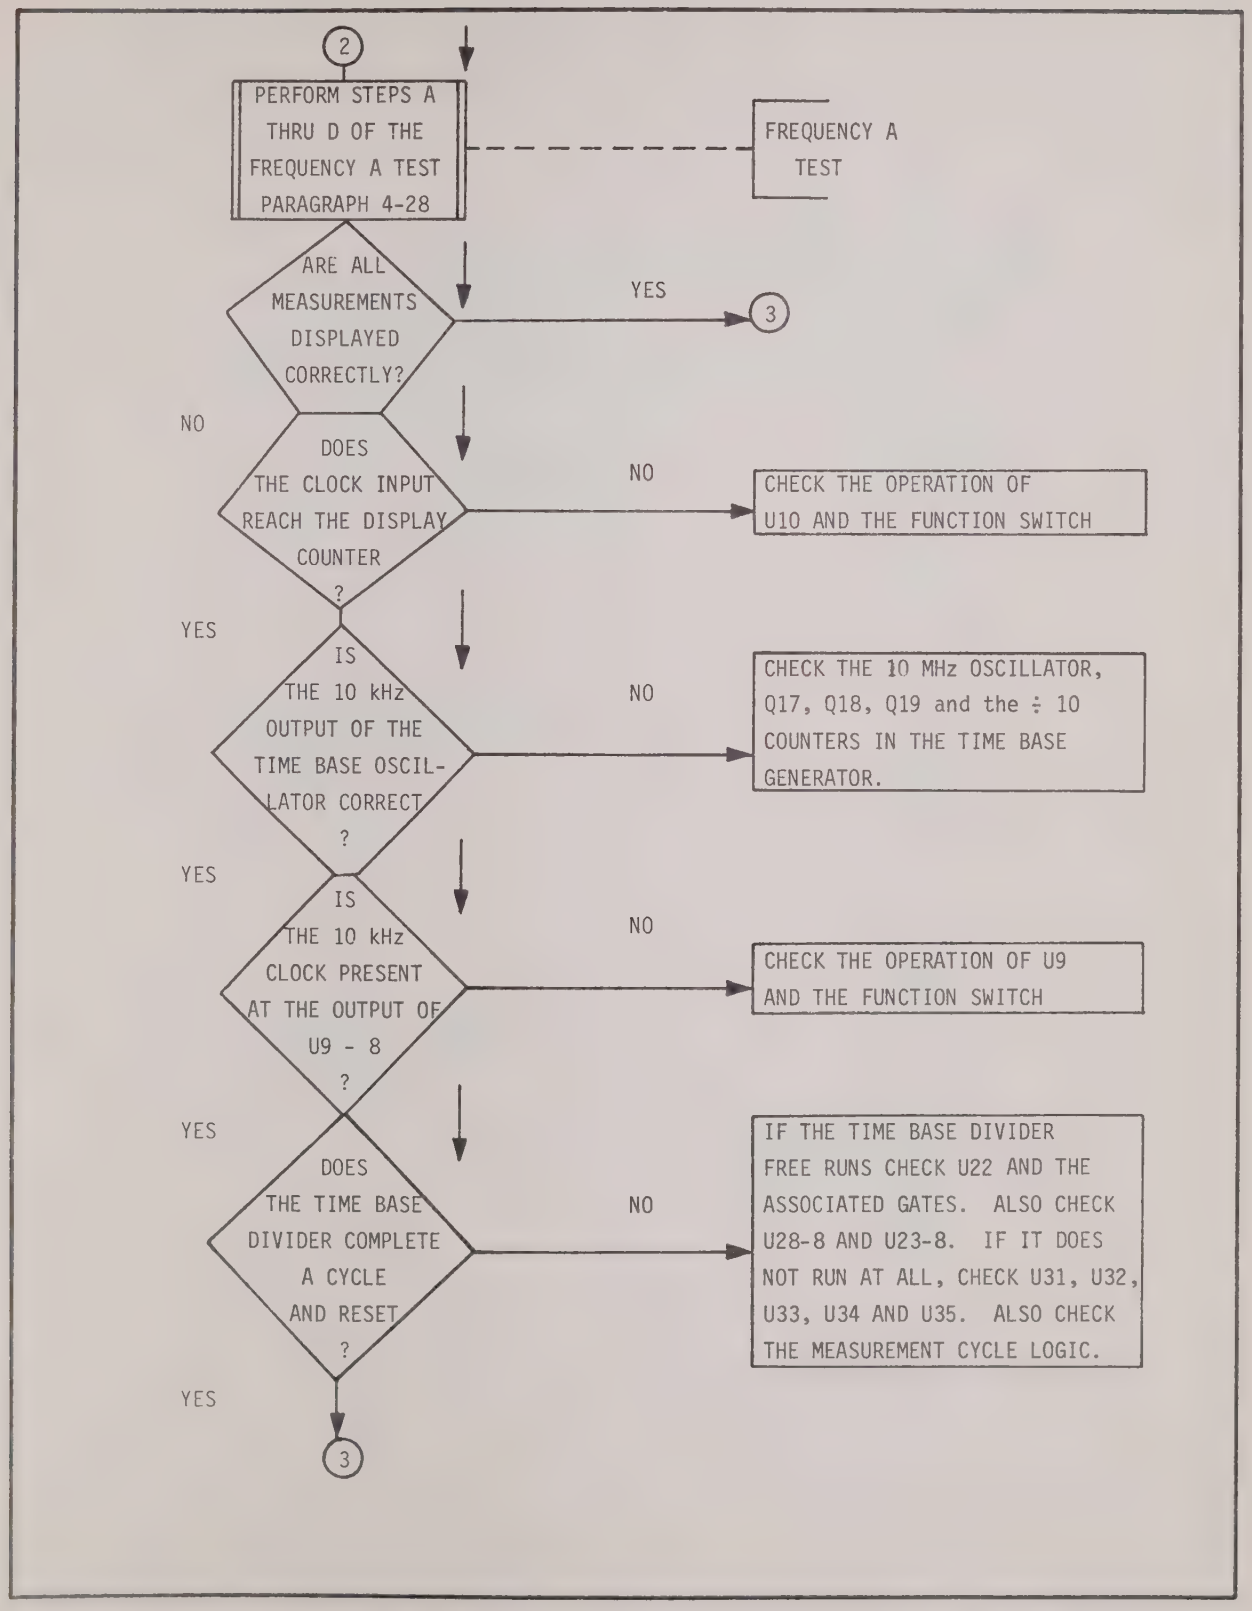
2
PERFORM STEPS A THRU D OF THE FREQUENCY A TEST PARAGRAPH 4-28
FREQUENCY A TEST
ARE ALL MEASUREMENTS DISPLAYED CORRECTLY?
YES
3
NO
DOES THE CLOCK INPUT REACH THE DISPLAY COUNTER ?
NO
CHECK THE OPERATION OF U10 AND THE FUNCTION SWITCH
YES
IS THE 10 kHz OUTPUT OF THE TIME BASE OSCILLATOR CORRECT ?
NO
CHECK THE 10 MHz OSCILLATOR, Q17, Q18, Q19 and the ÷ 10 COUNTERS IN THE TIME BASE GENERATOR.
YES
IS THE 10 kHz CLOCK PRESENT AT THE OUTPUT OF U9 - 8 ?
NO
CHECK THE OPERATION OF U9 AND THE FUNCTION SWITCH
YES
DOES THE TIME BASE DIVIDER COMPLETE A CYCLE AND RESET ?
NO
IF THE TIME BASE DIVIDER FREE RUNS CHECK U22 AND THE ASSOCIATED GATES. ALSO CHECK U28-8 AND U23-8. IF IT DOES NOT RUN AT ALL, CHECK U31, U32, U33, U34 AND U35. ALSO CHECK THE MEASUREMENT CYCLE LOGIC.
YES
3

Figure 4-2. TROUBLESHOOTING FLOWCHARTS (Sheet 4 of 6)

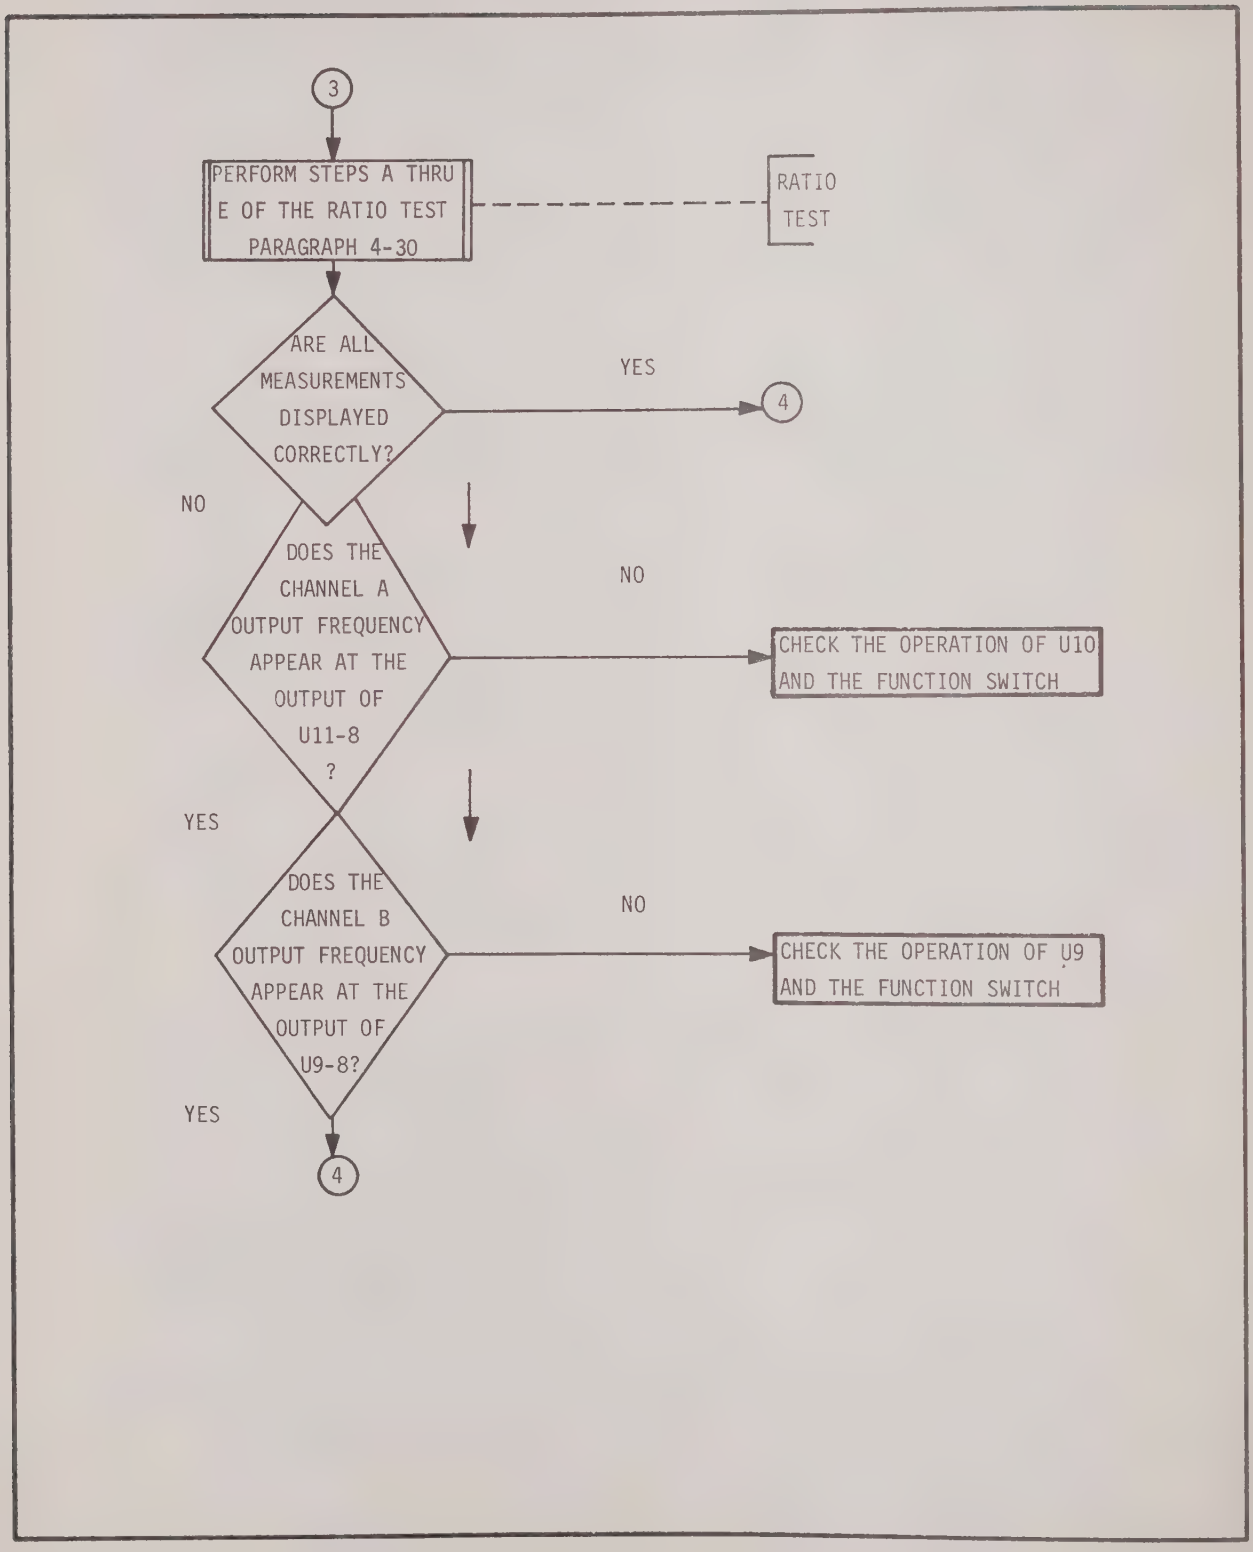
3
PERFORM STEPS A THRU E OF THE RATIO TEST PARAGRAPH 4-30
RATIO TEST
ARE ALL MEASUREMENTS DISPLAYED CORRECTLY?
YES
4
NO
DOES THE CHANNEL A OUTPUT FREQUENCY APPEAR AT THE OUTPUT OF U11-8 ?
NO
CHECK THE OPERATION OF U10 AND THE FUNCTION SWITCH
YES
DOES THE CHANNEL B OUTPUT FREQUENCY APPEAR AT THE OUTPUT OF U9-8?
NO
CHECK THE OPERATION OF U9 AND THE FUNCTION SWITCH
YES
4

Figure 4-2. TROUBLESHOOTING FLOWCHARTS (Sheet 5 of 6)

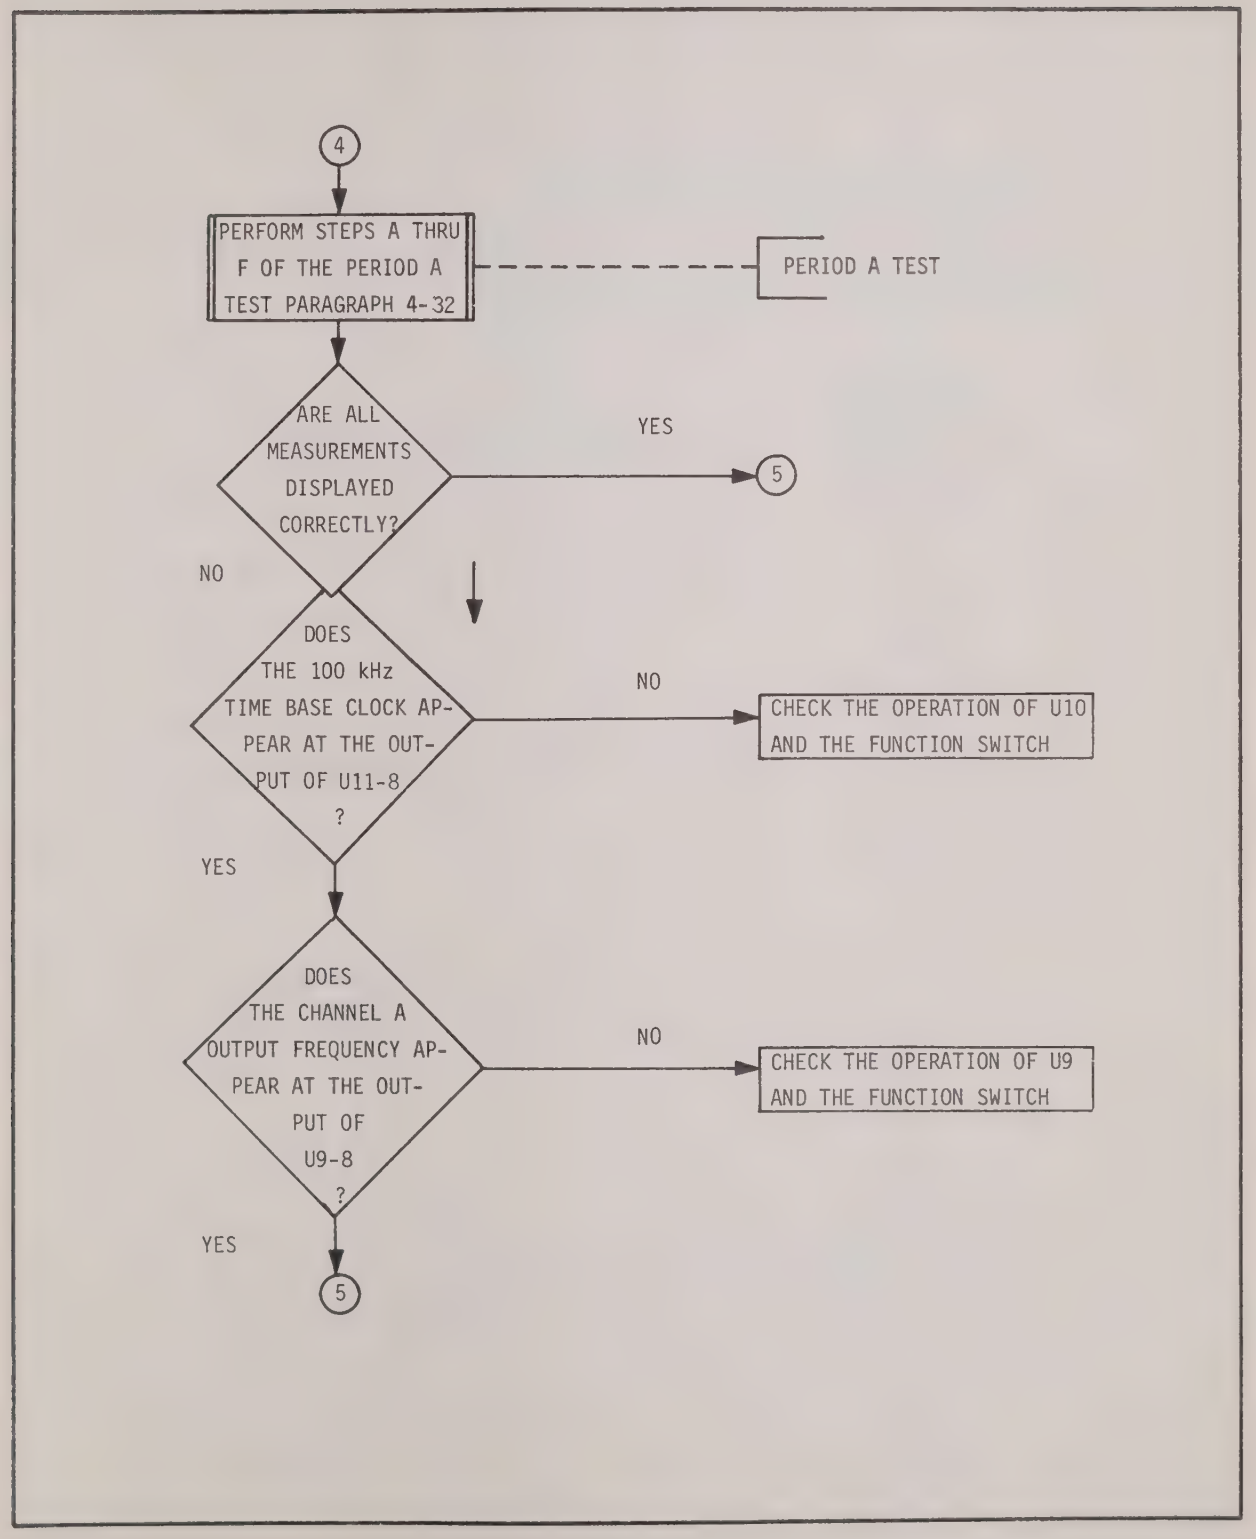
4
PERFORM STEPS A THRU F OF THE PERIOD A TEST PARAGRAPH 4-32
PERIOD A TEST
ARE ALL MEASUREMENTS DISPLAYED CORRECTLY?
YES
5
NO
DOES THE 100 kHz TIME BASE CLOCK APPEAR AT THE OUTPUT OF U11-8 ?
NO
CHECK THE OPERATION OF U10 AND THE FUNCTION SWITCH
YES
DOES THE CHANNEL A OUTPUT FREQUENCY APPEAR AT THE OUTPUT OF U9-8 ?
NO
CHECK THE OPERATION OF U9 AND THE FUNCTION SWITCH
YES
5

Figure 4-2. TROUBLESHOOTING FLOWCHARTS (Sheet 6 of 6)

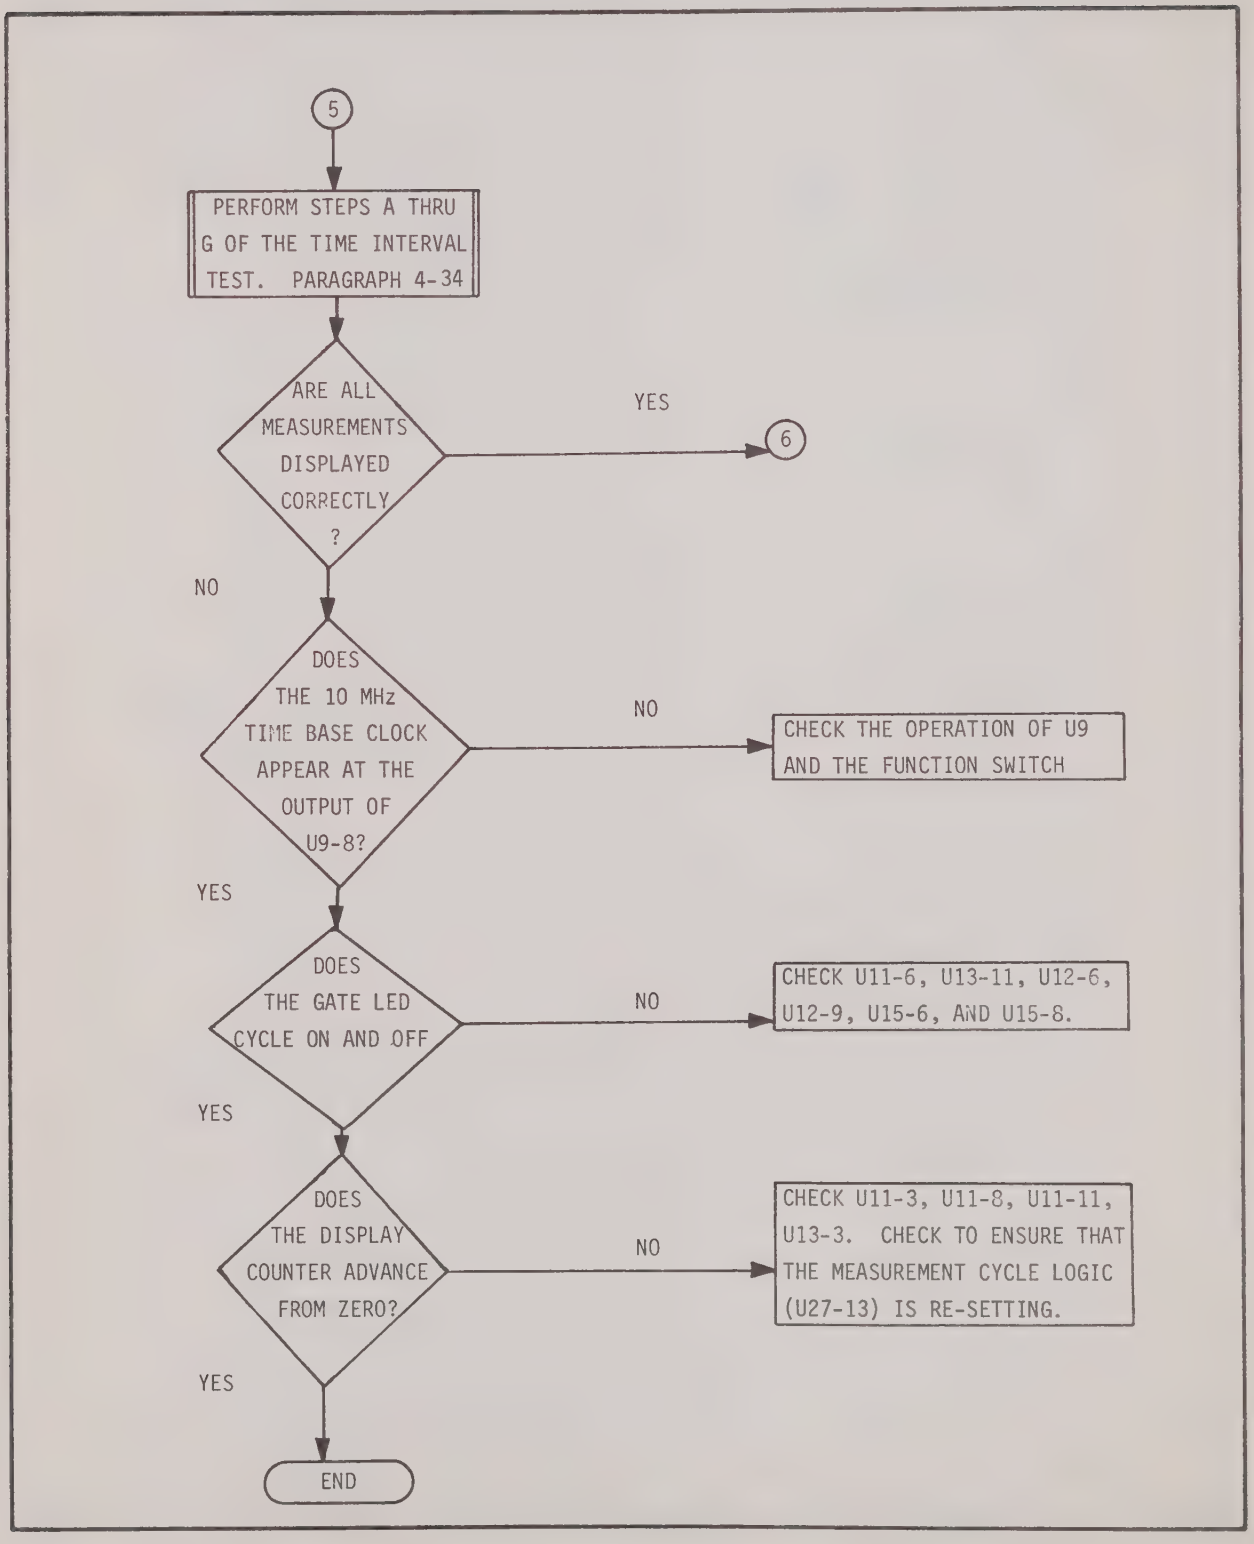
5
PERFORM STEPS A THRU G OF THE TIME INTERVAL TEST. PARAGRAPH 4-34
ARE ALL MEASUREMENTS DISPLAYED CORRECTLY ?
YES
6
NO
DOES THE 10 MHz TIME BASE CLOCK APPEAR AT THE OUTPUT OF U9-8?
NO
CHECK THE OPERATION OF U9 AND THE FUNCTION SWITCH
YES
DOES THE GATE LED CYCLE ON AND OFF
NO
CHECK U11-6, U13-11, U12-6, U12-9, U15-6, AND U15-8.
YES
DOES THE DISPLAY COUNTER ADVANCE FROM ZERO?
NO
CHECK U11-3, U11-8, U11-11, U13-3. CHECK TO ENSURE THAT THE MEASUREMENT CYCLE LOGIC (U27-13) IS RE-SETTING.
YES
END

Section 5

# Lists of Replaceable Parts

TABLE OF CONTENTS


| ASSEMBLY NAME | PAGE |
|---|---|
| Final Assembly, Model 1952B | 5-2 |
| Main Board PCB Assembly | 5-3, 5-4 |
| Display Board PCB Assembly | 5-5 |
| Input Board PCB Assembly | 5-6 |
| Switch Board PCB Assembly | 5-7 |
| Front Panel Assembly | 5-8 |
| Rear Panel Assembly | 5-9 |

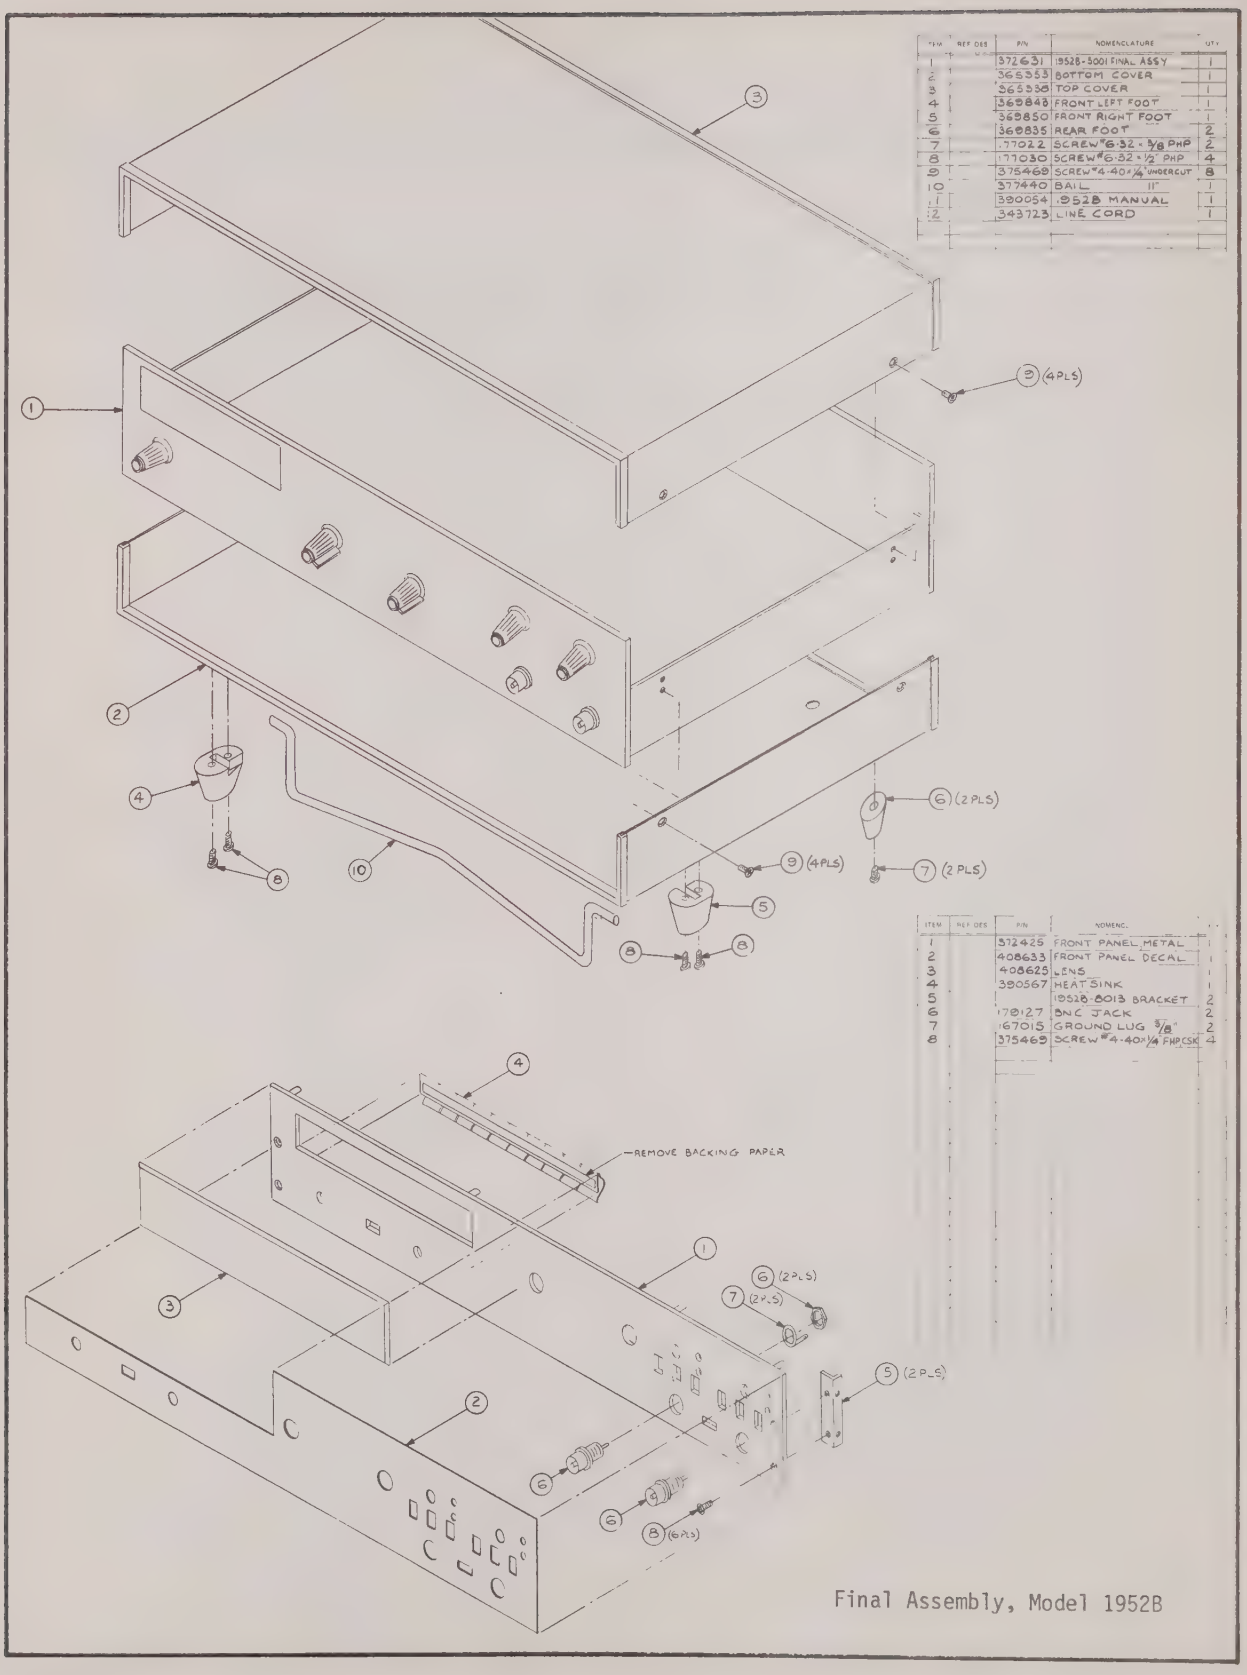


Final Assembly, Model 1952B

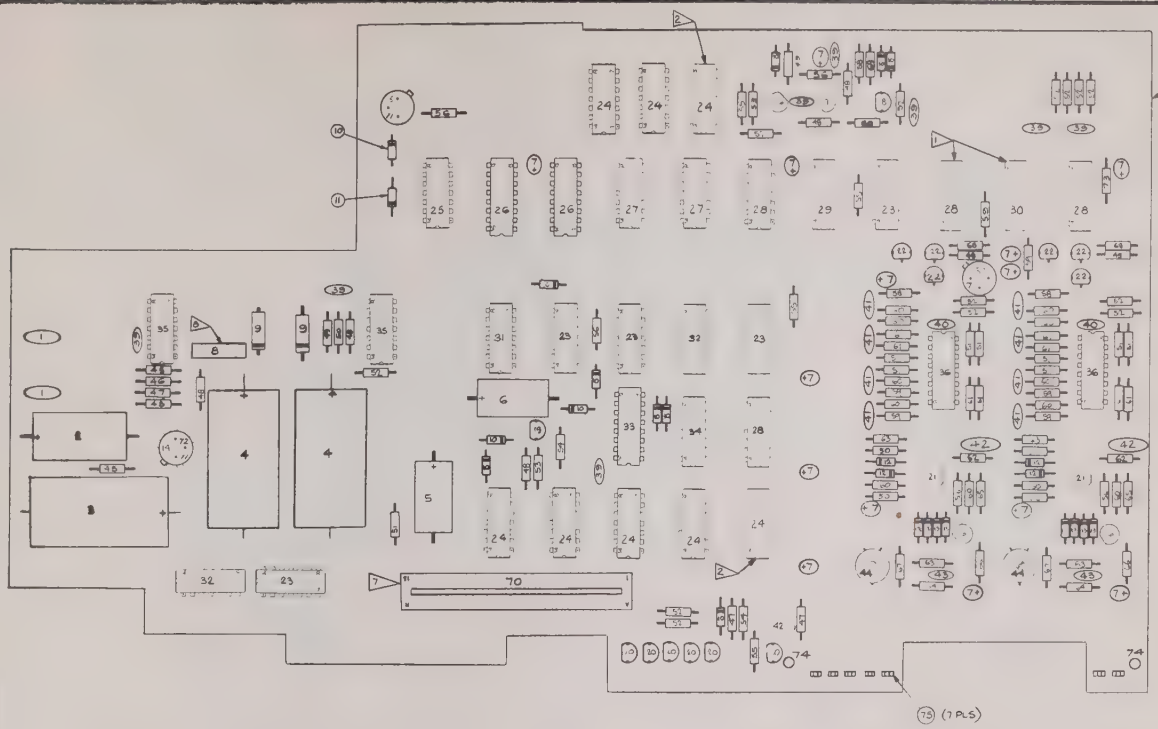

| ITEM | REF DES | P/N# | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | C1, C2 | 188003 | CAPACITOR .005uf 3000V | 2 |
| 2 | C8 | 168153 | 470uf 25V | 1 |
| 3 | C5 | 234008 | 2200uf 25V | 1 |
| 4 | C3, C4 | 375870 | 4700uf 10V | 2 |
| 5 | C86 | 192914 | 100 uf 16V | 1 |
| 6 | C87 | 368181 | 220uf 16V | 1 |
| 7 | ▲ | 193623 | 10 uf 16V | 14 |
| 8 | CR3-CR6 | 296509 | DIODE BRIDGE KBP02 | |
| 9 | CR1, CR2 | 187716 | IN4720 | 2 |
| 10 | ▲ | 364224 | IN914 | 12 |
| 11 | CR7 | 159798 | ZENER IN751A | 1 |
| 12 | CR13-CR16 | 368595 | FH1100 OR HPA5082-2835 | 4 |
| 13 | ▲ | 381806 | IN3062 | 8 |
| 14 | Q4 | 246462 | TRANSISTOR 2N2905 | 1 |
| 15 | Q2 | 150359 | 2N3053 | 1 |
| 16 | Q6, Q9, Q13 | 369645 | 2N4274 | 3 |
| 17 | Q18 | 369603 | 2N4257 | 1 |
| 18 | Q17 | 386094 | SX3819 | 1 |
| 19 | Q20 | 369652 | SX4061 | 1 |
| 20 | ▲ | 369678 | TIS88 | 6 |
| 21 | Q6, Q15 | 379271 | E421 | 2 |
| 22 | Q7-Q12 | 369629 | 2N5771 | 6 |
| 23 | ▲ | 292953 | I.C. 7400 | 5 |
| 24 | ▲ | 293159 | 7450 | 8 |
| 25 | U6 | 363457 | 74S11 | 1 |
| 26 | U7, U8 | 363440 | 74S112 | 2 |
| 27 | U9, U10 | 379289 | 74S64 | 2 |
| 28 | ▲ | 363580 | 74S00 | 4 |
| 29 | U12 | 310227 | 7474 | 1 |
| 30 | U16 | 413617 | 74S04 | 1 |
| 31 | U19 | 292995 | 7410 | 1 |
| 32 | U22, U29 | 368571 | 7473 | 2 |
| 33 | U28 | 293142 | 7442 | 1 |
| 34 | U27 | 320754 | 74136 | 1 |
| 35 | U17, U18 | 379420 | 723 | 2 |
| 36 | U24, U25 | 369702 | 10116 | 2 |
| 37 | U26 | 375780 | LM309H | 1 |
| 38 | | | | |
| 39 | ▲ | 369140 | CAPACITOR .001 uf | 8 |

SEE SHT 1 OF 2

| ITEM | REF DES | P/N# | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 40 | C22, C36 | 368579 | CAPACITOR .01uf 50V | 2 |
| 41 | C14-C21 | 368157 | 22pf 500V | 8 |
| 42 | C7, C28, C30 | 368199 | .1 uf 25V | 3 |
| 43 | C9, C26 | 368132 | 47pf 500V | 2 |
| 44 | R23, R68 | 369553 | RESISTOR TRIMPOT 10K | 2 |
| 45 | R7, R8, R10 | 170720 | ¼W, 5% CC2K7 | 3 |
| 46 | R8 | 148098 | 6K8 | 1 |
| 47 | R6, R81, R84 | 148056 | 3K3 | 3 |
| 48 | ▲ | 147868 | 10 | 5 |
| 49 | ▲ | 148049 | 2K2 | 4 |
| 50 | ▲ | 190371 | 1K2 | 5 |
| 51 | ▲ | 148015 | 820 | 9 |
| 52 | ▲ | 148023 | 1K | 12 |
| 53 | R99, R101 | 147975 | 390 | 2 |
| 54 | R82, R103 | 193441 | 180K | 2 |
| 55 | ▲ | 147918 | 68 | 4 |
| 56 | ▲ | 148007 | 680 | 5 |
| 57 | R98 | 148114 | 15K | 1 |
| 58 | R91, R96, R92 | 160804 | 270 | 3 |
| 59 | ▲ | 147959 | 220 | 6 |
| 60 | ▲ | 147983 | 470 | 3 |
| 61 | ▲ | 148031 | 1K5 | 8 |
| 62 | R37, R54 | 148130 | 22K | 2 |
| 63 | ▲ | 147942 | 180 | 6 |
| 64 | R12, R79 | 148189 | 100K | 2 |
| 65 | R15, R76 | 148072 | 4K7 | 2 |
| 66 | R17, R74 | 175042 | 1K8 | 2 |
| 67 | R22, R69 | 198390 | 2M2 | 2 |
| 68 | | 372490 | 19528-3001 MAIN PCB | 1 |
| 69 | R51 | 182204 | RESISTOR ¼W, 5% CC 1M | 1 |
| 70 | J2 | 369884 | 30PIN EDGE CONN | 1 |
| 71 | Q2, Q4, U36 | 152207 | TRANSI-PAD | 3 |
| 72 | Q4 | 370155 | HEAT SINK | 1 |
| 73 | R88 | 147926 | RESISTOR ¼W, 5% CC 100 | 1 |
| 74 | | 375840 | GUIDE PINS | 2 |
| 75 | | 376574 | AMP PINS | 7 |

NOTES:

1. ▲ C10, C11, C12, C23, C24, C25, C33, C38, C39, C40, C41, C42, C43, C45
2. ▲ CR8, CR31, CR21, CR22, CR23, CR24, CR25, CR26, CR27, CR28, CR29, CR30.
3. ▲ CR9, CR10, CR11, CR12, CR17, CR18, CR19, CR20
4. ▲ Q15, Q16, Q21, Q22, Q23, Q24.
5. ▲ U13, U20, U21, U23, U30.
6. ▲ U3, U4, U5, U31, U32, U33, U34, U35.
7. ▲ U11, U14, U16, U28.
8. ▲ C6, C7, C29, C31, C32, C34, C35, C44
9. ▲ R2, R34, R36, R102, R11.
10. ▲ R5, R44, R47, R87.
11. ▲ R4, R18, R20, R71, R73
12. ▲ R30, R31, R38, R35, R52, R53, R60, R61, R104.
13. ▲ R1, R34, R40, R43, R48, R51, R57, R86, R87, R90, R106, R107.
14. ▲ R80, R83, R85, R100.
15. ▲ R14, R77, R95, R105, R3,
16. ▲ R26, R29, R45, R46, R62, R65.
17. ▲ R16, R19, R27, R28, R35, R36, R55, R56, R63, R64, R72, R75, R93
18. ▲ R24, R25 R32, R33, R58 R59, R66, R67
19. ▲ R13, R21, R42, R49, R70, R78.

Main Board PC Assembly

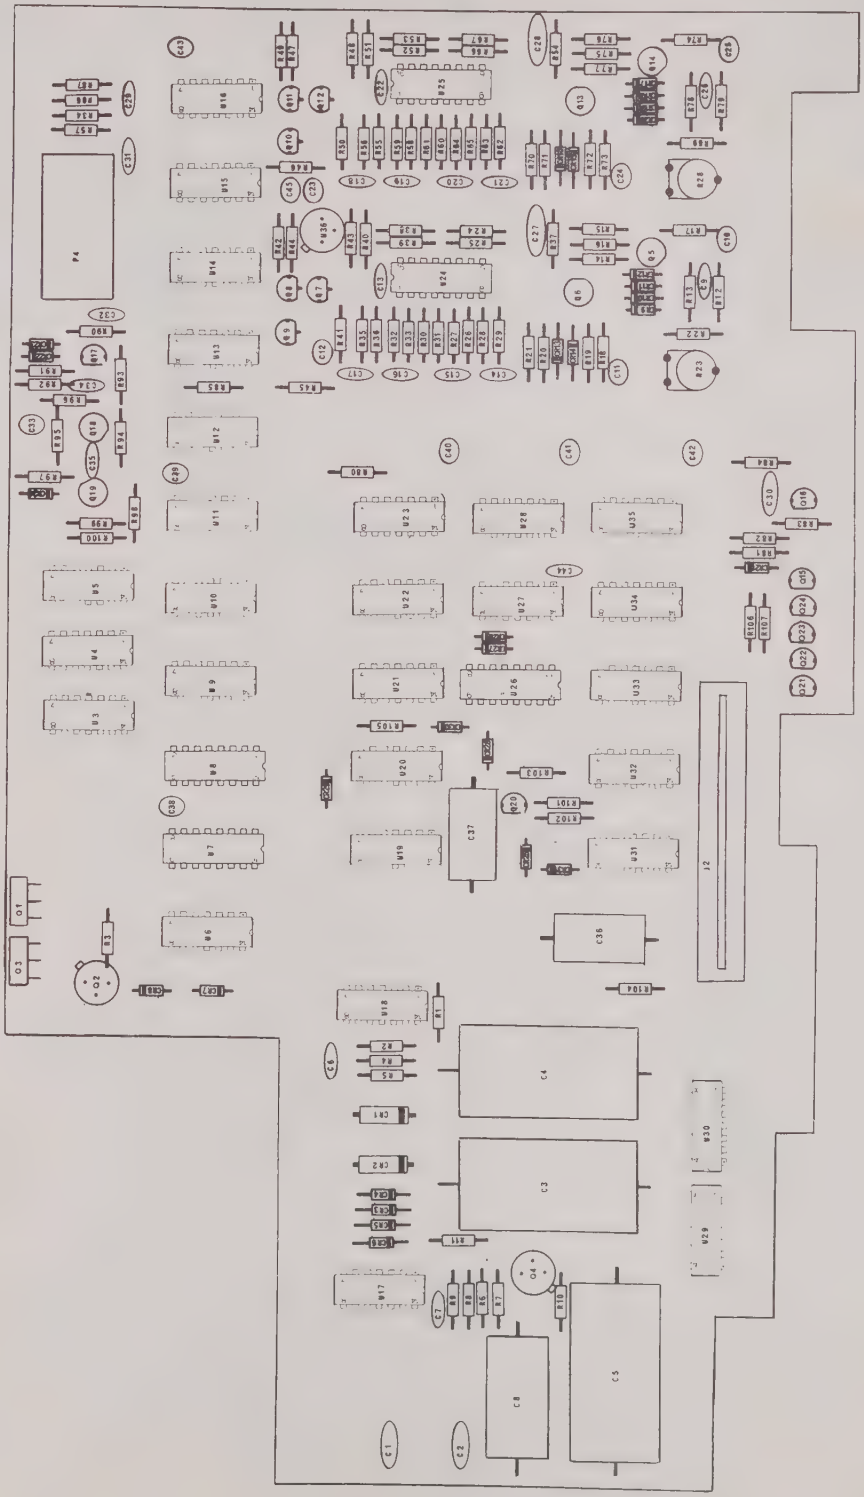

Main Board PC Assembly - Component Designation

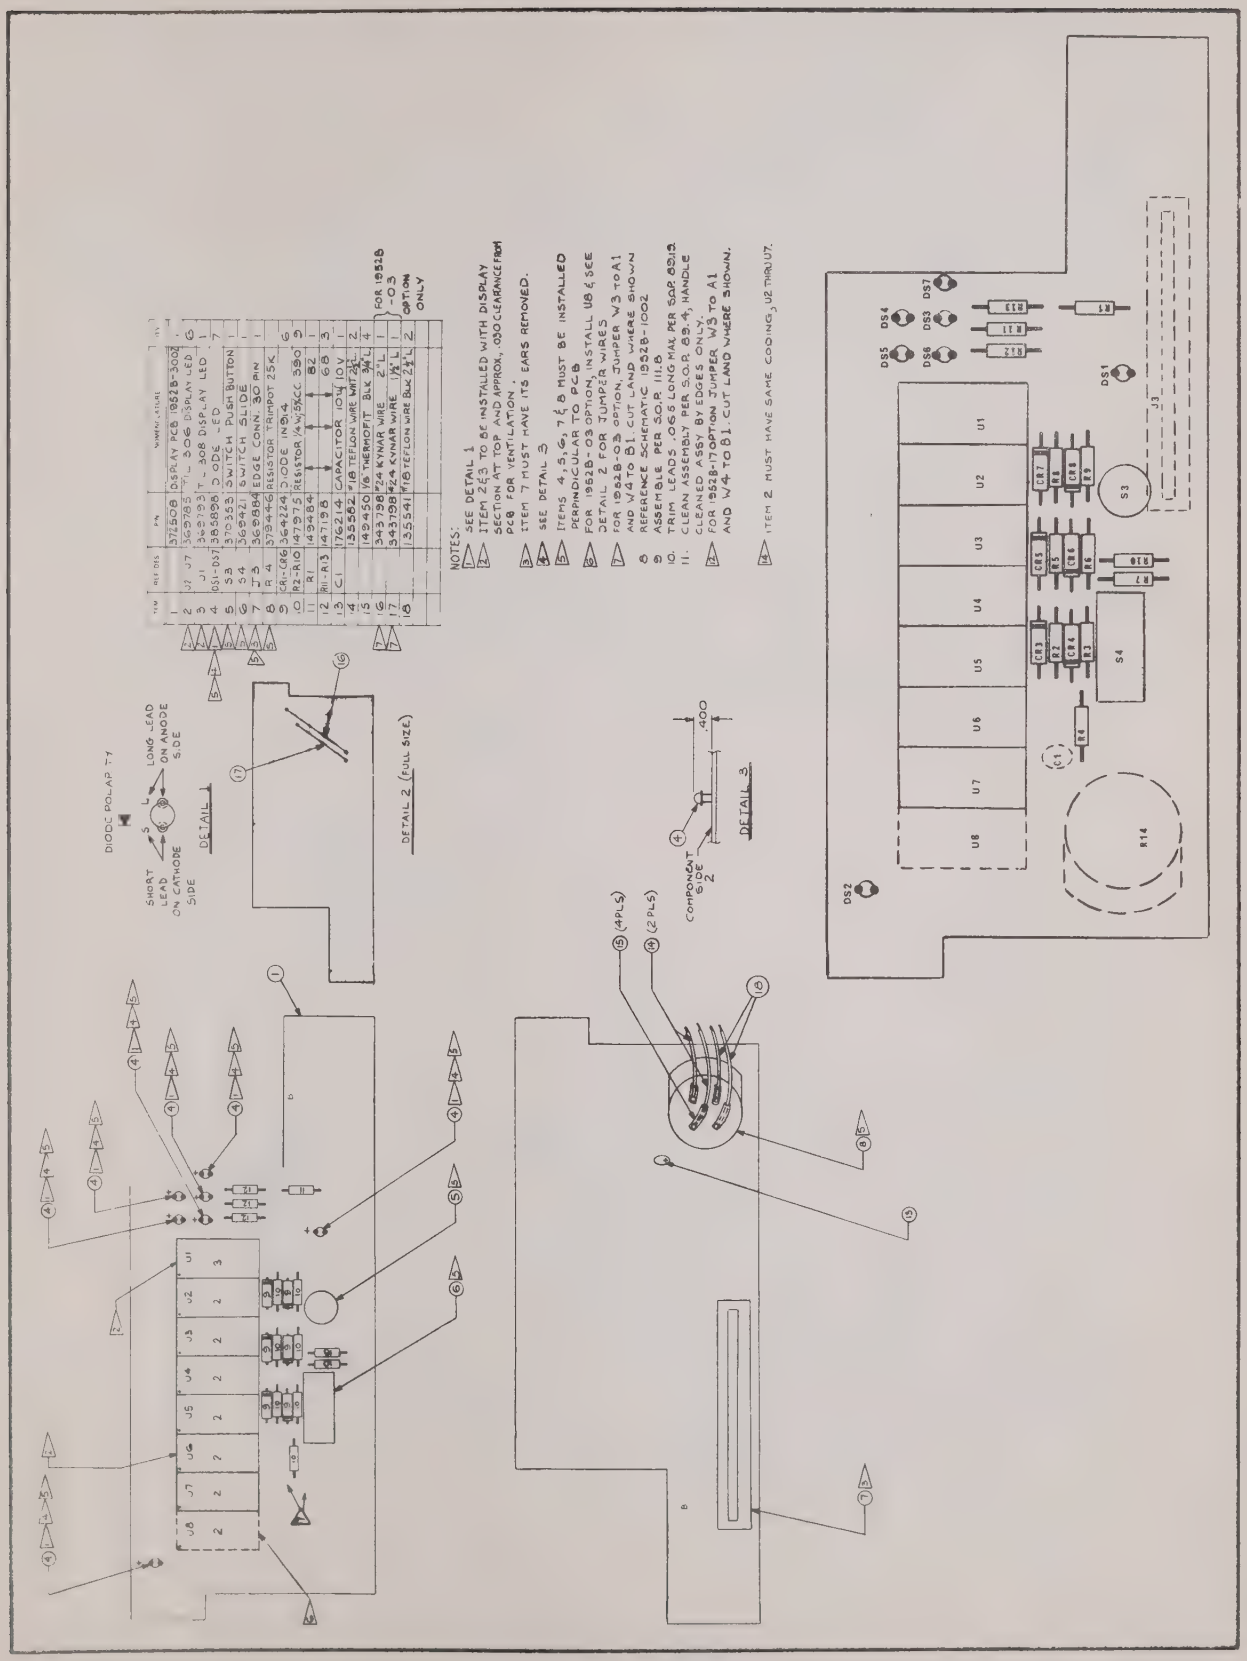
NOTES:
1. SEE DETAIL 1
2. ITEM 2 & 3 TO BE INSTALLED WITH DISPLAY SECTION AT TOP AND APPROX. .030 CLEARANCE FOR VENTILATION.
3. ITEM 7 MUST HAVE ITS EARS REMOVED.
4. SEE DETAIL 3
5. ITEMS 4, 5, 6, 7 & 8 MUST BE INSTALLED PERPENDICULAR TO PCB
6. FOR 1952B-03 OPTION, INSTALL W8 & SEE DETAIL 2 FOR JUMPER WIRES
7. FOR 1952B-03 OPTION, JUMPER W3 TO A1 AND W4 TO B1. CUT LAND WHERE SHOWN
8. REFERENCE SCHEMATIC 1952B-1002
9. ASSEMBLE PER SOP 111.8
10. TRIM LEADS .066 LONG MAX PER SOP 89.2
11. CLEAN ASSEMBLY PER S.O.P. 89.4, HANDLE CLEANED ASSY BY EDGES ONLY.
12. FOR 1952B-17 OPTION JUMPER W3 TO A1 AND W4 TO B1. CUT LAND WHERE SHOWN.
13. ITEM 2 MUST HAVE SAME CODING, U2 THRU U7.
DETAIL 1
DETAIL 2 (FULL SIZE)
DETAIL 3
DIODE POLAR TY
LONG LEAD ON ANODE SIDE
SHORT LEAD ON CATHODE SIDE
COMPONENT SIDE 2
.400
(4PLS)
(2PLS)
DS1
DS2
DS3
DS4
DS5
DS6
DS7
S3
S4
J3
U1
U2
U3
U4
U5
U6
U7
U8
R14

| ITEM | REF DES | P/N | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | | 372508 | DISPLAY PCB 1952B-3002 | 1 |
| 2 | U2 U7 | 362785 | TIL 306 DISPLAY LED | 6 |
| 3 | U1 | 362193 | TIL 308 DISPLAY LED | 1 |
| 4 | DS1-DS7 | 385898 | DIODE LED | 7 |
| 5 | S3 | 370353 | SWITCH PUSH BUTTON | 1 |
| 6 | S4 | 360921 | SWITCH SLIDE | 1 |
| 7 | J3 | 360884 | EDGE CONN. 30 PIN | 1 |
| 8 | R4 | 379446 | RESISTOR TRIMPOT 25K | 1 |
| 9 | CR1-CR6 | 364224 | DIODE IN914 | 6 |
| 10 | R2-R10 | 147975 | RESISTOR 1/4W 5% CC 330 | 9 |
| 11 | R1 | 149484 | " " " " 82 | 1 |
| 12 | R11-R13 | 147198 | " " " " 68 | 3 |
| 13 | C1 | 176214 | CAPACITOR 104 10V | 1 |
| 14 | | 135562 | #18 TEFLON WIRE WHT 2" | 2 |
| 15 | | 149450 | 1/8 THERMOFIT BLK 3/4" L | 4 |
| 16 | | 343798 | #24 KYNAR WIRE 2" L | 1 |
| 17 | | 343798 | #24 KYNAR WIRE 1 1/2" L | 1 |
| 18 | | 135541 | #18 TEFLON WIRE BLK 2 1/2" L | 2 |

FOR 1952B -03 OPTION ONLY

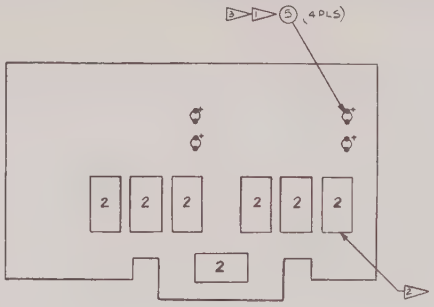





| | | N | NOMENCLATURE | |
|---|---|---|---|---|
| | | 372524 | INPUT PCB 1952B-3004 | 1 |
| 2 | S1 | 380113 | SLIDE SWITCH | 7 |
| 3 | P1 | 375329 | AMP PIN RECEPTACLE | 7 |
| 4 | U1 | 443617 | I.C. 74S04 | 1 |
| 5 | DS8-DS11 | 385898 | DIODE LED | 4 |
| 6 | R5,R6 | 370247 | TRIMPOT 10K | 2 |
| 7 | C2,C4 | 105308 | CAPACITOR 1pf/250V | 2 |
| 8 | C5 | 193623 | .01µf/10V | 1 |
| 9 | C1,C3 | 161992 | .1µf/250V | 2 |
| 10 | R1,R3 | 285338 | RESISTOR ¼W,5% CC 910K | 2 |
| 11 | R11,R12 | 123441 | 180K | 2 |
| 12 | R2,R4 | 148189 | 100K | 2 |
| 13 | R7-R10 | 149484 | 62 | 4 |
| 14 | | 190322 | COAX CABLE 2¾" L. | 2 |
| 15 | | 115808 | #22 TEFLON,VIOLET 2" L. | 2 |
| 16 | | 115766 | #22 TEFLON,GRAY 2" L. | 2 |
| 17 | P1 | 149112 | CONN TEST JACK | 2 |

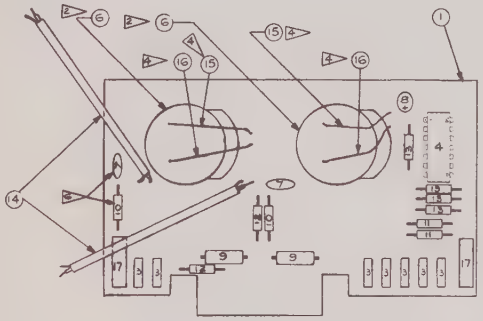


NOTES:
1. THE POSITIVE LEAD OF ITEM 5 IS THE LONG LEAD.
2. ITEMS 2 & 6 MUST BE INSTALLED PERPINDICULAR TO PCB
3. SEE DETAIL I
4. FINISHED LENGTH OF CABLE 2"

5. SG S7, S8, S9, S10, S13 & S14
6. TRIM LEADS OF THESE COMPONENTS AS CLOSE TO PCB AS POSSIBLE
7. SEE SHT 2 OF 2 FOR WIRE LIST

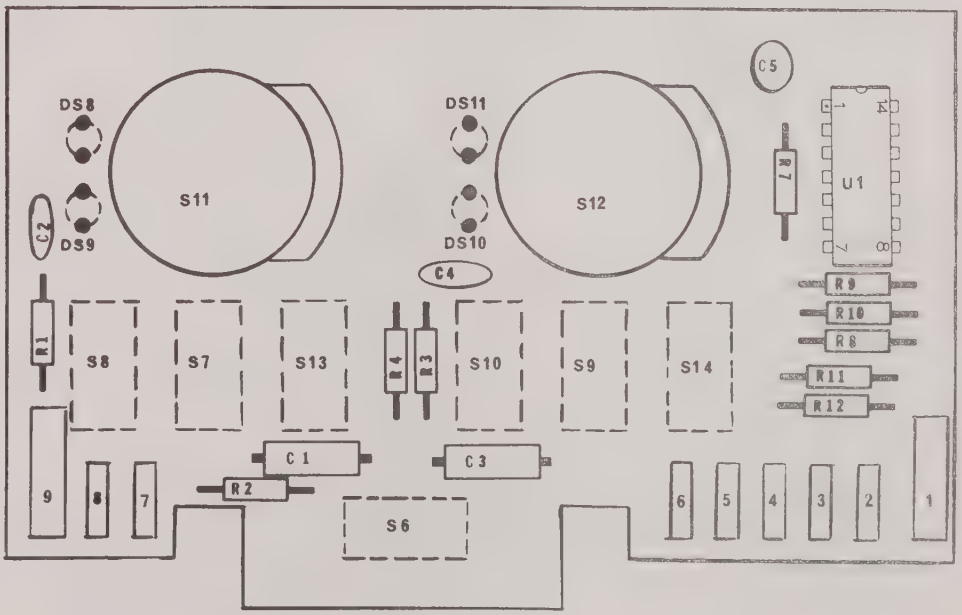




Input Board PC Assembly

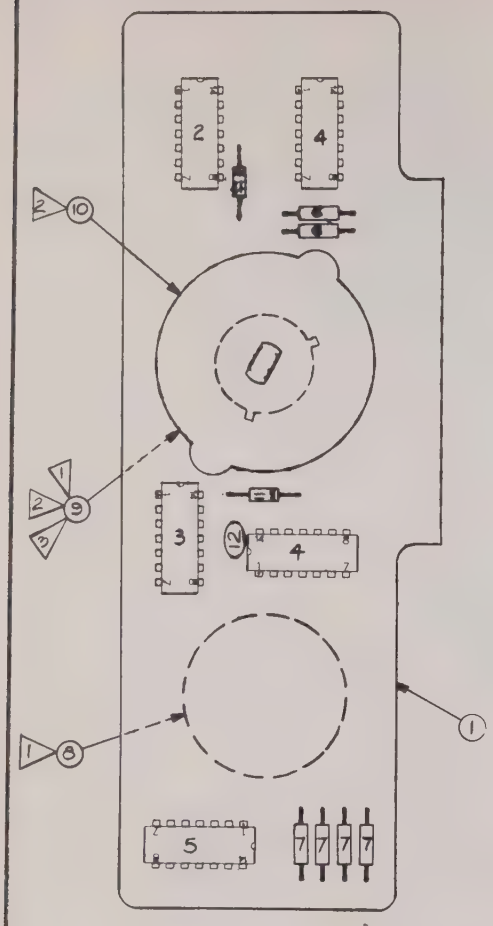


| ITEM | REF DES | P/N | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | | 372516 | 19528-3003 SWITCH PCB | 1 |
| 2 | U4 | 292953 | I.C. 7400 | 1 |
| 3 | U2 | 292979 | 7404 | 1 |
| 4 | U3, U5 | 292995 | 7410 | 2 |
| 5 | U1 | 293019 | 7430 | 1 |
| 6 | R1, R2 | 147959 | RESISTOR, 1/4 W, 5% CC 220 | 2 |
| 7 | R3-R6 | 148023 | RESISTOR, 1/4 W, 5% CC. 1K | 4 |
| 8 | S2 | 412957 | FUNCTION SWITCH | 1 |
| 9 | S1 | 413567 | RANGE SWITCH | 1 |
| 10 | S1 | 413872 | SWITCH WAFER | 1 |
| 11 | CR1, CR2 | 364224 | DIODE IN914 | 2 |
| 12 | C1 | 193623 | CAPACITOR 10uf 16V | 1 |




NOTES:

1. INSTALL ITEMS 8 & 9 ON CKT 1 SIDE.
2. ROTAR OF ITEM 10 MUST BE CLOCKED CORRECTLY WITH SHAFT OF ITEM 9
3. ITEM 9 IS SHOWN AT ITS CCW EXTREME POSITION WHEN VIEWED FROM CKT 1 SIDE.
4. REFERENCE SCHEMATIC 19528-1003

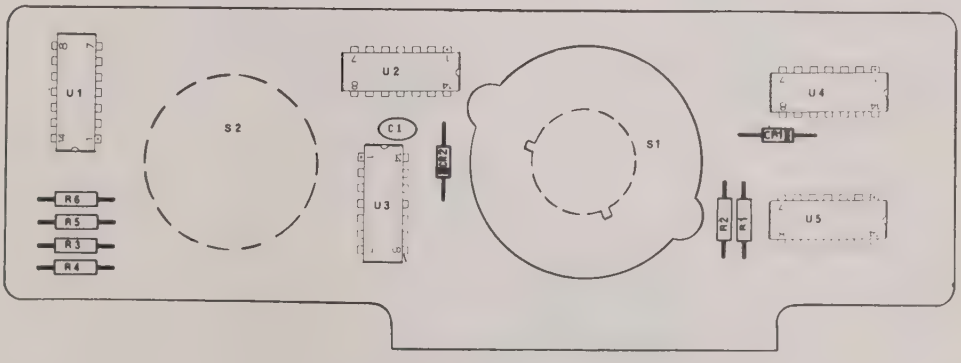


Switch Board PC Assembly

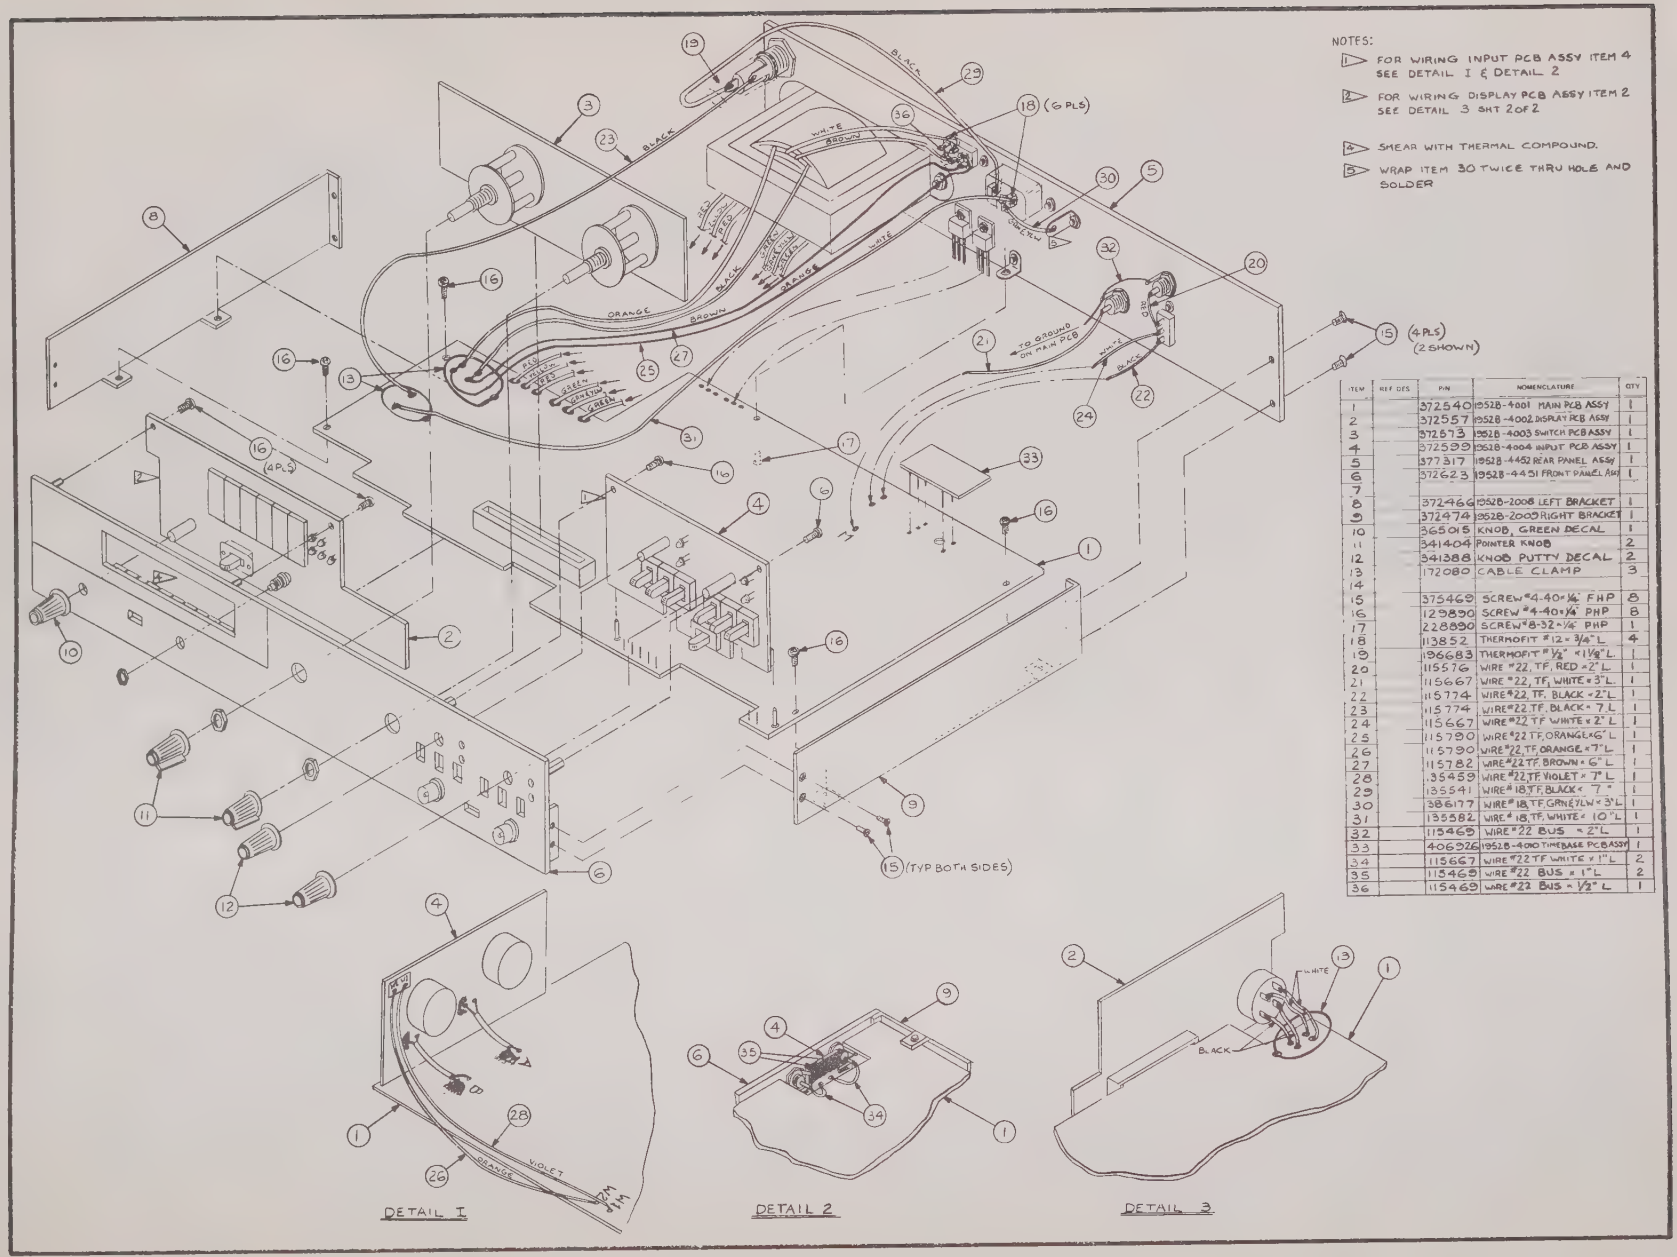
NOTES:
1 FOR WIRING INPUT PCB ASSY ITEM 4 SEE DETAIL 1 & DETAIL 2
2 FOR WIRING DISPLAY PCB ASSY ITEM 2 SEE DETAIL 3 SHT 2 OF 2
4 SMEAR WITH THERMAL COMPOUND.
5 WRAP ITEM 30 TWICE THRU HOLE AND SOLDER
(6 PLS)
(4 PLS) (2 SHOWN)
(4PLS)
(TYP BOTH SIDES)
TO GROUND ON MAIN PCB
DETAIL 1
DETAIL 2
DETAIL 3

| ITEM | REF DES | P/N | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | | 372540 | 1952B-4001 MAIN PCB ASSY | 1 |
| 2 | | 372557 | 1952B-4002 DISPLAY PCB ASSY | 1 |
| 3 | | 372573 | 1952B-4003 SWITCH PCB ASSY | 1 |
| 4 | | 372539 | 1952B-4004 INPUT PCB ASSY | 1 |
| 5 | | 377317 | 1952B-4452 REAR PANEL ASSY | 1 |
| 6 | | 372623 | 1952B-4451 FRONT PANEL ASSY | 1 |
| 7 | | | | |
| 8 | | 372466 | 1952B-2008 LEFT BRACKET | 1 |
| 9 | | 372474 | 1952B-2009 RIGHT BRACKET | 1 |
| 10 | | 365015 | KNOB, GREEN DECAL | 1 |
| 11 | | 341404 | POINTER KNOB | 2 |
| 12 | | 341388 | KNOB PUTTY DECAL | 2 |
| 13 | | 172080 | CABLE CLAMP | 3 |
| 14 | | | | |
| 15 | | 375469 | SCREW #4-40 x 1/4 FHP | 8 |
| 16 | | 129890 | SCREW #4-40 x 1/4 PHP | 8 |
| 17 | | 228890 | SCREW #8-32 x 1/4 PHP | 1 |
| 18 | | 113852 | THERMOFIT #12 x 3/4" L | 4 |
| 19 | | 196683 | THERMOFIT #1/2" x 1 1/2" L | 1 |
| 20 | | 115576 | WIRE #22, TF, RED x 2" L | 1 |
| 21 | | 115667 | WIRE #22, TF, WHITE x 3" L | 1 |
| 22 | | 115774 | WIRE #22, TF, BLACK x 2" L | 1 |
| 23 | | 115774 | WIRE #22 TF, BLACK x 7" L | 1 |
| 24 | | 115667 | WIRE #22 TF WHITE x 2" L | 1 |
| 25 | | 115790 | WIRE #22 TF, ORANGE x 6" L | 1 |
| 26 | | 115790 | WIRE #22, TF, ORANGE x 7" L | 1 |
| 27 | | 115782 | WIRE #22 TF, BROWN x 6" L | 1 |
| 28 | | 35459 | WIRE #22, TF, VIOLET x 7" L | 1 |
| 29 | | 135541 | WIRE #18, TF, BLACK x 7" | 1 |
| 30 | | 386177 | WIRE #18, TF, GRN & YLW x 3" L | 1 |
| 31 | | 135582 | WIRE #18, TF, WHITE x 10" L | 1 |
| 32 | | 115465 | WIRE #22 BUS x 2" L | 1 |
| 33 | | 406926 | 1952B-4001 TIMEBASE PCB ASSY | 1 |
| 34 | | 115667 | WIRE #22 TF WHITE x 1" L | 2 |
| 35 | | 115469 | WIRE #22 BUS x 1" L | 2 |
| 36 | | 115469 | WIRE #22 BUS x 1/2" L | 1 |

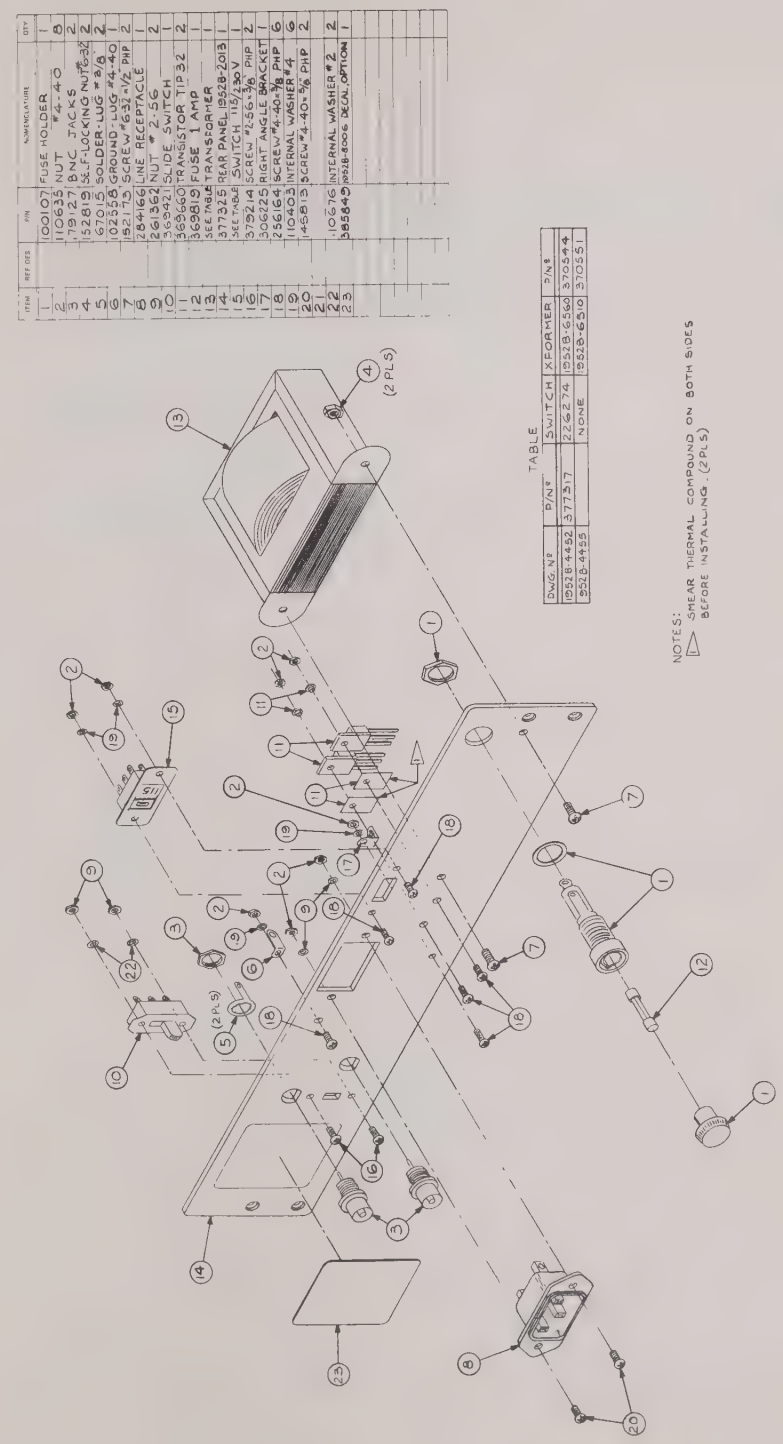

| ITEM | REF DES | P/N | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | | 100107 | FUSE HOLDER | 1 |
| 2 | | 110635 | NUT #4-40 | 8 |
| 3 | | 179127 | BNC JACKS | 2 |
| 4 | | 152819 | SELF-LOCKING NUT #8-32 | 2 |
| 5 | | 670115 | SOLDER LUG #8/8 | 2 |
| 6 | | 102558 | GROUND LUG #4-40 | 1 |
| 7 | | 152173 | SCREW #6-32 x 1/2 PHP | 2 |
| 8 | | 284166 | LINE RECEPTACLE | 1 |
| 9 | | 261362 | NUT # 2-56 | 2 |
| 10 | | 369421 | SLIDE SWITCH | 1 |
| 11 | | 369660 | TRANSISTOR TIP 32 | 2 |
| 12 | | 369819 | FUSE 1 AMP | 1 |
| 13 | | SEE TABLE | TRANSFORMER | 1 |
| 14 | | 377325 | REAR PANEL 1952B-2013 | 1 |
| 15 | | SEE TABLE | SWITCH 115/230V | 1 |
| 16 | | 379214 | SCREW #2-56 x 3/16 PHP | 2 |
| 17 | | 306225 | RIGHT ANGLE BRACKET | 1 |
| 18 | | 256164 | SCREW #4-40 x 7/8 PHP | 6 |
| 19 | | 110403 | INTERNAL WASHER #4 | 6 |
| 20 | | 145813 | SCREW #4-40 x 3/16 PHP | 2 |
| 21 | | | | |
| 22 | | 110616 | INTERNAL WASHER #2 | 2 |
| 23 | | 385845 | 1952B-3006 DECAL, OPTION | 1 |

TABLE

| DWG. NO | P/N | SWITCH | XFORMER | P/N |
|---|---|---|---|---|
| 1952B-4452 | 377317 | 2262274 | 1952B-6560 | 370544 |
| 1952B-4455 | | NONE | 1952B-6510 | 370551 |

NOTES:
1. SHEAR THERMAL COMPOUND ON BOTH SIDES BEFORE INSTALLING. (2 PLS)

Rear Panel Assembly

Section 6

# Option & Accessory Information

6-1 INTRODUCTION

6-2 This section of the manual contains information pertaining to the accessories and -03 option available for your instrument.

6-3 ACCESSORY INFORMATION

6-4 1952B rack adapter M00-200-614. Printer Interface Kit 2010A - 7011.

6-5 OPTION INFORMATION

6-6 The -03 option provides a 8 digit LED display and includes a Temperature Compensated Crystal Oscillator (TCXO) which has timebase stability and temperature dependent characteristics which are superior to the oscillator normally installed in the standard unit.

The TCXO specifications are as follows:

| | |
|---|---|
| FREQUENCY | 10.00 MHz |
| AGING RATE (per month) | $< \pm 3 \times 10^{-7}$ |
| TEMPERATURE STABILITY<br>0 - 50°C<br>20 - 30°C | <br>$< \pm 2 \times 10^{-6}$<br>$\pm 5 \times 10^{-7}$ typ. |
| LINE VOLTAGE<br>(± 10% CHANGE) | <br>$< \pm 1 \times 10^{-7}$ |

## Section 7
# General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the List of Replaceable Parts contained in Section 5. The following information is presented in this section:

List of Abbreviations

Federal Supply Codes for Manufacturers

Fluke Technical Service Centers - U.S. and Canada

Fluke Technical Service Centers - International

Sales Representatives - U.S. and Canada

Sales Representatives - International

## List of Abbreviations and Symbols

| | |
|---|---|
| **A or amp** | ampere |
| **ac** | alternating current |
| **af** | audio frequency |
| **a/d** | analog-to-digital |
| **assy** | assembly |
| **AWG** | american wire gauge |
| **B** | bel |
| **bcd** | binary coded decimal |
| **°C** | Celsius |
| **cap** | capacitor |
| **ccw** | counterclockwise |
| **cer** | ceramic |
| **cermet** | ceramic to metal(seal) |
| **ckt** | circuit |
| **cm** | centimeter |
| **cmrr** | common mode rejection ratio |
| **comp** | composition |
| **cont** | continue |
| **crt** | cathode-ray tube |
| **cw** | clockwise |
| **d/a** | digital-to-analog |
| **dac** | digital-to-analog converter |
| **dB** | decibel |
| **dc** | direct current |
| **dmm** | digital multimeter |
| **dvm** | digital voltmeter |
| **elect** | electrolytic |
| **ext** | external |
| **F** | farad |
| **°F** | Fahrenheit |
| **FET** | Field-effect transistor |
| **ff** | flip-flop |
| **freq** | frequency |
| **FSN** | federal stock number |
| **g** | gram |
| **G** | giga ($10^9$) |
| **gd** | guard |
| **Ge** | germanium |
| **GHz** | gigahertz |
| **gmv** | guaranteed minimum value |
| **gnd** | ground |
| **H** | henry |
| **hd** | heavy duty |
| **hf** | high frequency |
| **Hz** | hertz |
| **IC** | integrated circuit |
| **if** | intermediate frequency |
| **in** | inch(es) |
| **intl** | internal |
| **I/O** | input/output |
| **k** | kilo ($10^3$) |
| **kHz** | kilohertz |
| **kΩ** | kilohm(s) |
| **kV** | kilovolt(s) |
| **lf** | low frequency |
| **LED** | light-emitting diode |
| **LSB** | least significant bit |
| **LSD** | least significant digit |
| **M** | mega ($10^6$) |
| **m** | milli ($10^{-3}$) |
| **mA** | milliampere(s) |
| **max** | maximum |
| **mf** | metal film |
| **MHz** | megahertz |
| **min** | minimum |
| **mm** | millimeter |
| **ms** | millisecond |
| **MSB** | most significant bit |
| **MSD** | most significant digit |
| **MTBF** | mean time between failures |
| **MTTR** | mean time to repair |
| **mV** | millivolt(s) |
| **mv** | multivibrator |
| **MΩ** | megohm(s) |
| **n** | nano ($10^{-9}$) |
| **na** | not applicable |
| **NC** | normally closed |
| **(-) or neg** | negative |
| **NO** | normally open |
| **ns** | nanosecond |
| **opnl ampl** | operational amplifier |
| **p** | pico ($10^{-12}$) |
| **para** | paragraph |
| **pcb** | printed circuit board |
| **pF** | picofarad |
| **pn** | part number |
| **(+) or pos** | positive |
| **pot** | potentiometer |
| **p-p** | peak-to-peak |
| **ppm** | parts per million |
| **PROM** | programmablle read-only memory |
| **psi** | pound-force per square inch |
| **RAM** | random-access memory |
| **rf** | radio frequency |
| **rms** | root mean square |
| **ROM** | read-only memory |
| **s or sec** | second (time) |
| **scope** | oscilloscope |
| **SH** | shield |
| **Si** | silicon |
| **serno** | serial number |
| **sr** | shift register |
| **Ta** | tantalum |
| **tb** | terminal board |
| **tc** | temperature coefficient or temperature compensating |
| **tcxo** | temperature compensated crystal oscillator |
| **tp** | test point |
| **u or μ** | micro ($10^{-6}$) |
| **uhf** | ultra high frequency |
| **us or μs** | microsecond(s) ($10^{-6}$) |
| **uut** | unit under test |
| **V** | volt |
| **v** | voltage |
| **var** | variable |
| **vco** | voltage controlled oscillator |
| **vhf** | very high frequency |
| **vlf** | very low frequency |
| **W** | watt(s) |
| **ww** | wire wound |
| **xfmr** | transformer |
| **xstr** | transistor |
| **xtal** | crystal |
| **xtlo** | crystal oscillator |
| **Ω** | ohm(s) |
| **μ** | micro ($10^{-6}$) |

## Federal Supply Codes for Manufacturers

00213
Nytronics Comp. Group Inc.
Subsidiary of Nytronics Inc.
Formerly Sage Electronics
Rochester, New York

00327
Welwyn International, Inc.
Westlake, Ohio

00656
Aerovox Corp.
New Bedford, Massachusetts

00686
Film Capacitors, Inc.
Passaic, New Jersey

00779
AMP Inc.
Harrisburg, Pennsylvania

01121
Allen-Bradley Co.
Milwaukee, Wisconsin

01281
TRW Electronic Comp.
Semiconductor Operations
Lawndale, California

01295
Texas Instruments, Inc.
Semiconductor Group
Dallas, Texas

01537
Motorola Communications &
Electronics Inc.
Franklin Park, Illinois

01686
RCL Electronics Inc.
Manchester, New Hampshire

01730
Replaced by 73586

01884
Use 56289
Sprague Electric Co.
Dearborn Electronic Div.
Lockwood, Florida

02114
Ferroxcube Corp.
Saugerties, New York

02131
General Instrument Corp.
Harris ASW Div.
Westwood, Maine

02395
Rason Mfg. Co.
Brooklyn, New York

02533
Snelgrove, C.R. Co., Ltd.
Don Mills, Ontario, Canada
M3B 1M2

02606
Fenwal Labs
Div. of Travenal Labs.
Morton Grove, Illinois

02660
Bunker Ramo Corp., Conn Div.
Formerly Amphenol-Borg
Electric Corp.
Broadview, Illinois

02799
Areo Capacitors, Inc.
Chatsworth, California

03508
General Electric Co.
Semiconductor Products
Syracuse, New York

03614
Replaced by 71400

03651
Replaced by 44655

03797
Eldema Div.
Genisco Technology Corp.
Compton, California

03877
Transistron Electronic Corp.
Wakefield, Massachusetts

03888
KDI Pyrofilm Corp.
Whippany, New Jersey

03911
Clairex Electronics Div.
Clairex Corp.
Mt. Vernon, New York

03980
Muirhead Inc.
Mountainside, New Jersey

04009
Arrow Hart Inc.
Hartford, Connecticut

04062
Replaced by 72136

04202
Replaced by 81312

04217
Essex International Inc.
Wire & Cable Div.
Anaheim, California

04221
Aemco, Div. of
Midtex Inc.
Mankato, Minnesota

04222
AVX Ceramics Div.
AVX Corp.
Myrtle Beach, Florida

04423
Telonic Industries
Laguna Beach, California

04645
Replaced by 75376

04713
Motorola Inc. Semiconductor
Products
Phoenix, Arizona

04946
Standard Wire & Cable
Los Angeles, California

05082
Replaced by 94988

05236
Jonathan Mfg. Co.
Fullerton, California

05245
Components Corp. now
Corcom, Inc.
Chicago, Illinois

05277
Westinghouse Electric Corp.
Semiconductor Div.
Youngwood, Pennsylvania

05278
Replaced by 43543

05279
Southwest Machine &
Plastic Co.
Glendora, California

05397
Union Carbide Corp.
Materials Systems Div.
New York, New York

05571
Use 56289
Sprague Electric Co.
Pacific Div.
Los Angeles, California

05574
Viking Industries
Chatsworth, California

05704
Replaced by 16258

05820
Wakefield Engineering Inc.
Wakefield, Massachusetts

06001
General Electric Co.
Electronic Capacitor &
Battery Products Dept.
Columbia, South Carolina

06136
Replaced by 63743

06383
Panduit Corp.
Tinley Park, Illinois

06473
Bunker Ramo Corp.
Amphenol SAMS Div.
Chatsworth, California

06555
Beede Electrical Instrument Co.
Penacook, New Hampshire

06739
Electron Corp.
Littleton, Colorado

06743
Clevite Corp.
Cleveland, Ohio

06751
Components, Inc. Semcor Div.
Phoenix, Arizona

06860
Gould Automotive Div.
City of Industry, California

06961
Vernitron Corp., Piezo
Electric Div.
Formerly Clevite Corp., Piezo
Electric Div.
Bedford, Ohio

06980
Eimac Div.
Varian Associates
San Carlos, California

07047
The Ross Milton Co.
South Hampton, Pennsylvania

07115
Replaced by 14674

07138
Westinghouse Electric Corp.,
Electronic Tube Div.
Horsehead, New York

07233
TRW Electronic Components
Cinch Graphic
City of Industry, California

07256
Silicon Transistor Corp.
Div. of BBF Group Inc.
Chelmsford, Massachusetts

07261
Aumet Corp.
Culver City, California

07263
Fairchild Semiconductor
Div. of Fairchild Camera
& Instrument Corp.
Mountain View, California

07344
Bircher Co., Inc.
Rochester, New York

07597
Burndy Corp.
Tape/Cable Div.
Rochester, New York

07792
Lerma Engineering Corp.
Northampton, Massachusetts

07910
Teledyne Semiconductor
Formerly Continental Device
Hawthorne, California

07933
Use 49956
Raytheon Co.
Semiconductor Div HQ
Mountain View, California

08225
Industro Transistor Corp.
Long Island City, New York

## Federal Supply Codes for Manufacturers (cont)

08261
Spectra Strip Corp.
Garden Grove, California

08530
Reliance Mica Corp.
Brooklyn, New York

08806
General Electric Co.
Miniature Lamp Products Dept
Cleveland, Ohio

08863
Nylomatic Corp.
Norrisville, Pennsylvania

08988
Use 53085
Skottie Electronics Inc.
Archbald, Pennsylvania

09214
G.E. Co. Semi-Conductor
Products Dept.
Power Semi-Conductor
Products OPN Sec.
Auburn, New York

09353
C and K Components
Watertown, Massachusetts

09423
Scientific Components, Inc.
Santa Barbara, California

09922
Burndy Corp.
Norwalk, Connecticut

09969
Dale Electronics Inc.
Yankton, S. Dakota

10059
Barker Engineering Corp.
Formerly Amerace, Amerace
ESNA Corp.
Kenilworth, New Jersey

11236
CTS of Berne
Berne, Indiana

11237
CTS Keene Inc.
Paso Robles, California

11358
CBS Electronic Div.
Columbia Broadcasting System
Newburyport, Minnesota

11403
Best Products Co.
Chicago, Illinois

11503
Keystone Columbia Inc.
Warren, Michigan

11532
Teledyne Relays
Hawthorne, California

11711
General Instrument Corp.
Rectifier Division
Hicksville, New York

11726
Qualidyne Corp.
Santa Clara, California

12014
Chicago Rivet & Machine Co.
Bellwood, Illinois

12040
National Semiconductor Corp.
Danburry, Connecticut

12060
Diodes, Inc.
Chatsworth, California

12136
Philadelphia Handle Co.
Camden, New Jersey

12300
Potter-Brumfield Div.
AMF Canada LTD.
Guelph, Ontario, Canada

12323
Presin Co., Inc.
Shelton, Connecticut

12327
Freeway Corp. formerly
Freeway Washer & Stamping Co.
Cleveland, Ohio

12443
The Budd Co. Polychem Products
Plastic Products Div.
Bridgeport, Pennsylvania

12615
U.S. Terminals Inc.
Cincinnati, Ohio

12617
Hamlin Inc.
Lake Mills, Wisconsin

12697
Clarostat Mfg. Co.
Dover, New Hampshire

12749
James Electronics
Chicago, Illinois

12856
Micrometals
Sierra Madre, California

12954
Dickson Electronics Corp.
Scottsdale, Arizona

12969
Unitrode Corp.
Watertown, Massachusetts

13103
Thermalloy Co., Inc.
Dallas, Texas

13327
Solitron Devices Inc.
Tappan, New York

13511
Amphenol Cadre Div.
Bunker-Ramo Corp.
Los Gatos, California

13606
Use 56289
Sprague Electric Co.
Transistor Div.
Concord, New Hampshire

13839
Replaced by 23732

14099
Semtech Corp.
Newbury Park, California

14140
Edison Electronic Div.
Mc Gray-Edison Co.
Manchester, New Hampshire

14193
Cal-R-Inc. formerly
California Resistor, Corp.
Santa Monica, California

14298
American Components, Inc.
an Insilco Co.
Conshohocken, Pennsylvania

14655
Cornell-Dublier Electronics
Division of Federal Pacific
Electric Co. Govt. Control Dept.
Newark, New Jersey

14752
Electro Cube Inc.
San Gabriel, California

14869
Replaced by 96853

14936
General Instrument Corp.
Semi Conductor Products Group
Hicksville, New York

15636
Elec-Trol Inc.
Saugus, California

15801
Fenwal Electronics Inc.
Div. of Kidde Walter and Co., Inc.
Framingham, Massachusetts

15818
Teledyne Semiconductors,
formerly Amelco Semiconductor
Mountain View, California

15849
Litton Systems Inc. Useco Div.
formerly Useco Inc.
Van Nuys, California

15898
International Business
Machines Corp.
Essex Junction, Vermont

15909
Replaced by 14140

16258
Space-Lok Inc.
Burbank, California

16299
Corning Glass
Electronic Components Div.
Raleigh, North Carolina

16332
Replaced by 28478

16473
Cambridge Scientific Ind.
Div. of Chemed Corporation
Cambridge, Maryland

16742
Paramount Plastics
Fabricators, Inc.
Downey, California

16758
Delco Electronics
Div. of General Motors Corp.
Kokomo, Indiana

17001
Replaced by 71468

17069
Circuit Structures Lab.
Burbank, California

17338
High Pressure Eng. Co., Inc.
Oklahoma City, Oklahoma

17545
Atlantic Semiconductors, Inc.
Asbury Park, New Jersey

17856
Siliconix, Inc.
Santa Clara, California

17870
Replaced by 14140

18178
Vactec Inc.
Maryland Heights, Missouri

18324
Signetics Corp.
Sunnyvale, California

18612
Vishay Resistor Products Div.
Vishay Intertechnology Inc.
Malvern, Pennsylvania

18736
Voltronics Corp.
Hanover, New Jersey

18927
GTE Sylvania Inc.
Precision Material Group
Parts Division
Titusville, Pennsylvania

19451
Perine Machinery & Supply Co.
Seattle, Washington

19701
Electro-Midland Corp.
Mepco-Electra Inc.
Mineral Wells, Texas

20584
Enochs Mfg. Inc.
Indianapolis, Indiana

## Federal Supply Codes for Manufacturers (cont)

20891
Self-Organizing Systems, Inc.
Dallas, Texas

21604
Bucheye Stamping Co.
Columbus, Ohio

21845
Solitron Devices Inc.
Transistor Division
Riveria Beach, Florida

22767
ITT Semiconductors
Palo Alto, California

23050
Product Comp. Corp.
Mount Vernon, New York

23732
Tracor Inc.
Rockville, Maryland

23880
Stanford Applied Engrng.
Santa Clara, California

23936
Pamotor Div., Wm. J. Purdy Co.
Burlingame, California

24248
Replaced by 94222

24355
Analog Devices Inc.
Norwood, Massachusetts

24655
General Radio
Concord, Massachusetts

24759
Lenox-Fugle Electronics Inc.
South Plainfield, New Jersey

25088
Siemen Corp.
Isilen, New Jersey

25403
Amperex Electronic Corp.
Semiconductor &
Micro-Circuits Div.
Slatersville, Rhode Island

27014
National Semiconductor Corp.
Santa Clara, California

27264
Molex Products
Downers Grove, Illinois

28213
Minnesota Mining & Mfg. Co.
Consumer Products Div.
St. Paul, Minnesota

28425
Serv-/-Link formerly
Bohannan Industries
Fort Worth, Texas

28478
Deltrol Controls Div.
Deltrol Corporation
Milwaukee, Wisconsin

28480
Hewlett Packard Co.
Corporate HQ
Palo Alto, California

28520
Heyman Mfg. Co.
Kenilworth, New Jersey

29083
Monsanto, Co., Inc.
Santa Clara, California

29604
Stackpole Components Co.
Raleigh, North Carolina

30148
AB Enterprise Inc.
Ahoskie, North Carolina

30323
Illinois Tool Works, Inc.
Chicago, Illinois

31091
Optimax Inc.
Colmar, Pennsylvania

32539
Mura Corp.
Great Neck, New York

32767
Griffith Plastic Corp.
Burlingame, California

32879
Advanced Mechanical
Components
Northridge, California

32897
Erie Technological Products, Inc.
Frequency Control Div.
Carlisle, Pennsylvania

32997
Bourns Inc.
Trimpot Products Division
Riverside, California

33173
General Electric Co.
Products Dept.
Owensboro, Kentucky

34333
Silicon General
Westminister, California

34335
Advanced Micro Devices
Sunnyvale, California

34802
Electromotive Inc.
Kenilworth, New Jersey

37942
P.R. Mallory & Co., Inc.
Indianapolis, Indiana

42498
National Radio
Melrose, Massachusetts

43543
Nytronics Inc.
Transformer Co. Div.
Geneva, New York

44655
Ohmite Mfg. Co.
Skokie, Illinois

49671
RCA Corp.
New York, New York

49956
Raytheon Company
Lexington, Massachusetts

50088
Mostek Corp.
Carrollton, Texas

50579
Litronix Inc.
Cupertino, California

51605
Scientific Components Inc.
Linden, New Jersey

53021
Sangamo Electric Co.
Springfield, Illinois

54294
Cutler-Hammer Inc. formerly
Shallcross, A Cutter-Hammer Co.
Selma, North Carolina

55026
Simpson Electric Co.
Div. of Am. Gage and Mach. Co.
Elgin, Illinois

56289
Sprague Electric Co.
North Adams, Massachusetts

58474
Superior Electric Co.
Bristol, Connecticut

60399
Torin Corp. formerly
Torrington Mfg. Co.
Torrington, Connecticut

63743
Ward Leonard Electric Co., Inc.
Mount Vernon, New York

64834
West Mfg. Co.
San Francisco, California

65092
Weston Instruments Inc.
Newark, New Jersey

66150
Winslow Tele-Tronics Inc.
Eaton Town, New Jersey

70485
Atlantic India Rubber Works
Chicago, Illinois

70563
Amperite Company
Union City, New Jersey

70903
Belden Corp.
Geneva, Illinois

71002
Birnback Radio Co., Inc.
Freeport, New York

71400
Bussmann Mfg.
Div. of McGraw-Edison Co.
Saint Louis, Missouri

71450
CTS Corp.
Elkhart, Indiana

71468
ITT Cannon Electric Inc.
Santa Ana, California

71482
Clare, C.P. & Co.
Chicago, Illinois

71590
Centrelab Electronics
Div. of Globe Union Inc.
Milwaukee, Wisconsin

71707
Coto Coil Co., Inc.
Providence, Rhode Island

71744
Chicago Miniature Lamp Works
Chicago, Illinois

71785
TRW Electronics Components
Cinch Connector Operations Div.
Elk Grove Village
Chicago, Illinois

72005
Wilber B. Driver Co.
Newark, New Jersey

72092
Replaced by 06980

72136
Electro Motive Mfg. Co.
Williamantic, Connecticut

72259
Nytronics Inc.
Pelham Manor, New Jersey

72619
Dialight Div.
Amperex Electronic Corp.
Brooklyn, New York

72653
G.C. Electronics
Div. of Hydrometals, Inc.
Brooklyn, New York

72665
Replaced by 90303

72794
Dzus Fastener Co., Inc.
West Islip, New York

72928
Gulton Ind. Inc.
Gudeman Div.
Chicago, Illinois

## Federal Supply Codes for Manufacturers (cont)

72982
Erie Tech. Products Inc.
Erie, Pennsylvania

73138
Bechman Instrument Inc.
Helipot Division
Fullerton, California

73293
Hughes Aircraft Co.
Electron Dynamics Div.
Torrance, California

73445
Amperex Electronic Corp.
Hicksville, New York

73559
Carling Electric Inc.
West Hartford, Connecticut

73586
Circle F Industries
Trenton, New Jersey

73734
Federal Screw Products, Inc.
Chicago, Illinois

73743
Fischer Special Mfg. Co.
Cincinnati, Ohio

73899
JFD Electronics Co.
Components Corp.
Brooklyn, New York

73949
Guardian Electric Mfg. Co.
Chicago, Illinois

74199
Quan Nichols Co.
Chicago, Illinois

74217
Radio Switch Corp.
Marlboro, New Jersey

74276
Signalite Div.
General Instrument Corp.
Neptune, New Jersey

74306
Piezo Crystal Co.
Carlisle, Pennsylvania

74542
Hoyt Elect. Instr. Works
Penacook, New Hampshire

74970
Johnson E.F., Co.
Waseca, Minnesota

75042
TRW Electronics Components
IRC Fixed Resistors
Philadelphia, Pennsylvania

75376
Kurz-Kasch Inc.
Dayton, Ohio

75378
CTS Knights Inc.
Sandwich, Illinois

75382
Kulka Electric Corp.
Mount Vernon, New York

75915
Littlefuse Inc.
Des Plaines, Illinois

76854
Oak Industries Inc.
Switch Div.
Crystal Lake, Illinois

77342
AMF Inc.
Potter & Brumfield Div.
Princeton, Indiana

77638
General Instrument Corp.
Rectifier Division
Brooklyn, New York

77969
Rubbercraft Corp. of CA. LTD.
Torrance, California

78189
Shakeproof
Div. of Illinois Tool Works Inc.
Elgin, Illinois

78277
Sigma Instruments, Inc.
South Braintree, Massachusetts

78488
Stackpole Carbon Co.
Saint Marys, Pennsylvania

78553
Eaton Corp. Engineered
Fastener Div.
Tinnerman Plant
Cleveland, Ohio

79136
Waldes Kohinoor Inc.
Long Island City, New York

79497
Western Rubber Company
Goshen, Indiana

79963
Zierick Mfg. Corp.
Mt. Kisko, New York

80031
Electro-Midland Corp.
Mepco Div.
A North American Phillips Co.
Norristown, New Jersey

80145
LFE Corp., Process Control Div.
formerly API Instrument Co.
Chesterland, Ohio

80183
Use 56289
Sprague Products
North Adams, Massachusetts

80294
Bourns Inc., Instrument Div.
Riverside, California

80583
Hammarlund Mfg. Co., Inc.
Red Bank, New Jersey

80640
Arnold Stevens, Inc.
South Boston, Massachusetts

81073
Grayhill, Inc.
La Grange, Illinois

81312
Winchester Electronics
Div. of Litton Industries Inc.
Oakville, Connecticut

81483
Therm-O-Disc Inc.
Mansfield, Ohio

81483
International Rectifier Corp.
Los Angeles, California

81590
Korry Mfg. Co.
Seattle, Washington

81741
Chicago Lock Co.
Chicago, Illinois

82305
Palmer Electronics Corp.
South Gate, California

82389
Switchcraft Inc.
Chicago, Illinois

82415
North American Phillips
Controls Corp.
Frederick, Maryland

82872
Roanwell Corp.
New York, New York

82877
Rotron Inc.
Woodstock, New York

82879
ITT Royal Electric Div.
Pawtucket, Rhode Island

83003
Varo Inc.
Garland, Texas

83058
The Carr Co., United Can Div.
of TRW
Cambridge, Massachusetts

83298
Bendix Corp.
Electric Power Div.
Eatontown, New Jersey

83330
Herman H. Smith, Inc.
Brooklyn, New York

83478
Rubbercraft Corp.
of America, Inc.
West Haven, Connecticut

83594
Burroughs Corp.
Electronic Components Div.
Plainfield, New Jersey

83740
Union Carbide Corp.
Battery Products Div.
formerly Consumer Products Div.
New York, New York

84171
Arco Electronics
Great Neck, New York

84411
TRW Electronic Components
TRW Capacitors
Ogallala, Nebraska

84613
Fuse Indicator Corp.
Rockville, Maryland

84682
Essex International Inc.
Industrial Wire Div.
Peabody, Massachusetts

86577
Precision Metal Products
of Malden Inc.
Stoneham, Massachusetts

86684
Radio Corp. of America
Electronic Components Div.
Harrison, New Jersey

86928
Seastrom Mfg. Co., Inc.
Glendale, California

87034
Illuminated Products Inc.
Subsidiary of Oak Industries Inc.
Anahiem, California

88219
Gould Inc.
Industrial Div.
Trenton, New Jersey

88245
Litton Systems Inc.
Useco Div.
Van Nuys, California

88419
Cornell-Dubilier Electronic Div.
Federal Pacific Co.
Fuquay-Varian, North Carolina

88486
Plastic Wire & Cable
Jewitt City, Connecticut

88690
Replaced by 04217

89536
John Fluke Mfg. Co., Inc.
Seattle, Washington

89730
G.E. Co., Newark Lamp Works
Newark, New Jersey

## Federal Supply Codes for Manufacturers (cont)

90201
Mallory Capacitor Co.
Div. of P.R. Mallory Co., Inc.
Indianapolis, Indiana

90211
Use 56365
Square D Co.
Chicago, Illinois

90215
Best Stamp & Mfg. Co.
Kansas City, Missouri

90303
Mallory Battery Co.
Div. of Mallory Co., Inc.
Tarrytown, New York

91094
Essex International Inc.
Suglex/IWP Div.
Newmarket, New Hampshire

91293
Johanson Mfg. Co.
Boonton, New Jersey

91407
Replaced by 58474

91502
Associated Machine
Santa Clara, California

91506
Augat Inc.
Attleboro, Massachusetts

91637
Dale Electronics Inc.
Columbus, Nebraska

91662
Elco Corp.
Willow Grove, Pennsylvania

91737
Use 71468
Gremar Mfg. Co., Inc.
ITT Cannon/Gremar
Santa Ana, California

91802
Industrial Devices, Inc.
Edgewater, New Jersey

91833
Keystone Electronics Corp.
New York, New York

91836
King's Electronics Co., Inc.
Tuckahoe, New York

91929
Honeywell Inc.
Micro Switch Div.
Freeport, Illinois

91934
Miller Electric Co., Inc.
Div. of Aunet
Woonsocket, Rhode Island

92194
Alpha Wire Corp.
Elizabeth, New Jersey

93332
Sylvania Electric Products
Semiconductor Products Div.
Woburn, Massachusetts

94145
Replaced by 49956

94154
Use 94988
Wagner Electric Corp.
Tung-Sol Div.
Newark, New Jersey

94222
Southco Inc. formerly
South Chester Corp.
Lester, Pennsylvania

95146
Alco Electronic Products Inc.
Lawrence, Massachusetts

95263
Leecraft Mfg. Co.
Long Island City, New York

95264
Replaced by 98278

95275
Vitramon Inc.
Bridgeport, Connecticut

95303
RCA Corp.
Receiving Tube Div.
Cincinnati, Ohio

95348
Gordo's Corp.
Bloomfield, New Jersey

95354
Methode Mfg. Corp.
Rolling Meadows, Illinois

95712
Bendix Corp.
Electrical Components Div.
Microwave Devices Plant
Franklin, Indiana

95987
Weckesser Co. Inc.
Chicago, Illinois

96733
San Fernando Electric Mfg. Co.
San Fernando, California

96853
Gulton Industries Inc.
Measurement and Controls Div.
formerly Rustrak Instruments Co.
Manchester, New Hampshire

96881
Thomson Industries, Inc.
Manhasset, New York

97540
Master Mobile Mounts, Div. of
Whitehall Electronics Corp.
Ft. Meyers, Florida

97913
Industrial Electronic
Hardware Corp.
New York, New York

97945
Penwalt Corp.
SS White Industrial Products Div.
Piscataway, New Jersey

97966
Replaced by 11358

98094
Replaced by 49956

98159
Rubber-Teck, Inc.
Gardena, California

98278
Malco A Microdot Co., Inc.
Connector & Cable Div.
Pasadena, California

98291
Sealectro Corp.
Mamaroneck, New York

98388
Royal Industries
Products Div.
San Diego, California

98743
Replaced by 12749

98925
Replaced by 14433

99120
Plastic Capacitors, Inc.
Chicago, Illinois

99217
Bell Industries Elect.
Comp. Div.
formerly Southern Elect. Div.
Burbank, California

99392
STM
Oakland, California

99515
ITT Jennings Monrovia Plant
Div. of ITT Jennings formerly
Marshall Industries Capacitor Div.
Monrovia, California

99779
Use 29587
Bunker-Ramo Corp.
Barnes Div.
Landsdowne, Pennsylvania

99800
American Precision Industries Inc.
Delevan Division
East Aurora, New York

99942
Centrelab Semiconductor
Centrelab Electronics Div. of
Globe-Union Inc.
El Monte, California

Toyo Electronics
(R-Ohm Corp.)
Irvine, California

National Connector
Minneapolis, Minnesota

## Fluke Technical Service Centers - U.S. and Canada

### UNITED STATES

**CA, Burbank**
Fluke Technical Center
2020 N. Lincoln Street
Burbank, CA 91504
(213) 849-4641

**CA, Santa Clara**
Fluke Technical Center
2300 Walsh Avenue
Santa Clara, CA 95050
(408) 985-1200

**CO, Denver**
Fluke Technical Center
1980 S. Quebec Street, Unit 4
Denver, CO 80231
(303) 750-1228

**FL, Orlando**
Fluke Technical Center
940 N. Fern Creek Avenue
Orlando, FL 32803
(305) 896-2296

**IL, Rolling Meadows**
Fluke Technical Center
1400 Hicks Road
Rolling Meadows, IL 60008
(312) 398-5800

**MA, Waltham**
Fluke Technical Center
244 Second Avenue
Waltham, MA 02154
(617) 890-1604

**MD, Rockville**
Fluke Technical Center
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1576

**MN, Apple Valley**
Fluke Technical Center
7373 West 147th Street, Suite 196
Apple Valley, MN 55124
(612) 432-9400

**NC, Greensboro**
Fluke Technical Center
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

**NJ, Paramus**
Fluke Technical Center
West 75th Century Road
Paramus, NJ 07652
(210) 262-9550

**TX, Dallas**
Fluke Technical Center
14400 Midway Road
Dallas, TX 75240
(214) 233-9945

**WA, Mountlake Terrace**
John Fluke Mfg. Co., Inc.
21707 66th Avenue W., Suite 1
Mountlake Terrace, WA 98043
(206) 774-2206

### CANADA

**ALB, Calgary**
Allan Crawford Assoc., Ltd.
1935 30th Avenue N.E. #14
Calgary, ALB T2E 6Z5
(403) 230-1341

**ONT, Mississauga**
Allan Crawford Assoc., Ltd.
6503 Northam Drive
Mississauga, ONT L4V 1J5
(416) 678-1500

**QUE, St. Laurent**
Allan Crawford Assoc., Ltd.
7018 Cote de Liesse
St. Laurent, QUE H4T 1E7
(514) 731-8564

## Technical Service Centers - International

**ARGENTINA**
Fluke Latin American
Service Headquarters
Virrey del Pino 4071
Buenos Aries, Argentina
Tel: 523185

**AUSTRALIA**
Elmeasco Instrument Pty Ltd.
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel: (02) 736-2888

**AUSTRIA**
Walter Rekirsch
Elektronische Gerate GmbH & Co.
Vertriebs-KG.
Liechtensteinstrasse 97/6
A-1090 Vienna, Austria
Tel: 09-43-222-347646

**BELGIUM**
Fluke (Belgium)S.A./N.V.
6, Rue de Geneve
1140 Brussels, Belgium
Tel: 09-32-2-2164090

**BRAZIL**
Arotec S.A.
Industria e Comercio
Av. Pacaembu 811
01234 Sao Paulo S.P., Brazil
Tel: 826-2266

**CHILE**
Intronica Chile Ltda.
Casilla 16228
Santiago 9, Chile
Tel: 44940

**COLOMBIA**
Coasin Ltda.
Carrera 13, # 37-37, Of. 407
Ap. Aero 29583
Bogota DE, Colombia
Tel: 285-0230

**DENMARK**
Tage Olsen A/S
Ballerup Byvej 222
DK-2750 Ballerup
Denmark
Tel: (01) 2-65 81 11

**ECUADOR**
Proteco Coasin Cia., Ltda.
Edificia "Jerico"
Ave. 12 de Octubre #2285y
Ave, Orellana (Planta Baja)
Quito, Ecuador
Tel: 526759

**EGYPT**
Lotus Engineering Organisation
P.O. Box 1252
Cairo, Egypt
Tel: 71617

**FINLAND**
Oy Findip AB
Teollisuustie 7
02700 Kauniainen
Finland
Tel: 09-358-0-502255

**FRANCE**
M.B. Electronique S.A.
Rue Fourny
ZAC de BUC
B.P. #31
78530 BUC, France
Tel: 09-33-1-9568131

**GREECE**
Hellenic Scientific
Representations Ltd.
11, Vrassida Street
Athens 615, Greece
Tel: 09-30-1-711140

**HONG KONG**
Gilman Industrial Bldg., 9F
107-109 Wai Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: 3-427144

**INDIA**
Hinditron Services Pvt. Ltd.
"Hinditron House"
412 Raj Mahal Vilas Extension
Bangalore 560 006, India
Tel: 33139

Hinditron Services Pvt. Ltd.
69 A.L. Jagmohandas Marg
Bombay 400 006, India
Tel: 365344

**INDONESIA**
P.T. Dwi Tunggal Jaya Sakti
Sangga Buana Bldg., 1st Floor
J1. Senen Raya 44, P.O. Box 4435
Jakarta, Indonesia
Tel: 376608

**IRAN**
Irantronics Company Ltd.
20 Salm Road
Roosevelt Avenue
Tehran, Iran
Tel: 828294/831564

**ISRAEL**
R.D.T. Electronics Engineering Ltd.
P.O. Box 75
46, Sokolov Street
Ramat Hasharon 47235
Israel
Tel: 09-972-3-483211

**ITALY**
Sistrel S.p.A.
Via Timavo 66
20099 Sesto S. Giovanni (Milan)
Italy
Tel: 09-39-2-2476693

Sistrel S.P.A.
Via Guiseppe Armellini #37
00143 Rome, Italy
Tel: 09-39-6-5915551

**JAPAN**
John Fluke Mfg. Co., Inc.
Japan Branch
1 Higashikata-machi
Midori-ku
Yokohama 226, Japan
Tel: (045) 473-5425

**KOREA**
Electro-Science Korea Co.
C.P.O. Box 8446
Room 1201 Bowon Bldg.
490 Chongro - 5 Ka
Chongro-ku
Seoul, Korea
Tel: 261-7702

**MALASIA**
O'Connor's (Malaysia) SDN. BHD.
P.O. Box 91
Petaling Jaya, Selangor
West Malaysia
Tel: 51563

## Technical Service Centers - International (cont)

**MEXICO**
C.J. Christensen S.A. De C.V.
Melchor Ocampo 150-8
Mexico 4 D.F., Mexico
Tel: (905) 535-2258

**NETHERLANDS**
Fluke (Nederland) B.V.
P.O. Box 5053
5004 EB Tilburg
The Netherlands
Tel: (013) 673973

**NEW ZEALAND**
W & K McLean Ltd.
P.O. Box 18065
Glen Innes
Auchland, New Zealand
Tel: 587-037

**NORWAY**
Morgenstierne & Co. A/A
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: 09-47-2-356110

**PAKISTAN**
Pak International Operations
505 Mohammadi House
1.1. Chundrigar Road
Katrachi-2 Pakistan
Tel: 221127/239052

**PERU**
Importaciones Y Representaciones Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: 288650

**PORTUGAL**
Equipamentos de Laboratorio, Ltda
P.O. Box 1100
Lisbon 1002, Portugal
Tel: 09-351-1-578936/547512

**REPUBLIC OF SINGAPORE**
Rank O'Connor's (PTE) Ltd.
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: 637944

**REPUBLIC OF SOUTH AFRICA**
Fluke S.A. (Pty) Ltd.
P.O. Box 39797
Bramley 2018
Republic of South Africa
Tel: (011) 786-3170

**SPAIN**
Hispano Electronica S.A.
Apartado de Correos 48
Alcorcon (Madrid)
Spain
Tel: 09-3416194108

**SWEDEN**
Teleinstrument AB
P.O. Box 490
S-162 Vallingby 4
Sweden
Tel: 09-46-8-380370

**SWITZERLAND**
Traco Electronic AG
Jenatschstrasse 1
8002 Zurich
Switzerland
Tel: 09-41-1-2010711

**TAIWAN**
CCT Associates, Inc.
P.O. Box 24209
Taipei, Taiwan
Republic of China
Tel: (02) 391-6894/393-5760

**THAILAND**
Dynamic Supply Engineering R.O.P.
# 56 Ekamai, Sukhumvit 63
Bangkok-11, Thailand
Tel: 914434/928532

**TURKEY**
Erkman Electronik Aletler
Ticaret Anonim Sirketi
Necatiby Cad 92/3
Karakoy, Istanbul, Turkey
Tel: 09-44-1-5461

**UNITED KINGDOM**
Fluke International Corp. - UK
Colonial Way
Watford, Herts. WD24TT
United Kingdom
Tel: 09-4492340511

**URUGUAY**
Coasin Uruguaya S.R.L.
Edifico Ciudadela
Sarandi 690 D. Esc. 109
Casilla de Correos 1400
Correo Central
Montevideo, Uruguay
Tel: 917978

**VENEZUELA**
Coasin C.A.
Apdo. Postal 50939
Sabana Grande # 1
Caracas 105, Venezuela
Tel: 782-9109

**WEST GERMANY**
Fluke (Deutschland) GmbH
Krausstrasse 32
8045 Ismaning
West Germany
Tel: (089) 96251

**Customers in the following countries: Bulgaria, Czechoslovakia, Hungary, Poland, Romania, U.S.S.R., and Yugoslavia, contact: Amtest Associates Ltd., P.O. Box 55, Addlestone, Surrey, KT 15 1DU, England, Tel. (0932) 52121**

## Sales Representatives - U.S. and Canada

**UNITED STATES**

**AK, Anchorage**
Harry Lang & Associates
1371 Hillcrest Drive #303
Anchorage, AK 99503
(907) 279-5741

**AL, Huntsville**
John Fluke Mfg. Co., Inc.
3322 Memorial Parkway
Huntsville, AL 35807
(205) 881-6220
(404) 321-0980 (Atlanta)

**AZ, Tempe**
John Fluke Mfg. Co., Inc.
2125 S. 48th Street, Suite 104
Tempe, AZ 85285
(602) 967-8724

**CA, Los Angeles**
John Fluke Mfg. Co., Inc.
20902 S. Bonita Street
Carson, CA 90746
(213) 538-3900

**CA, Santa Clara**
John Fluke Mfg. Co., Inc.
2300 Walsh Avenue
Santa Clara, CA 95050
(408) 244-1505

**CA, Tustin**
John Fluke Mfg. Co., Inc.
15445 Red Hill Avenue, Suite F
Tustin, CA 92680
(714) 838-8863
(714) 226-1254 (San Diego)

**CO, Denver**
John Fluke Mfg. Co., Inc.
1980 S. Quebec, #4
Denver, CO 80231
(303) 750-1222

**CT, Hartford**
John Fluke Mfg. Co., Inc.
124 Hebron Avenue
Glastonbury, CT 06033
(203) 633-0777

**FL, Orlando**
John Fluke Mfg. Co., Inc.
940 N. Fern Creek Avenue
Orlando, FL 32803
(305) 896-4881

**HI, Honolulu**
EMC Corporation
2979 Ualena Street
Honolulu, HI 96819
(808) 847-1138

**IA, Iowa City**
John Fluke Mfg. Co., Inc.
1027 Hollywood Blvd., Suite 309
Iowa City, IA 52240
(319) 354-2811

**IL, Chicago**
John Fluke Mfg. Co., Inc.
4300 Lincoln, Unit K
Rolling Meadows, IL 60008
(312) 398-0850

**IN, Indianapolis**
John Fluke Mfg. Co., Inc.
5610 Crawfordsville Road,
Suite 802
Indianapolis, IN 46224
(317) 244-2456

**LA, Metairie**
John Fluke Mfg. Co., Inc.
2700 Kingman Street, Suite 103
Metairie, LA 70002
(504) 455-0814

**MA, Waltham**
John Fluke Mfg. Co., Inc.
244 Second Avenue
Waltham, MA 02154
(617) 890-1600

**MD, Baltimore**
John Fluke Mfg. Co., Inc.
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1570
(301) 792-7060(Baltimore)

**MI, Detroit**
John Fluke Mfg. Co., Inc.
13955 Farmington Road
Livonia, MI 48154
(313) 522-9140

**MN, Minneapolis**
John Fluke Mfg. Co., Inc.
7373 W. 147th Street, Suite 196
Apple Valley, MN 55124
(612) 432-9400

**MO, Kansas City**
John Fluke Mfg. Co., Inc.
4406 Chouteau Traffic Way
Kansas City, MO 64117
(816) 454-5836

**MO, St. Louis**
John Fluke Mfg. Co., Inc.
300 Brookes Drive, Suite 100
Hazelwood, MO 63042
(314) 731-3388

## Sales Representatives - U.S. and Canada (cont)

**NC, Greensboro**
John Fluke Mfg. Co., Inc.
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

**NJ, Paramus**
John Fluke Mfg. Co., Inc.
West 75 Century Road
Paramus, NJ 07625
(201) 262-9550

**NM, Albuquerque**
John Fluke Mfg. Co., Inc.
1108 Alvarado Drive N.E.
Albuquerque, NM 87110
(505) 265-8431

**NY, Rochester**
John Fluke Mfg. Co., Inc.
4515 Culver Road
Rochester, NY 14622
(716) 266-1400

**OH, Cleveland**
John Fluke Mfg. Co., Inc.
7830 Freeway Circle
Middleburg Heights, OH 44130
(216) 234-4540

**OH, Dayton**
John Fluke Mfg. Co., Inc.
4756 Fishburg Road
Dayton, OH 45424
(513) 233-2238

**OR, Portland**
John Fluke Mfg. Co., Inc.
18360 S.W. Springfield Lane
Aloha, OR 97006
(502) 642-1342

**PA, Philadelphia**
John Fluke Mfg. Co., Inc.
1010 W. 8th Avenue, Suite H
King of Prussia, PA 19406
(215) 265-4040
(412) 261-5171 (Pittsburgh)

**TX, Austin**
John Fluke Mfg. Co., Inc.
111 W. Anderson Lane, Suite 213
Austin, TX 78752
(512) 478-9901

**TX, Dallas**
John Fluke Mfg. Co., Inc.
14400 Midway Road
Dallas, TX 75243
(214) 233-9990

**TX, Houston**
John Fluke Mfg. Co., Inc.
1014 Wirt Road, Suite 270
Houston, TX 77055
(713) 683-7913
(512) 222-2726 (San Antonio)

**UT, Salt Lake City**
John Fluke Mfg. Co., Inc.
782 E. 8325 South
Sandy, UT 84070
(801) 566-4864

**WA, Kennewick**
John Fluke Mfg. Co., Inc.
3613 W. 16th Place #C
Kennewick, WA 99336

**WA, Seattle**
John Fluke Mfg. Co., Inc.
975 Industry Drive
Seattle, WA 98188
(206) 575-3765

**CANADA**

**ALB, Calgary**
Allan Crawford Assoc., Ltd.
1935 30th Avenue N.E., #14
Calgary, ALB T2E 6Z5
Tel: (403) 230-1341

**BC, North Vancouver**
Allan Crawford Assoc., Ltd
3795 William Street
Burnaby, BC Y5C 3H3
Tel: (604) 294-1326

**NS, Halifax**
Allan Crawford Assoc., Ltd
Townsend Place, Suite 201
800 Windmill Road
Burnside Industrial Park
Dartmounth, NS B3B 1L1
Tel: (902) 469-7865

**ONT, Ottawa**
Allan Crawford Assoc., Ltd
1299 Richmond Road
Ottawa, ONT K2B 7Y4
Tel: (613) 829-9651

**ONT, Toronto**
Allan Crawford Assoc., Ltd.
6503 Northam Drive
Mississauga, ONT L4V 1J5
Tel: (416) 678-1500

**QUE, Montreal**
Allan Crawford Assoc., Ltd.
7018 Cote de Liesse
St. Laurent, QUE H4T 1E7
Tel: (514) 731-8564

**For more information on Fluke products or Sales Offices you may dial (800) 426-0361 toll free in most of U.S. From Alaska, Hawaii, Washington, or Canada phone (206) 774-2481. From other countries phone (206) 774-2398.**

**For Canadian areas not listed, contact the office nearest you or Allan Crawford Assoc. Ltd., Mississauga (Toronto), Ontario.**

## Sales Representatives - International

**Supplied and Supported by Fluke International Corporation, P.O. Box 43210, Mountlake Terrace, WA 98043, Tel: (206) 774-2398, TLX: 152662 JOHNFLUKE MTLT**

**ARGENTINA**
Coasin S.A.
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 525130
TLX: 390122284 COASN AR

**AUSTRALIA**
Elmeasco Instruments Pty Ltd.
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel: (2) 736-2888
TLX: 79025887

Elmeasco Instruments Pty Ltd.
P.O. Box 107
Mt. Waverly, VIC. 3149
Australia
Tel: 233-4044
TLX: 26206 (ELMVIC)

Elmeasco Instruments Pty Ltd.
Professional Suite's Bldg.
B.P.O. Box 2360
Brisbane, 4001
Australia
Tel: (07) 229-3161

Elmeasco Instruments Pty Ltd.
P.O. Box 1240
G.P.O. Adelaide 5001
South Australia

**BOLIVIA**
Coasin Bolivia S.R.L.
Casilla 7295
La Paz, Bolivia
Tel: 40962
TLX: Public Booth # 5377, indicate "Para Coasin B.S.R.L., Av 6 de Agosto 2300 3er Piso, La Paz tl 40962"

**BRAZIL**
Arotec S.A.
Industria e Comercio
Av. Pacaembu 811
01234 Sao Paulo S.P., Brazil
Tel: (011) 67-2393
TLX: 1122207 AROT BR

Arotec S.A.
Rua Araguari, 1705 s 402
30.000 Belo Horizonte M.G., Brazil

Arotec S.A.
Av. Rio Branco 277
Grupo 1309
02000 Rio de Janeiro, R.J., Brazil
Tel: (021) 242-9776

**BRUNEI**
O'Connor's Limited
(Brunei Branch) Chin Kian Bldg.
P.O. Box 2126
Bandar Seri Begawan, Brunei
Tel: 26680

**CHILE**
Intronica Chile Ltda.
Manuel Montt 024 - Of. D
Casilla 16228
Santiago 9, Chile
Tel: 44940
TLX: 40301 Cab Publ.,
Attn: Intronica Chile

**CHINA, PEOPLE'S REPUBLIC OF**
China National Instrument Import & Export Corp.
P.O. Box 49, Erh-Li-Kou
Hsi Chi'ao
Beijing
People's Republic of China
TLX: CO 2242 CNIEC

**COLOMBIA**
Coasin Ltda.
Carrera 13, # 37-37, Of. 407
Ap. Aero 29583
Bogota DE, Colombia
Tel: 285-0230/0250
TLX: 45787 COASN CO

**ECUADOR**
Proteco Coasin Cia., Ltda.
Edificio "Jerico"
Ave. 12 de Octubre #2285 y
Ave. Oreliana (Planta Baja)
Quito, Ecuador
Tel: 529684
TLX: 2865 Protec Ed

Proteco Coasin Cia., Ltda
Casilla 9733
9 de Octubre 424
Edificio Gran Pasaje, Of. 1012
Guayaquil, Ecuador

## Sales Representatives - International (cont)

**HONG KONG**
Gilman & Co., Ltd.
P.O. Box 56
Gilman Ind. Bldg. 9 F
107-109 Wai Yip Street
Kwun Tong, Kowloon
Hong Kong
Tel: 5-7909633
TLX: 73358 GILMN HX

**ICELAND**
Kristjan O. Skagfjord Ltd.
P.O. Box 906
Reykjavik, Iceland
Tel: 24120
TLX: 2133 KOS-1S

**INDIA**
Hinditron Services Pvt. Ltd.
69 A.L., Jagmohandas Marg
Bombay 400 006
India
Tel: 811316
TLX: 953-112326 Hspl In

Hinditron Services Pvt. Ltd.
"Hinditron House"
412 Raj Mahl Vilas Extension
Bangalore 560 006
India
Tel: 33139
TLX: 043741

**INDONESIA**
P.T. Dwi Tunggal Jaya Sakti
Sangga Buana Bldg., 1st Floor
Jl. Senen Raya 44, P.O. Box 4435
Jakarta, Indonesia
Tel: 367390-9
TLX: 46624 SABUANA 1A

P.T. Dwi Tunggal Jaya Sakti
Jalan Sasakgantung 45
Bandung, Indonesia
Tel: 367390-9
TLX: 46624 SABUANA 1A

**JAPAN**
John Fluke Mfg. Co., Inc.
Japan Branch
(PC Board Testers only)
1 Higashikata-machi
Midori-ku
Yokohama 226, Japan
Tel: (045) 473-5425
TLX: 3823-666 FLUKJPJ

Tokyo Electron Ltd.
38 Fl. Shinjuko Nomura Bldg.
1-26-2, Nishi-Shinjuku
Shinjuku-ku
Tokoyo 160, Japan
Tel: 03-343-4411
TLX: 2322220 LABTEL J

**KENYA**
ADCom Limited Inc.
P.O. Box 30070
Nairobi, Kenya
East Africa
Tel: 331955
TLX: 22639 ADCOM

**KOREA**
Electro-Science Korea Co.
C.P.O. Box 8446
Room. 1201 Bowon Bldg.
490 Chongro - 5 Ka
Chongro-ku
Seoul, Korea
Tel: 261-7702
TLX: 78723270+

**MALAYSIA**
O'Connor's (PTE) Limited
P.O. Box 91
Petaling Jaya, Selangor
West Malaysia
Tel: 51563
TLX: OCONOR MA37649

O'Connor's (PTE) Limited
Lot # 5 Taman Mesra
Mile 3, Jalan Penampang
Kota Kinabulu
East Malaysia
Tel: 55322
TLX: MA80286FL

**MEXICO**
C.J. Christensen S.A. De C.V.
Instrumentos Electronicos
de Medicion
Melchor Ocampo 150-8
Mexico 4 D.F., Mexico
Tel: (905) 535-2258

**NEW ZEALAND**
W & K McLean Ltd.
P.O. Box 18065
Glen Innes
Auckland, New Zealand
Tel: 587-037
TLX: N.Z. 7912763

W & K McLean Ltd.
P.O. Box 2421
Christchurch, New Zealand

W & K McLean Ltd.
P.O. Box 496
Wellington, New Zealand
Tel: 851-450

**NIGERIA**
Mofat Engineering Co., Ltd.
P.O. Box 6369
Lagos, Nigeria
TLX: 21353, Attn: MOFAT

**PAKISTAN**
Pak International Operations
505 Mohammadi House
- McLeod Road
P.O. Box 5323
Karachi, Pakistan
Tel: 221127
TLX: 24494 PIO PK

**PERU**
Importaciones Y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: 288650
TLX: 37425663

**PHILIPPINES**
Spark Radio and Electric Supply
P.O. Box 1333
Manila, Philippines
Tel: 473183
TLX: 27901 RLA PH

**SINGAPORE**
Rank O'Connor's (PTE) Limited
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: 637944
TLX: OCONSIN RS21023

**SOUTH AFRICA**
Fluke S.A. (Pty) Ltd.
P.O. Box 39797
Bramley 2018
Republic of South Africa
Tel: (011) 786-3170
TLX: 82899

**TAIWAN**
CCT Associates, Inc.
P.O. Box 24209
Taipei, Taiwan
Republic of China
Tel: (02) 391-6894
TLX: 24263 Longgulf

**THAILAND**
Dynamic Supply Engineering R.O.P.
# 56 Ekamai, Sukhumvit 63
Bangkok-11, Thailand
Tel: 914434
TLX: TH 82938 MONTIEN TH

**URUGUAY**
Coasin Uruguaya S.R.L.
Edif. Ciudadela
Sarandi 690 D. Esc. 109
Casilla de Correos 1400
Correo Central
Montevideo, Uruguay
Tel: 917978
TLX: Public Booth UY901 Coasin

**VENEZUELA**
Coasin C.A.
Apdo. Postal 50939
Sabana Grande # 1
Caracas 105, Venezuela
Tel: 782-9109-8741
TLX: 39531228

**Latin America also Supported by -**
**Sr. Leonardo Cusnir, c/o COASIN A.A., Virrey del Pino 4071, Buenos Aires, Argentina, Tel: 523185, TLX: 390122284 COASN AR**
**Sr. Benewaldo Padovani, c/o AROTEC S.A., Industria e Comericio, Av. Pacaembu 811, 01234 Sao Paulo S.P., Brazil, Tel: (011) 67-2393, TLX: 1122207 AROT BR**

**Supplied and Supported by Fluke (Holland) B.V., P.O. Box 5053, Zevenheuvelenweg 53, 5004 EB Tilburg, Netherlands, Tel: (013) 673973, TLX: 522337**

**AUSTRIA**
Walter Rekirsch
Electronische Gerate GmbH & Co.
Vertriebs-KG
Liechtensteinstrasse 97/6
A-1090 Vienna, Austria
Tel. (222) 347646
TLX: 134759

**BELGIUM**
Fluke (Belgium) S.A./N.V.
6 Rue de Geneve
1140 Brussels, Belgium
Tel: (2) 2164090
TLX. 26312

**BULGARIA**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (923) 52121
TLX: 928855

**CHAD**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**CYPRUS**
Chris Radiovision Ltd.
P.O. Box 1989
Nicosia, Cyprus
Tel: 66121
TLX: 2395

**CZECHOSLOVAKIA**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**DENMARK**
Tage Olsen A/S
Ballerup Byvej 222
DK - 2750 Ballerup, Denmark
Tel: (2) 658111
TLX: 35293

**EGYPT AND SUDAN**
Lotus Engineering Organisation
P.O. Box 1252
22, Kasi El Nil
Cairo, Egypt
Tel. 971617
TLX. 92504

**EIRE (REPUBLIC OF IRELAND)**
Euro Electronics
32 Brews Hill
Naven, County Meath
Tel: 46-23577
TLX: 31821

**ETHIOPIA**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**FINLAND**
Oy Findip AB
Teollisuustie 7
02700 Kauniainen, Finland
Tel: (0) 502255
TLX: 123129

**FRANCE**
M.B. Elctronique S.A.
Rue Fourny
ZAC de BUC
B.P. # 31
78530 BUC, France
Tel: (1) 9568131
TLX: 695414

**GERMAN DEMOCRATIC REPUBLIC**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**GERMAN FEDERAL REPUBLIC**
Fluke (Deutschland) GmbH
Krausstrasse 55
8045 Ismaning
West Germany
Tel: (089) 96251
TLX: 0522472
Rapitax: (089) 966718

Fluke (Deutschland) GmbH
Meineckestrasse 53
4000 Dusseldorf 30
West Germany
Tel: (0211)450831
TLX: 8585576

Fluke (Deutschland) GmbH
Oberer Kirchhaldenweg 135
7000 Stuttgart 1
West Germany
Tel: (0711) 694091
TLX: 722518

PK Electronik
Lietzenburger Strasse 91
1000 Berlin 15
West Germany
Tel: (030) 8831058

**GREECE**
Hellenic Scientific
Representations Ltd.
11, Vrasside Street
Athens 615, Greece
Tel: (1) 711140
TLX: 219330

**HUNGARY**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**IRAN**
Irantronics Company Ltd.
20. Salm Road
Roosevelt Avenue
Tehran, Iran
Tel: 828294/831564
TLX: 212956/212876

**IRAQ**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**IRELAND**
Euro Electronics
32 Brews Hill
Naven County Meath
Ireland
Tel: (46) 23577
TLX: 3182

**ISRAEL**
R.D.T. Electronics Engineering Ltd.
P.O. Box 75
46, Sokolov Street
Ramat Hasharon 47235
Israel
Tel: (3) 483211
TLX: 32143

**ITALY**
Sistrel S.p.A.
Via Giuseppe Armellini # 37
00143 Rome, Italy
Tel: (6) 5915551
TLX: 680356

Sistrel S.p.A.
Via Timavo 66
20099 Sesto S. Giovanni (Milan)
Italy
Tel: (2) 2476693
TLX: 320346

Sistrel S.p.A
Via Cintia
Parco S. Paolo 35
80126 Naples, Italy
Tel: (81) 7679700

**KUWAIT**
Tareq Company
P.O. Box Safat 20506
Kuwait, Arabian Gulf
Tel: 436100/436045
TLX: 2315

**LEBANON AND JORDAN**
Mabek (Electronics Division)
P.O. Box 11-3823
Beirut, Lebanon
Tel: 252631/348728
TLX: 22889

**LIBYA**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**MOROCCO**
Mainvest, Residence Moulay Ismail
Bat. C Boulevard Moulay Slimane
Rabat, Morocco
Tel: (7) 27664
TLX: 31036

**NETHERLANDS**
Fluke (Nederland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**NORWAY**
Morgenstierne & Co. A/A
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: (2) 356110
TLX: 11719

**PDR YEMEN**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**POLAND**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**PORTUGAL**
Equipamentos de Laboratorio, Ltda.
P.O. Box 1100
1002 Lisbon, Portugal
Tel: (1) 578936/547512
TLX: 18469

**QATER, OMAN & UNITED ARAB EMIRATES**
Technology Organisation
P.O. Box 5549
Doha, Qatar
Tel: 321431
TLX: 4581

**ROMANIA**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**SAUDI ARABIA**
Electronic Equipment
Marketing Co. Ltd.
P.O. Box 3750
Riyadh, Saudi Arabia
Tel: 32761/32700/37023
TLX: 201120

**SOMALIA**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**SPAIN**
Hispano Electronica S.A.
Piligono Industrial Urtinsa
Apartado de Correos 48
Alcorcon (Madrid)
Spain
Tel: (1) 6194108
TLX: 22404/42634

**SWEDEN**
Teleinstrument AB
P.O. Box 490
S-162 04 Vallingby 4
Sweden
Tel: (8) 380370
TLX: 11347

**SWITZERLAND**
Traco Electronic Company Ltd.
I. Jenatschstrasse
Postfach, 8027 Zurich
Switzerland
Tel: (1) 2010711
TXL: 54318

**SYRIA**
Mabek (Electronics Division)
P.O. Box 4238
Damascus, Syria

**TURKEY**
Erkman Electronik Aletler
Ticaret Anonim Sirketi
Necatiby Cad 92/3
Karakoy, Istanbul, Turkey
Tel: (1) 5461
TLX: 23353

**UNITED KINGDOM**
Fluke International Corp.-UK
Colonial Way
Watford, Herts, WD 24 TT
United Kingdom
Tel: (923) 40511

**U.S.S.R.**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**YEMEN**
Fluke (Holland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
5004 EB Tilburg, Netherlands
Tel: (013) 673973
TLX: 52237

**YUGOSLAVIA**
Amtest Associates Ltd.
P.O. Box 55
Addlestone, Surrey KT15 1DU
United Kingdom
Tel: Weybridge (932) 52121
TLX: 928855

**Customers in the following countries: Bulgaria, Czechoslovakia, Hungary, Poland, Romania, U.S.S.R., and Yugoslavia, contact: Amtest Associates Ltd., P.O. Box 55, Addlestone, Surrey, KT 15 1DU, England, Tel. (0932) 52121**

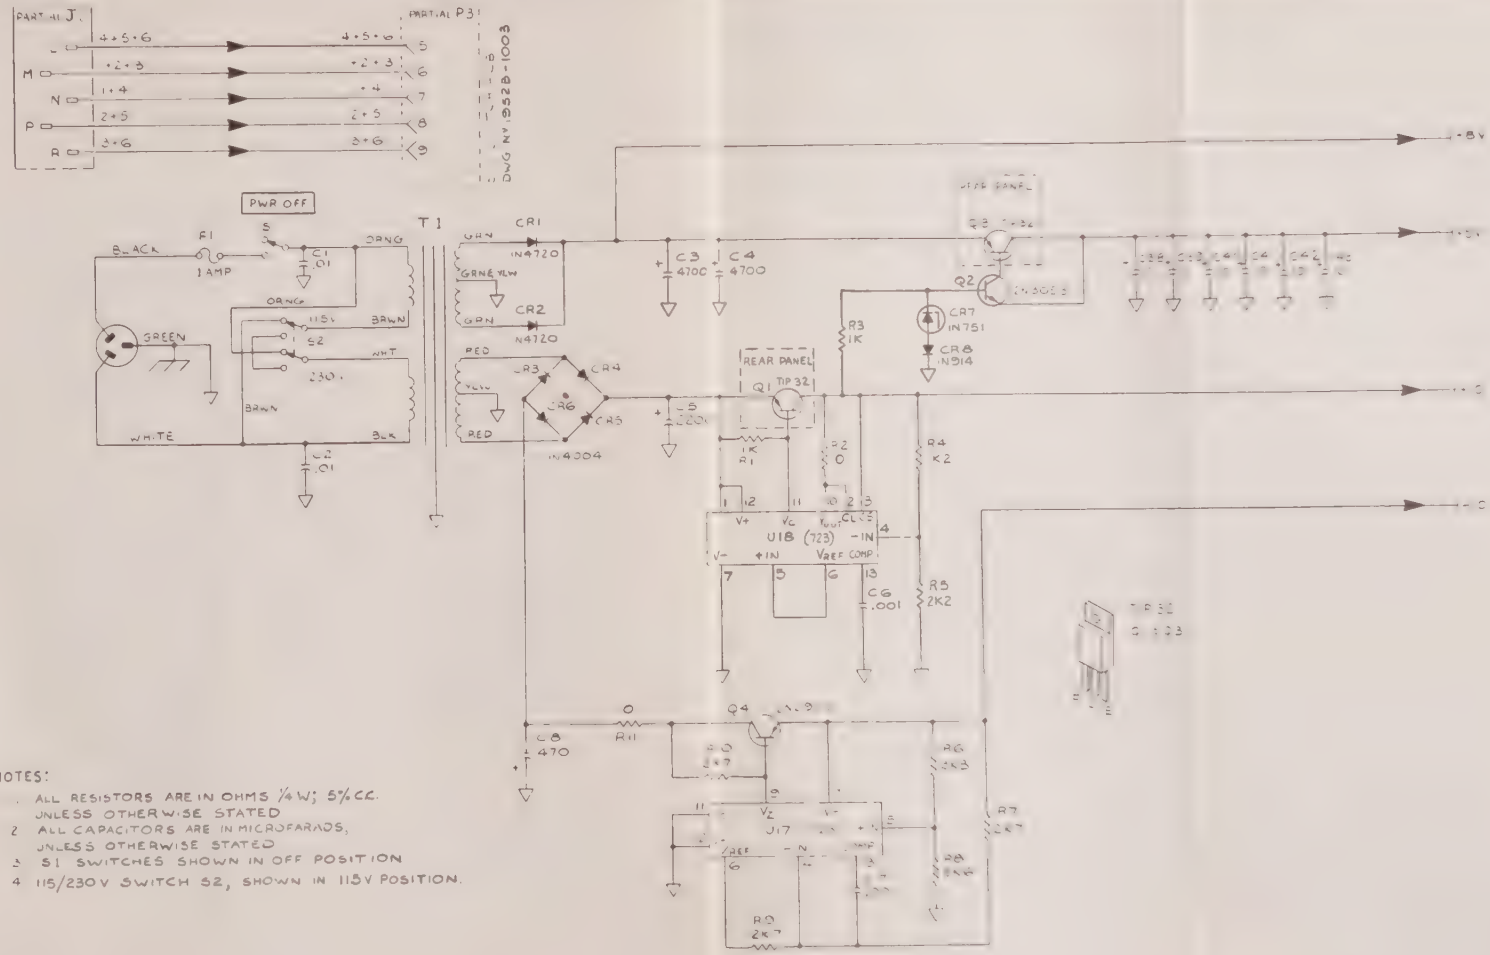


NOTES:

1. ALL RESISTORS ARE IN OHMS 1/4W; 5% CC. UNLESS OTHERWISE STATED
2. ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE STATED
3. S1 SWITCHES SHOWN IN OFF POSITION
4. 115/230V SWITCH S2, SHOWN IN 115V POSITION.

Main PCB Power Supply Schematic - 1952B-1001 - Sheet 1 of 5

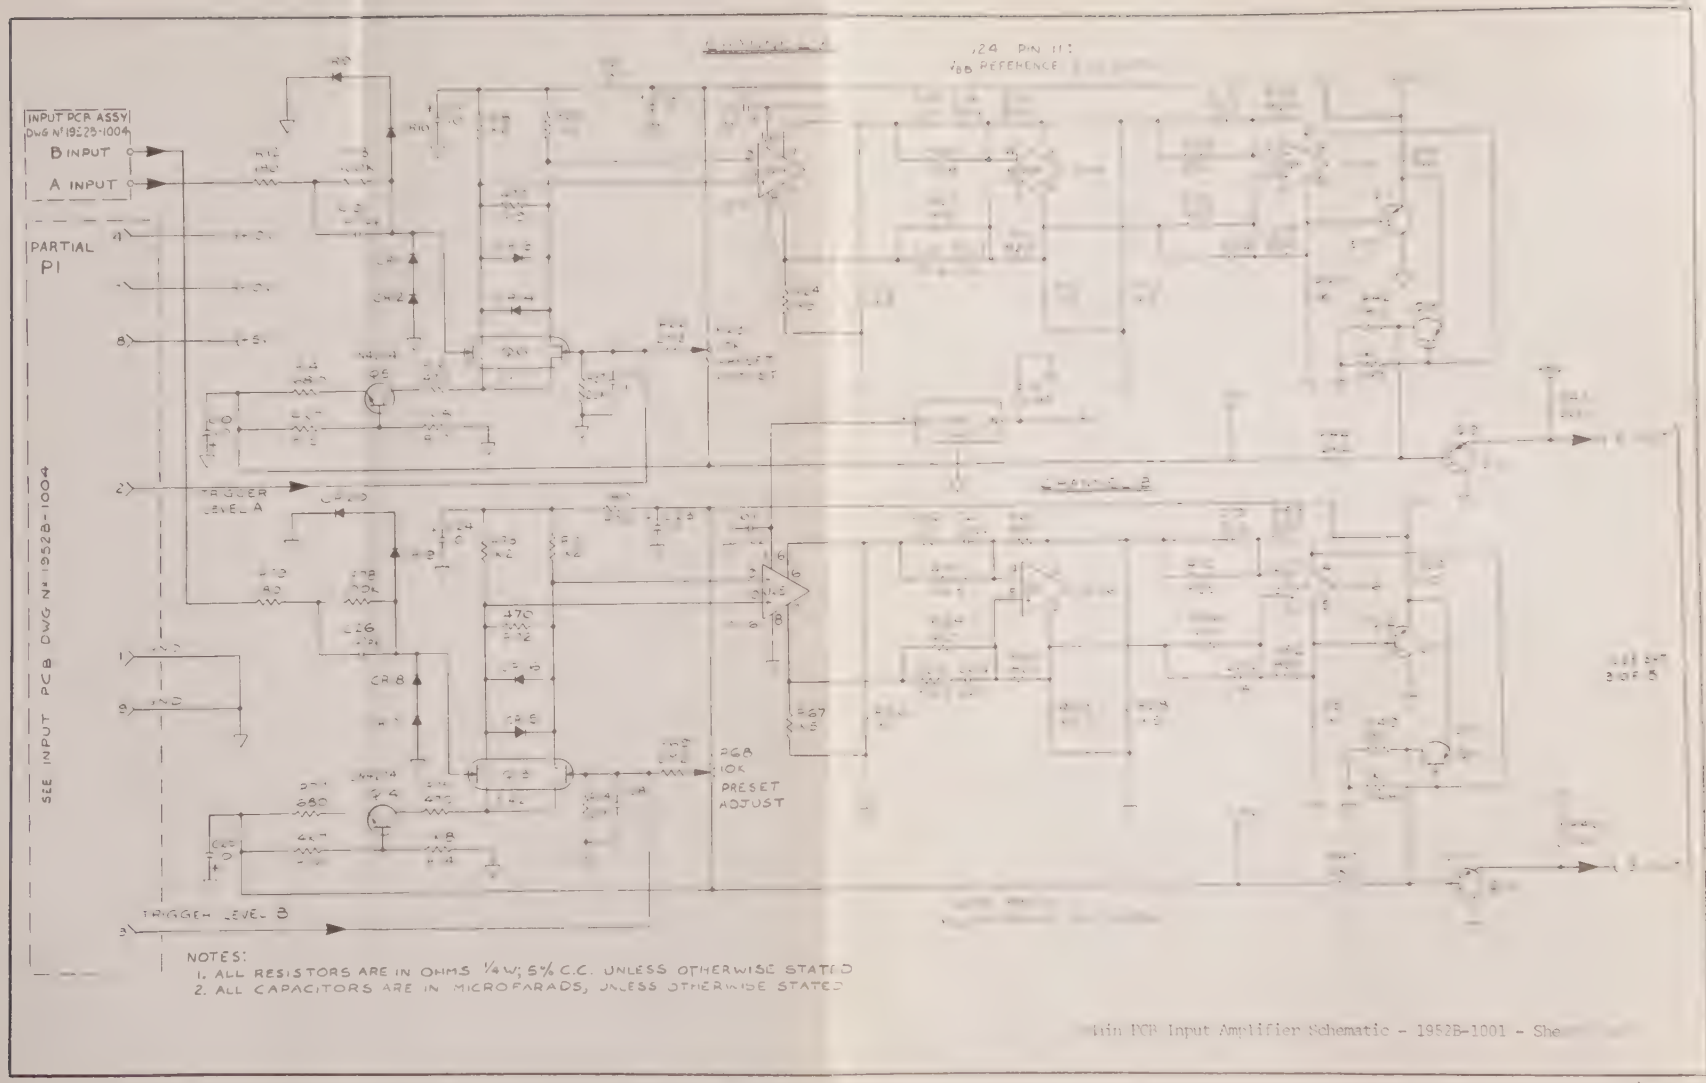


Main PCB Input Amplifier Schematic - 1952B-1001 - She

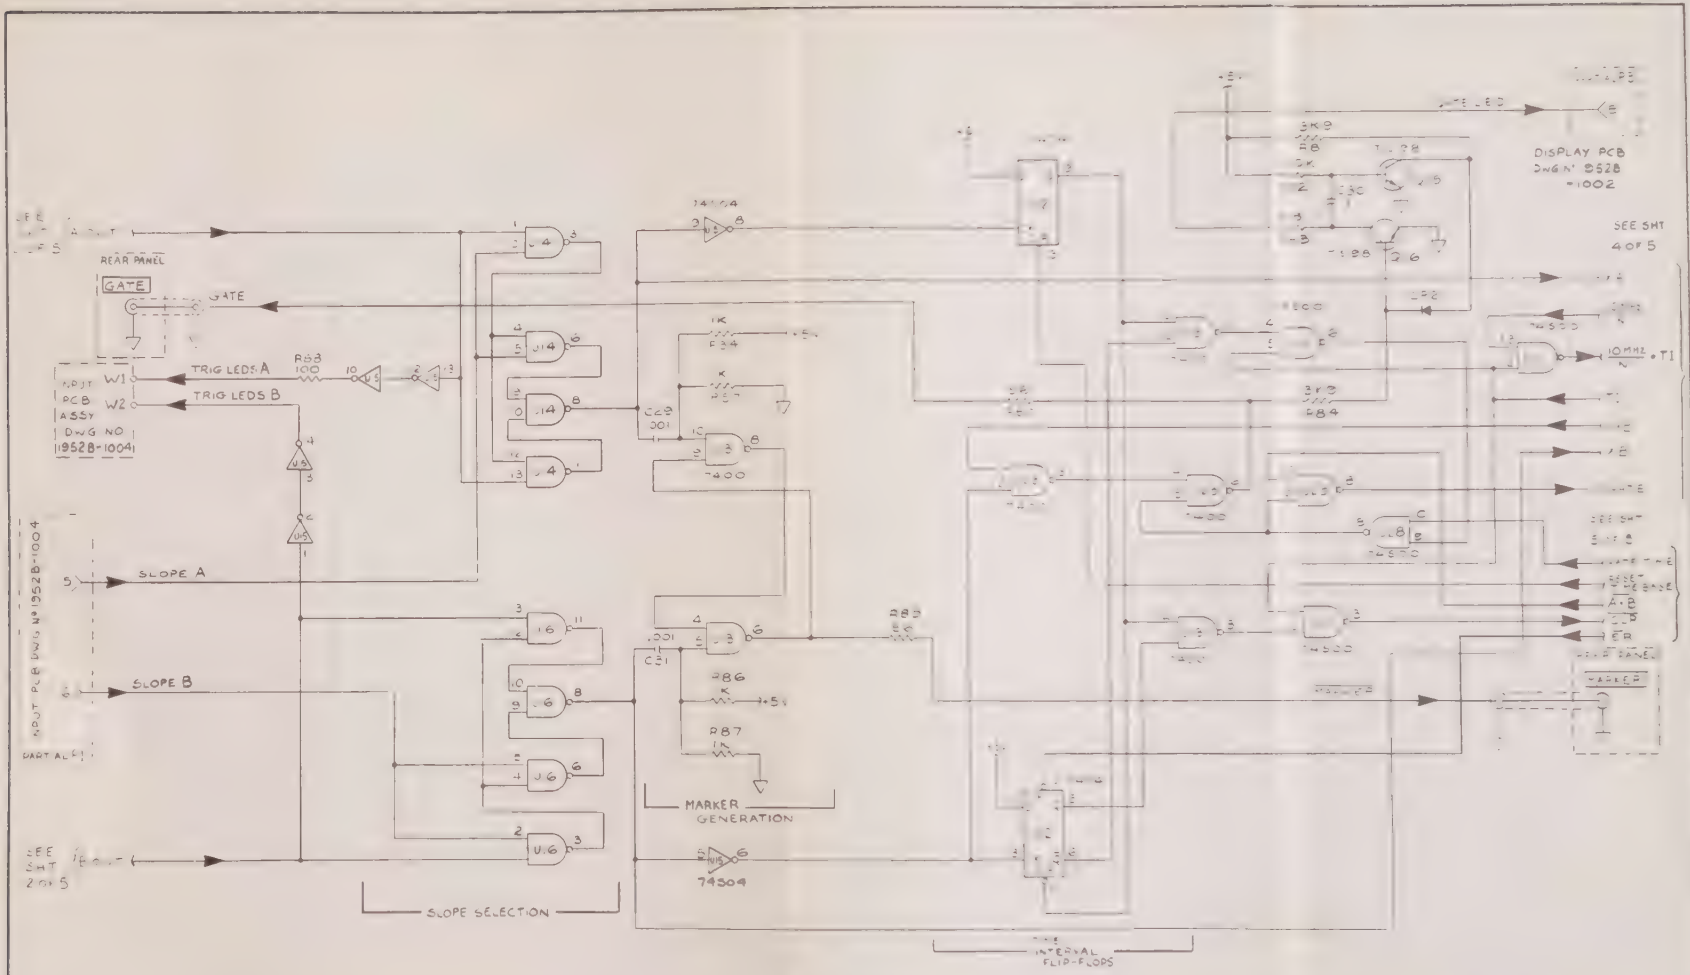


Main PCB Schematic - 1952B-1001 - Sheet 3 of 5

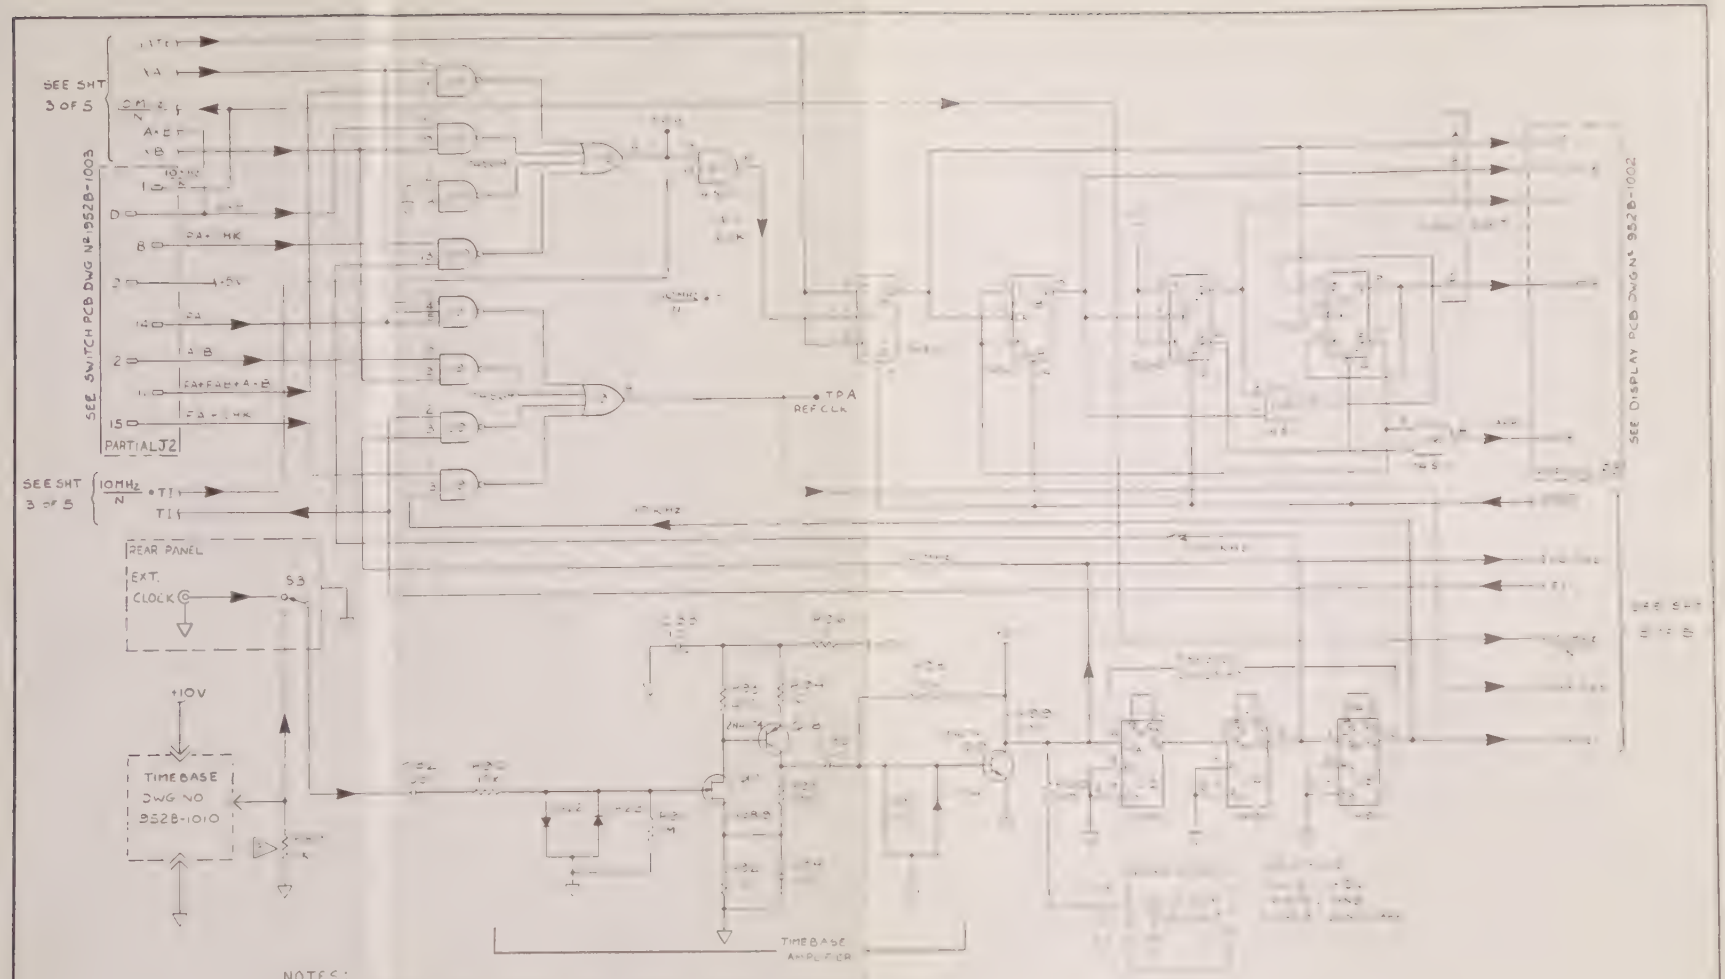


NOTES:
1. ALL RESISTORS ARE IN OHMS, 1/4 W; 5% C.C, UNLESS OTHERWISE STATED
2. ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE STATED
3. ADD 1K RESISTOR 1/4 W 5% C.C. TO REDUCE OUTPUT LEVEL OF TP10 (ONLY

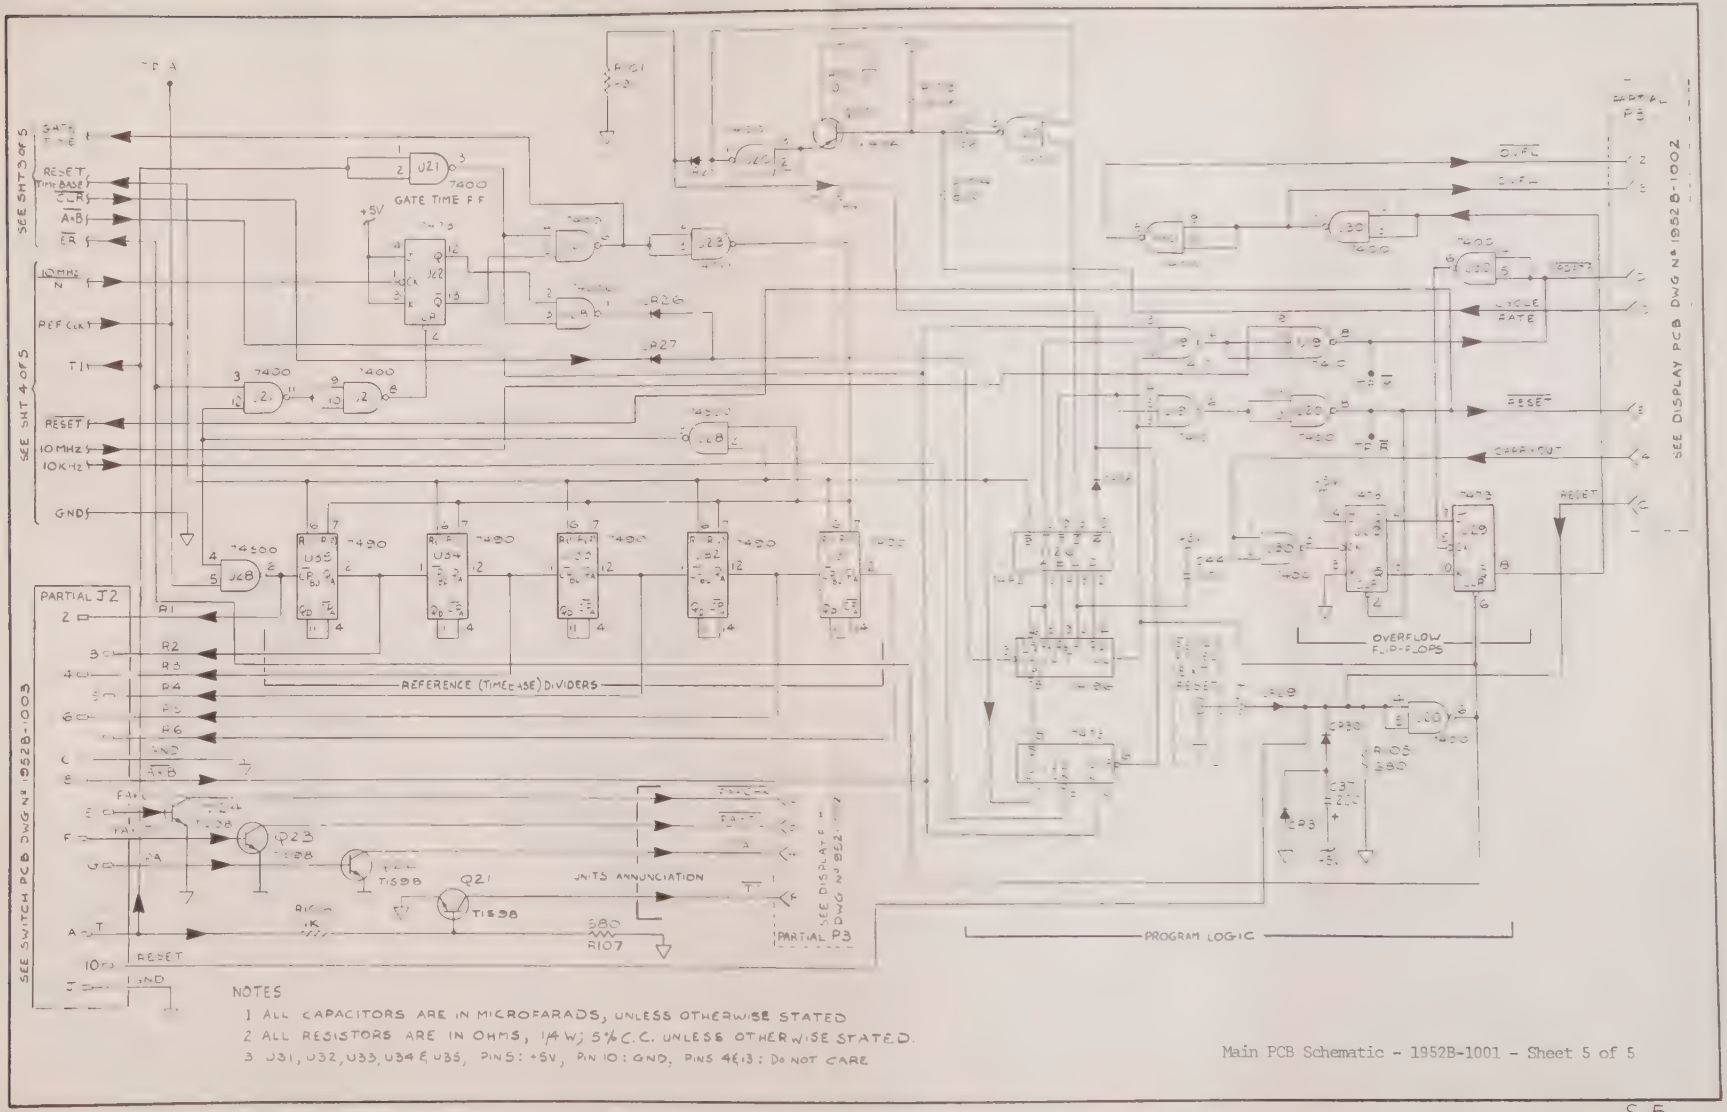
SEE SHT 3 OF 5
SEE SHT 4 OF 5
SEE SWITCH PCB DWG Nº 1952B-1003
SEE DISPLAY PCB DWG Nº 1952B-1002
SEE DISPLAY PCB DWG Nº 1952
PARTIAL J2
PARTIAL P3
GATE TIME F F
REFERENCE (TIMEBASE) DIVIDERS
OVERFLOW FLIP-FLOPS
PROGRAM LOGIC
UNITS ANNUNCIATION
CYCLE RATE
RESET
NOTES
1 ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE STATED
2 ALL RESISTORS ARE IN OHMS, 1/4 W; 5% C.C. UNLESS OTHERWISE STATED.
3 U31, U32, U33, U34 & U35, PIN 5: +5V, PIN 10: GND, PINS 4&13: DO NOT CARE

Main PCB Schematic - 1952B-1001 - Sheet 5 of 5

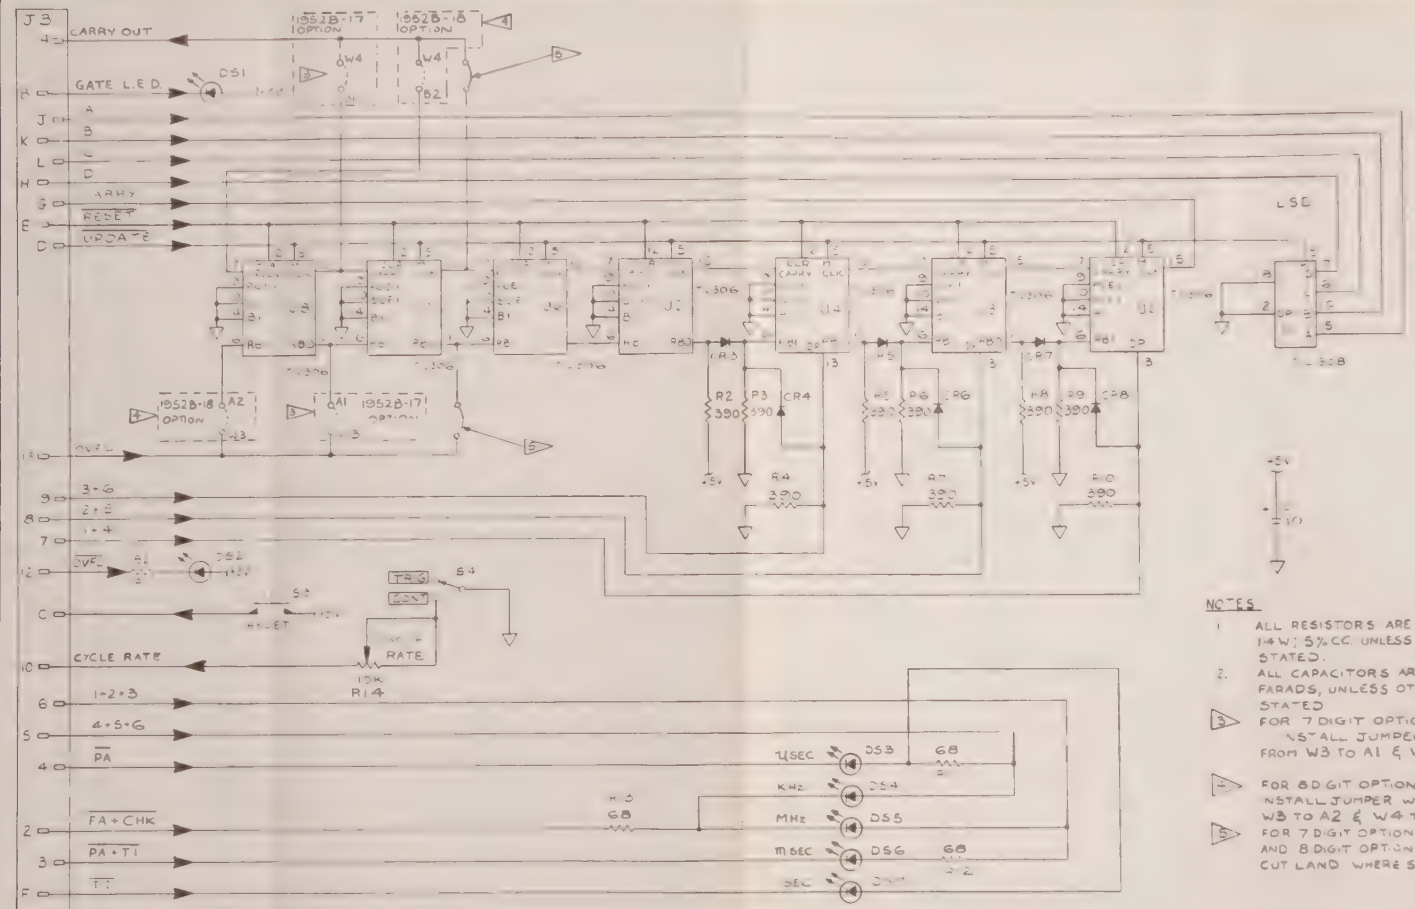


NOTES

1. ALL RESISTORS ARE IN OHMS, 1/4W; 5% CC. UNLESS OTHERWISE STATED.
2. ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE STATED
3. FOR 7 DIGIT OPTION INSTALL JUMPER WIRES FROM W3 TO A1 & W4 TO B1
4. FOR 8 DIGIT OPTION INSTALL JUMPER WIRES FROM W3 TO A2 & W4 TO B2.
5. FOR 7 DIGIT OPTION AND 8 DIGIT OPTION CUT LAND WHERE SHOWN. (2 PLS)

Display PCB Schematic - 1952B-1002 - Sheet 1 of 1

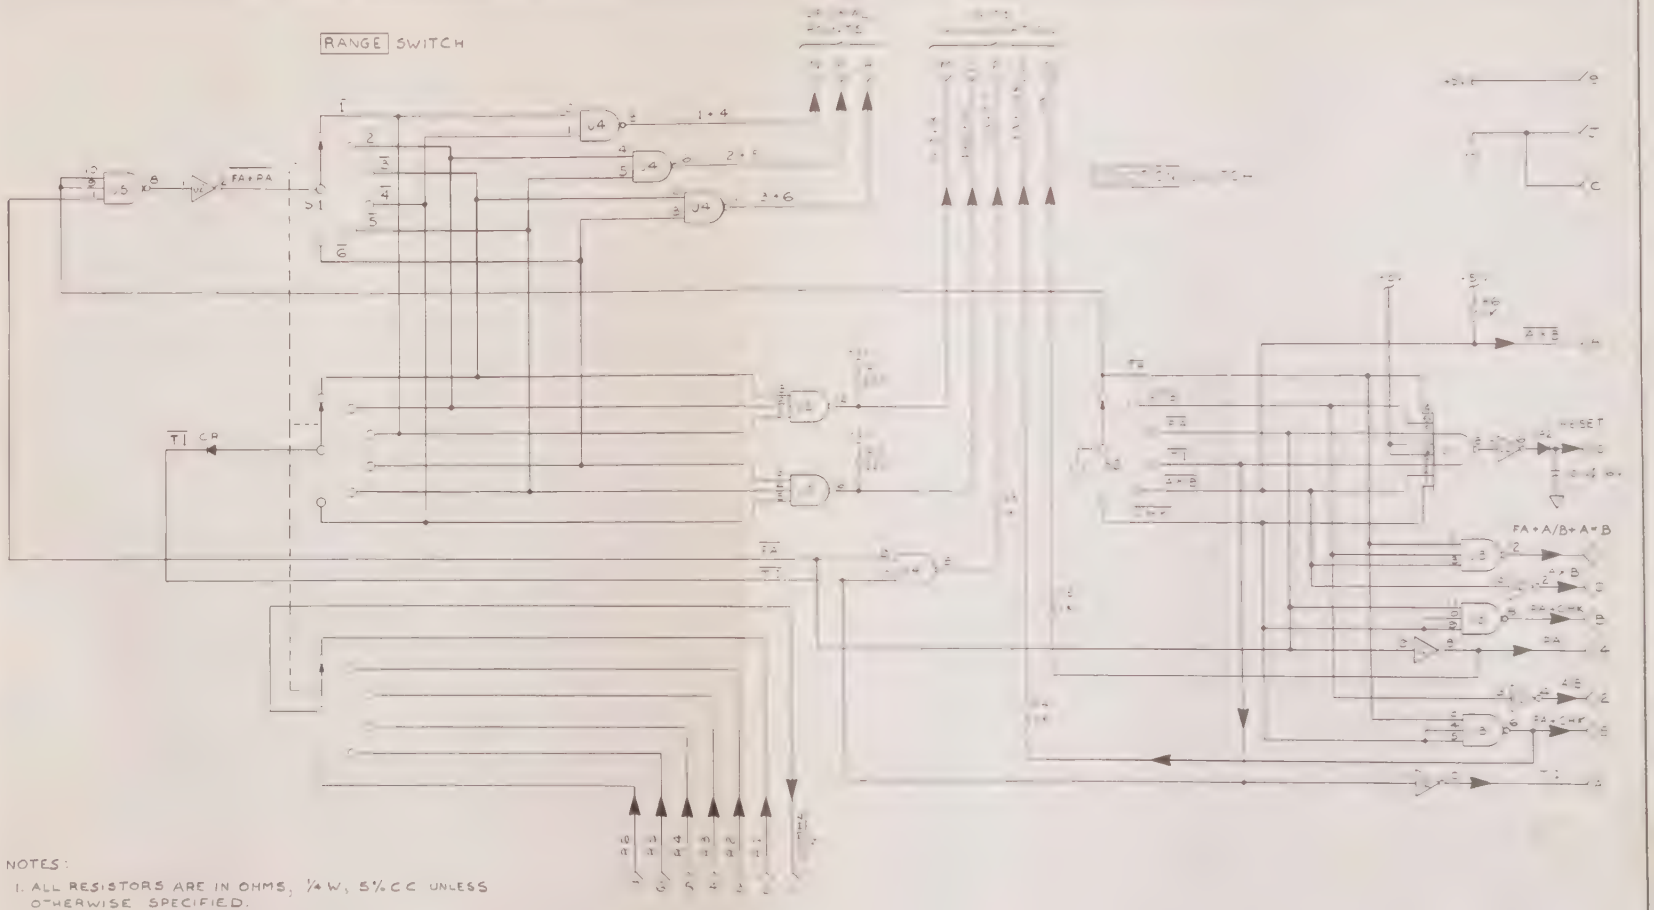


PCB Schematic - 1952B-1003 - Sheet 1 of 1

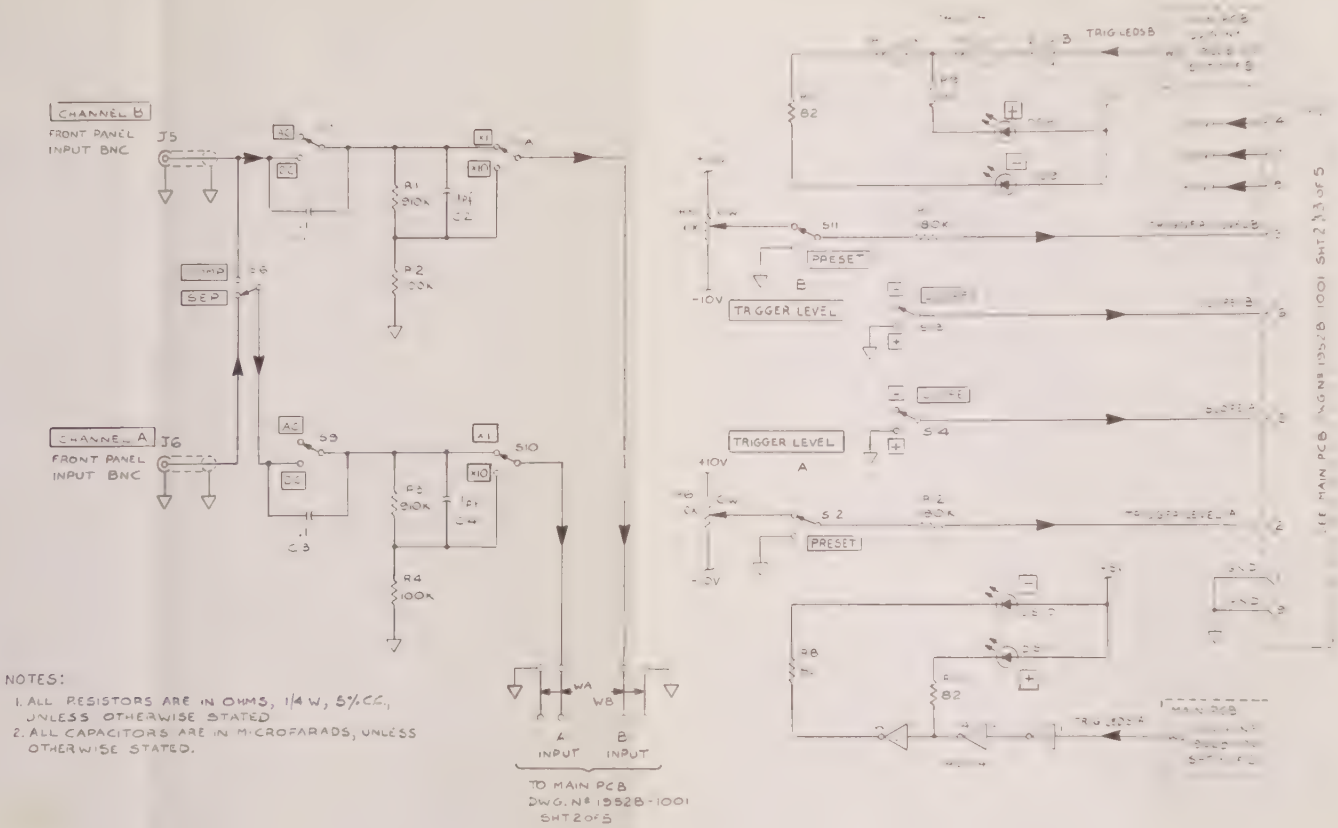


NOTES:

1. ALL RESISTORS ARE IN OHMS, 1/4 W, 5% CC., UNLESS OTHERWISE STATED
2. ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE STATED.

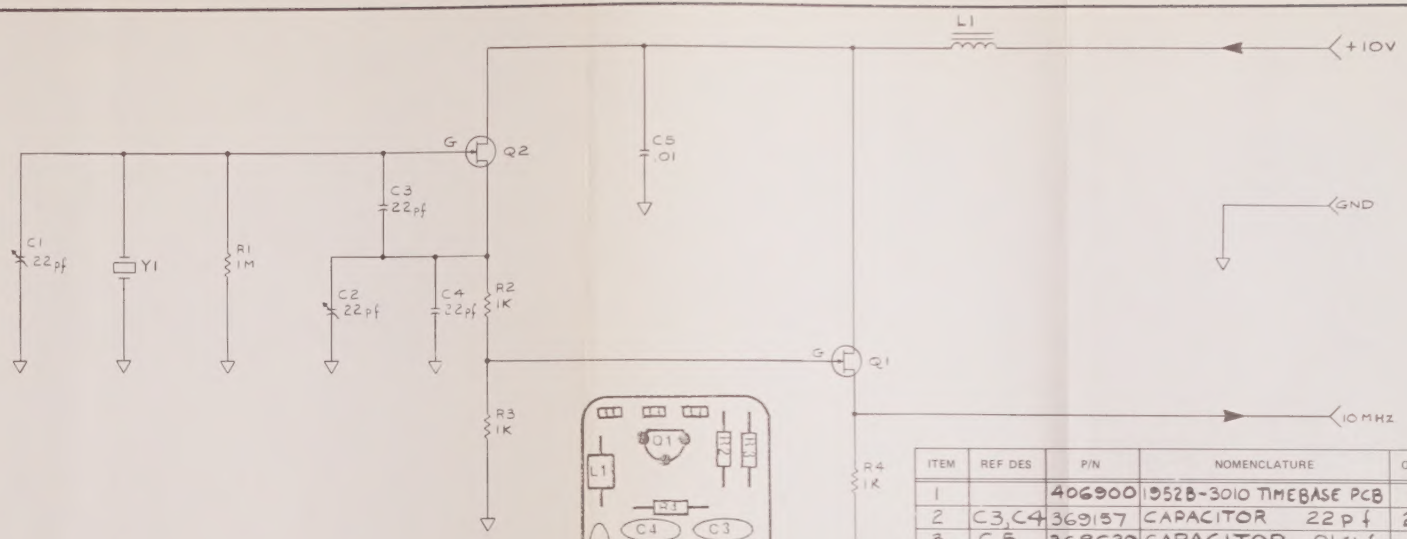


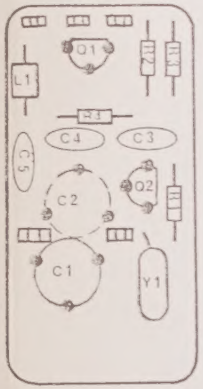


| ITEM | REF DES | P/N | NOMENCLATURE | QTY |
|---|---|---|---|---|
| 1 | | 406900 | 1952B-3010 TIMEBASE PCB | 1 |
| 2 | C3,C4 | 369157 | CAPACITOR 22 pf | 2 |
| 3 | C5 | 368639 | CAPACITOR .01 uf | 1 |
| 4 | C1,C2 | 369207 | TRIMMER CAP. 22 pf | 2 |
| 5 | L1 | 320911 | INDUCTOR | 1 |
| 6 | Y1 | 385732 | CRYSTAL, SMALL 10MHz | 1 |
| 7 | R1 | 182204 | RESISTOR 1/4W, 5% CC. 1M | 1 |
| 8 | R2,R3,R4 | 153916 | RESISTOR 1/8 W, 5% CC. 1K | 3 |
| 9 | Q1,Q2 | 386094 | TRANSISTOR FET-N SX3819 | 2 |
| 10 | | 376574 | AMP PIN | 5 |

NOTES:
1. ALL RESISTORS ARE IN OHMS, 1/8 W, 5% CC UNLESS OTHERWISE SPECIFIED.
2. ALL CAPACITORS ARE IN MICROFARADS, UNLESS OTHERWISE SPECIFIED

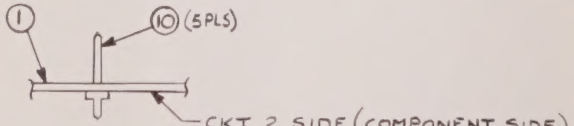


DETAIL 1

NOTES:
1. REFERENCE SCHEMATIC 1952B-1010
2. ASSEMBLE PER S.O.P. 111.8
3. TRIM LEADS .065 MAX. LONG PER S.O.P 89.19
4. CLEAN ASSEMBLY PER S.O.P 89.4, HANDLE CLEANED ASSY BY EDGES ONLY.
5. INSTALL CKT 1 SIDE.
6. SEE DETAIL 1.
7. ITEM 7 PREP DIFFERENTLY, E.G.




Timebase PCB Schematic - 1952B-1010 - Sheet 1 of 1